



M-Print® PRO

User Manual

Manual Version 2013-02

Content

Introduction	1
About M-Print® PRO.....	1
About this manual	1
Layout and format	2
Definitions	2
Installation note	2
 General operation	 3
Introduction	3
Starting / exiting the program.....	3
User interface.....	4
Supported file types	5
Commonly used functions.....	6
Editing elements	6
Editing layers.....	25
Predefined text sequence	29
Consecutive numbering	31
Incrementing and decrementing	38
Color coding.....	40
Synchronizing content.....	41
Orders, Order Wizard.....	42
Filter functions.....	43
Licensing	45
Multiple insert.....	46
Inserting a line break.....	46
Excel editing.....	47
Multi-level terminals	48
Scales	49
Endless strips.....	56
Document protection.....	62
 User interface	 65
Introduction	65
Menu bar	67
File menu	67
Edit menu	69
View menu	71
Insert menu	74
Shape menu.....	76
Format menu.....	77
Layout menu	78
Tools menu	78
Window menu	79

Help menu	79
Toolbars	80
Standard.....	80
Layout	81
Format Text.....	82
Format Element	84
Elements	85
Docking Bars View	87
Project Explorer.....	88
Shortcut menu.....	89
Properties window.....	91
Marker properties	92
Showing properties	93
Adjusting properties	94
Selecting elements.....	103
Workspace	104
Shortcut menu in the workspace	104
Layers	105
Layers window	106
Layer properties	107
Data Grid window.....	108
Defining the width of the data grid	108
Shortcut menu of the data grid.....	109
Row height and column width of the data grid.....	109
Info page	110

Getting started 113

Introduction	113
Step 1: Starting the program.....	113
Step 2: Selecting the marker type.....	113
Step 3: Captioning the marker	114
Step 4: Saving the file	114
Step 5: Printing the marker type	115
Step 6: Closing the file	115

Managing projects 117

Project structure	117
Changing the project name.....	119
Adding a marker type to a project.....	120
Adding a subproject	121
Adding a marker type to the subproject	122
Removing a marker type.....	123
Removing a subproject	124
Closing the project	125

Product catalog 127

Introduction	127
Opening the Product Catalog window	127
Creating a new product category	128
Adding a product	128
Removing a product.....	130
Removing all products from a category	130
Removing a product category	130
Finding a product	131

Renaming a product.....	132
Templates	132
Resetting the product catalog	132
Updating the product catalog	134

Options dialog 137

Introduction	137
Environment.....	138
General	138
View	141
Program startup	142
File extensions	142
Directory	143
Administration	144
Administration menu	145
Update.....	146
Color coding.....	146
Fields.....	147
Basic settings.....	147
Element defaults	148
Font	148
Elements	149
Plotter	150
General	150
MultiCard fixture	151
SF 4-6 fixture.....	151
Pen priming	152
PrintJet ADVANCED.....	153
General	153
Service tools.....	155
Administration	156
PrintJet PRO	157
General	157
Cleaning.....	157
Current configuration	158
PrintJet II	159
Cleaning.....	159
THM Plus S.....	159
General	159

Opening other file types 161

Opening other file types	161
--------------------------------	-----

Command line call 163

Introduction	163
Call parameters for exe.....	163
Opening or printing a file	163
Importing or printing a file	163
Call parameters for converters.....	164
Parameters for the QLS converter	164
Parameters for the TNV converter	165

Importing files 167

Introduction	167
Manual import	167
Starting the import.....	167
Step 1: Start page	168
Step 2: Filter and import type.....	168
Step 3: Selecting the project and variant	170
Steps 4/5: Selecting the data format and field delimiter	171
Step 6: Options	174
Step 7: Field mappings	176
Step 8: Saving and finishing	180
Automated import.....	180
Batch import.....	182
Creating/adding a batch.....	182
Changing a batch	183
Converter	183
QLS converter	183
TNV converter	184
Settings in the Import Wizard.....	187

Printing 189

Introduction	189
Calling up the print dialog	189
Mapping a printer to a marker type	191
Printer correction.....	191
Setting material-dependent slip	194
Adjusting the printer to the marker type	195
Setting the printer to a print medium.....	196
Adjusting the printer offset	196
Setting up print jobs	204
Example:	204
Fast printing	206
Printing directly.....	206
PrintJet ADVANCED Status Monitor	206
Settings for the PrintJet ADVANCED Status Monitor	207
Print jobs for the PrintJet ADVANCED	208
Information about the PrintJet ADVANCED.....	209
PrintJet ADVANCED Explorer	211
Adding a PrintJet Advanced printer	212
Testing a PrintJet Advanced printer.....	213
Properties of a PrintJet ADVANCED printer	213

Activating the plotter 215

Introduction	215
Plot mode.....	215
Startup options for plot mode.....	215
Printing/plotting	216
Selecting the pen and inlay.....	216
Changing the marker type.....	218
Adjusting the pen priming position	219
Mapping a plotter to a marker type	220
Adjusting the marker type to the plotter	221
Adjusting mapped printers	223
Symbol Explorer/Plotter Symbol Editor.....	224
Editing/creating plotter symbols	225

Calibration dialog	225
MultiCard fixture	225
SF4-6 fixture.....	225

Network version 227

Introduction	227
Setup.....	229
Sharing folders	237
Tasks to be done on the clients	239
Setting up client computers.....	239
Transferring settings to clients	240

Introduction

About M-Print® PRO

The program is used to caption and print labeling materials (MultiCard mats, inserts and labels).

Printable materials are:

- MultiCard mats
- Sleeve inserts on pages
- Labels on pages
- Endless labels on rolls
- Shrink tubings
- MetalliCards

The program has to be installed on a local computer. No server version is available.

About this manual

The manual assumes that you have practical experience of the Microsoft Windows operating system used by the software.



If you are not familiar with the basics of Windows, please refer to the Windows user manual.


Layout and format

This user manual applies the following conventions:

- Bold** Important elements in the program like buttons, menu items, toolbars, names, etc. are shown in bold.
- " "
- > This character separates two successive menu items (e.g. **View > Zoom**)
- This symbol means that the actions which follow must be carried out in the specified order.

Symbols used

 Indicates that this is essential information about M-Print® PRO.

 Indicates that this is useful additional information.

Definitions

This section explains the special terms that are used in the M-Print® PRO software.


Marker

A marker is used to identify an electrical or electronic element (terminal, conductor, system, device, etc.) and also to caption an asset.

Marker type

Marker of a specific type, e.g. MultiCard DEK 5/3,5.

Installation note

 In order to install the program you need administrator rights on the computer involved.

General operation

Introduction

This chapter explains the various ways you can start and exit the program.
You will also find general information about the program structure and the layout of the user interface.

Starting / exiting the program

Starting the program



Double-click on the icon on your computer desktop.

Exiting M-Print® PRO

Select **File > Exit on the menu bar**.


If a project is still open, a dialog box appears where you can save the project.

User interface

The user interface is where you edit the markers.

It is displayed automatically when you start the program. The user interface contains everything you need for editing a marker.

The user interface can consist of different elements, depending on the configuration.

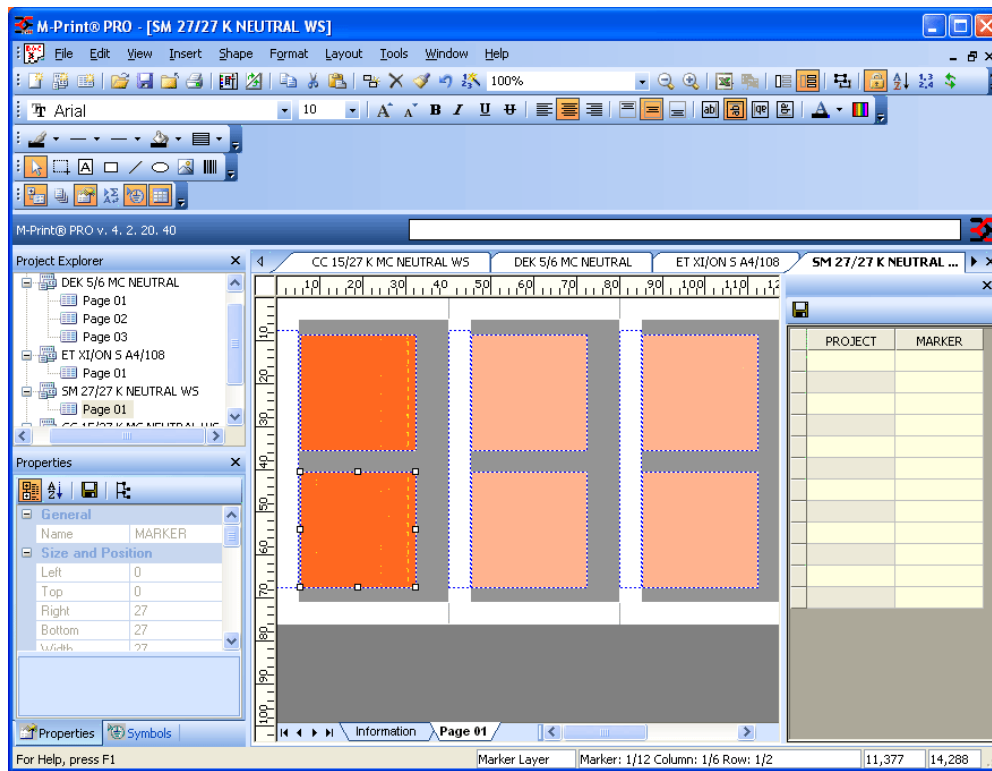

You will find more information in chapter "User interface".

Supported file types

The following file types are supported when files are opened:

- M-Print® PRO File (*.mpc)
- M-Print® PRO Order File (*.mpo)
- M-Print® PRO Template (*.mpt)
- M-Print Document (*.abp, *.gdc)
- M-Label Document (*.mld)
- M-Comm Document (*.tmf)
- RailDesigner Export File (*.rde)
- TXX/TXY Files (*.txx; *.txy)
- Microsoft® Excel® Worksheet (*.xls)
- XMT File (*.xmt, *.txt)

Commonly used functions

This section describes the commonly used functions by way of example.

Editing elements

You can create elements by selecting "Insert" from the menu bar or via the "Elements" toolbar (see chapter "Toolbars").

Before you can edit one or more elements, you first have to select them. (See chapter "Selecting elements").

See also chapter "Editing options in the Properties window".

When inserting elements or subsequently changing their size, it is possible to retain or change the symmetry of the elements (see chapter "Symmetry of elements").

Inserting a text field



Create new text field

Click on this toolbar icon or select **Insert > Text Field on the menu bar**.

Move the mouse to where you want to enter the text.



Create new rounded text field

Same functions as a normal text field. Select **Insert > Rounded Text Field**.

Use the "Anchor angle" property to determine the start angle of the text.




If the mouse pointer looks like this, you can create a text field.

Press and hold down the left mouse button. Drag the mouse to create a frame and release the mouse button. An editing field opens where you can enter text.



You can only enter text in text fields:

if the mouse pointer looks like this, you cannot enter text.



If a text field shows a red triangle when text has been inserted, the text does not fit into the field. Not all of the text is displayed or printed. In this case you must shorten the text or reduce the font size (see chapter "Format menu").

Inserting a shape



Create rectangle / square

Click on this icon or select **Insert > Rectangle** on the menu bar.

Hold down the left mouse button and drag the mouse to create a rectangle.

Use the "Rounding X" or "Rounding Y" property to turn a normal rectangle into a rounded rectangle.



Create rounded rectangle / rounded square

Click on this icon or select **Insert > Rounded Rectangle** on the menu bar.

Hold down the left mouse button and drag the mouse to create a rounded rectangle.

Rounded rectangles only differ from normal rectangles due to the set "Rounding X" or "Rounding Y" property. If these values are set to 0, a normal rectangle is displayed.



Draw line

Click on this toolbar icon or select **Insert > Line** on the menu bar.

Hold down the left mouse button as you draw the line.



Draw circle / ellipse

Click on this icon or select **Insert > Ellipse** on the menu bar.

Hold down the left mouse button and drag the mouse to create an ellipse.



You can set the exact size and position in the "Properties" window (see section "Properties window").

Inserting an image

The program supports the image formats BMP, EMF, GIF, ICO, JPG, PNG, WMF and TIFF.



Insert image

Click on this icon select **Insert > Image** or on the menu bar.

Hold down the left mouse button and drag the mouse to create a frame. A selection dialog appears where you can select the image file and open it by clicking on the **Open** button. The selected image is inserted.

In the "Properties" window you can specify whether you want to keep the image in its original size or resize it to fit the frame.

Images are not embedded in the field. The field only contains a link to the file. The path is displayed in the "Properties" window (see section "Properties window").

Inserting a barcode

The program supports the following barcode types:

- Code 39
- Code 128
- Code 2/5 Industrial
- Code 2/5 Interleaved
- EAN13
- EAN8
- EAN128
- UPC-A
- UPC-E
- QR-Code
- DataMatrix



Inserting a barcode

Or select **Insert > Barcode** on the menu bar.

A drop-down field shows the barcodes that can be selected.

Drag the mouse to create an area and release the mouse button. The selected barcode is inserted.

In the "Properties" window you can enter the numeric or alphanumeric code (see section "Properties window").




An internal checksum (e.g. code 128) is calculated for certain barcodes. This checksum must neither be entered manually nor imported with the barcode value.

Inserting special characters

You can use the character map to select a font and see all characters and special characters that are available with that font.

To open the character map, select **View > Character Map > Font** on the menu bar.

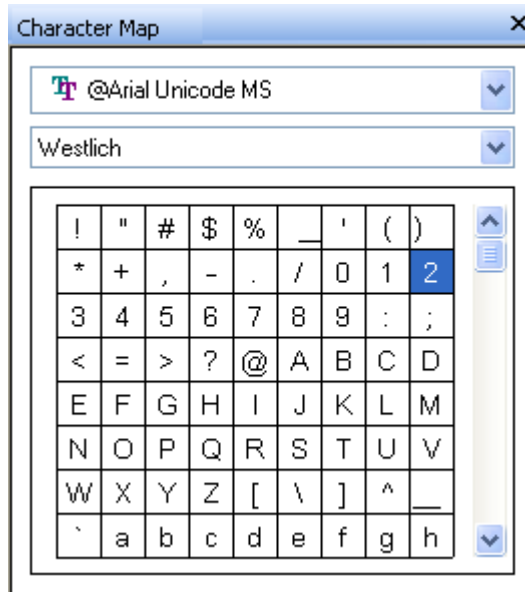

- Click on the upper arrow to select the font, and on the second arrow to select the language.
- Position the cursor where you want the character to appear.
- Double-click on the character you want to insert, and it appears in the selected text field.


You can also use the shortcut menu to copy a character from this window:

- Select the character you want to copy, press the right mouse button and select **Copy Character**.
- Position the cursor where you want the character to appear (inline editor), press the right mouse button and select **Insert** on the shortcut menu.

Inserting symbols

You can select and insert symbols using the Symbol Explorer.

On the menu bar, select **View > Symbols** to open the Symbol Explorer.

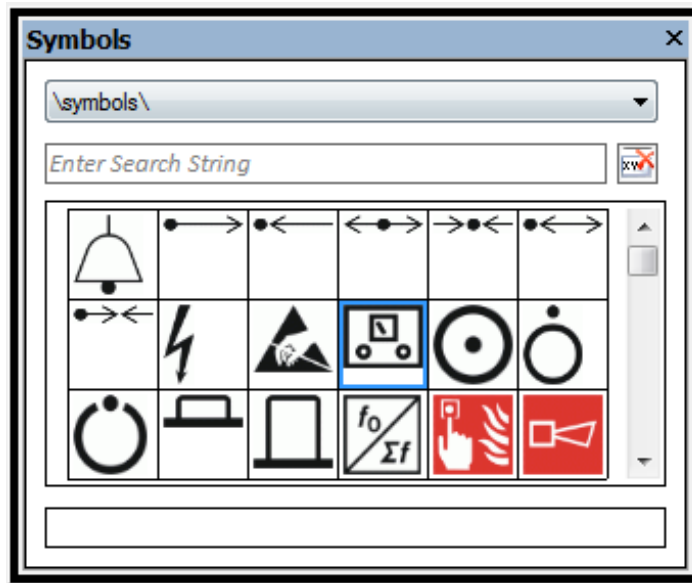

Insert symbol

- Click on the symbol you want to insert.
- Move the mouse to the field you want to contain the symbol.
- Hold down the left mouse button and drag the mouse to create a rectangle. The symbol is inserted in the field.
- You can resize the symbol by clicking on it once and dragging the corners to make the rectangle larger or smaller.

Alternatively:

- Select the field in which you want to insert the symbol.
- Double-click on the symbol that you want to insert.



You can adjust the appearance of the symbol via the "Size" property (see section "Behavior" in chapter "Adjusting properties").

Symbol directory


The drop-down field is preset to the default directory for symbols. For changes to the path, see chapter "Options dialog", section "Directory".

Searching/filtering the symbol directory

You can enter a string to search for or filter symbol files.

The following options are available:

Keyword(s)	Result
	If the search field remains empty, the entire content of the selected directory is displayed.
Symbol00?	A question mark is the wildcard for one character. The program will find, for example, "Symbol001.bmp" and "Symbol002.bmp".
Symbol*	An asterisk is the wildcard for any number of characters. The program will find, for example "Symbol010.bmp" and "Symbol020.bmp".

To reset the search field, click on .

Inserting a scale

Straight or rounded scales can be inserted.



Create new scale

Click on these icons on the toolbar or select **Insert > Scale** or **Rounded Scale** on the menu bar.

Drag the mouse to create an area and release the mouse button.

A dialog opens in order to set the key data of the scale.

- Select the type of scale and set the values, intervals and captions.
- Scale captioning depends solely on the start and end value and the caption interval.

Example 1:

If start value = 0, end value = 8 and caption interval = 2, the following sequence is generated: 0, 2, 4, 6, 8

Example 2:

If start value = 1, end value = 100 and caption interval = 20, the following sequence is generated: 1, 21, 41, 61, 81

In this case, the end value 100 is not shown.

- The intervals of the tick marks (major / minor interval) always relate to the value range.

Example:

Value range (start / end value) from 0 to 50 and major interval = 10.

6 major tick marks are shown (0, 10, 20, 30, 40, 50).

If caption interval = 10 is additionally selected, each major tick mark is also captioned.

Settings dialog

Rounded Scale Parameters

Scale Type

☒ Linear Scale

☐ Logarithmic Scale Base:

☐ Individual Scale

Scale Definition

Start Value: Start Angle:

End Value: End Angle:

Major Interval:

Minor Interval:

Captions

Interval:

Orientation: ☒ Horizontal ☐ Tangential

☐ Rotate Captions by 180°

Drawing Parameters

Scale Radius: mm

Scale Height: mm

Fontsize: Points

Scale type

Appearance of the grid dimension. The following can be selected:

- Linear: The pattern of the value range is linear.
- Logarithmic: The pattern of the value range is square, i.e. a logarithmic scale is shown.
- Adapted: The pattern of the value range is defined by reference points. The pattern between reference points is linear (see chapter "Reference points").

Start value

Caption at the start of the scale

End value

Caption at the end of the scale

Major interval

Interval between the major tick marks (measured at the value range)

Minor interval

Interval between the minor tick marks (measured at the value range)

Start angle (only rounded scale)

Angle at which the rounded scale starts (see also chapter "Rounded scale").

End angle (only rounded scale)

Angle at which the rounded scale ends (see also chapter "Rounded scale").

Interval

Caption interval to the next caption in each case (from the start value)

Example: If start value = 0, end value = 8 and caption interval = 2, the following sequence is generated: 0, 2, 4, 6, 8

Alignment (only rounded scale)

Appearance of the caption. The following can be selected:

Horizontal: The caption is shown horizontally

Tangential: The caption is shown tangentially (in the direction of the circle).

The caption can be rotated by 180° for both alignments.

Scale length or Scale radius

For a straight scale, the length of the inserted scale element.

For a rounded scale, the inner radius of the scale element.

The value is preset when dragging the element with the mouse.

Scale height

The scale height corresponds to the height of the major tick marks.

The value is preset when dragging the element with the mouse.

The minor tick marks are always half as long as the major tick marks.

Font size

The font size of the caption.

The value is preset when dragging the element with the mouse.




You can set the exact size, position and caption of the scale in the "Properties" window later (see section "Properties window").



For further information and examples, please refer to chapter "Scales".

Appearance information

If a scale shows red triangles, the chosen values do not fit into the dimensions of the scale element. In this case, use the mouse to enlarge the element in the displayed directions.

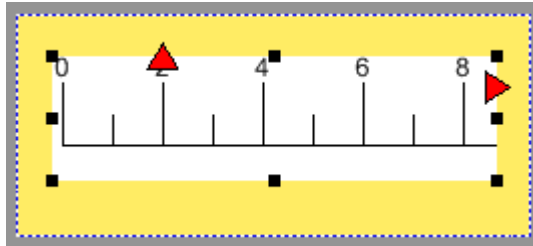

Snapping elements to the grid

To specify whether you want the elements to snap to the gridlines or not, select **View > Grid > Snap to Grid**.

The grid must be visible (Menu **View > Grid > Show**).

Selecting elements



Select element

After clicking on this icon, you can click on an element to select it.



Select multiple elements

If the elements you want to select are next to each other, you can select them all in a single action by dragging a frame around them.

Click on this icon to activate the frame to select elements. Press and hold down the left mouse button. Drag the mouse to create a frame around the elements you want to select.

Moving elements

Elements on the project layer or marker layer can only be moved **within** the defined project area or marker area.

- Select the element you want to move by left-clicking on it. When you move the mouse pointer over the element, it changes into the following shape, which means you can move the element:




Hold down the mouse button and move the element to its new position.

Another way of moving an element is to define settings in the "Properties" window (see section "Properties window", "Size and position" category. You can enter exact values here.

Rotating elements

- Click on the element (text, shape, image, barcode) you want to rotate.
- Select **Shape > Rotate....**

The following window appears:

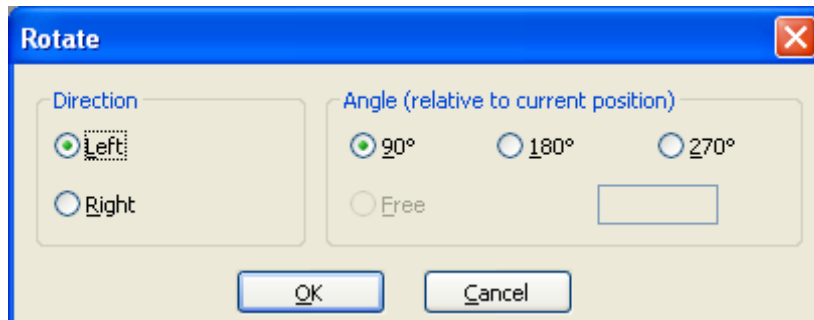

Specify the details of the rotation you want, then confirm by clicking on **OK**.



Note that, if necessary, the element will adapt to the dimensions of the marker area when it is rotated.

Example:

This image shows the element before it is rotated:



... and after the rotation:




Copying and pasting elements

In the course of copying and pasting, only the document-individual properties can be transferred.


However the properties are only transferred to their full extent if the same element type is involved (e.g. text on text, image on image).

- Click on the element(s) you want to copy.
- Select **Edit > Copy**.
- Click on the element that you want to paste into.
- Select **Edit > Paste** to paste the content OR **Edit > Paste Elements** to paste the element.

 Not all elements can be pasted into other elements.

Cutting and pasting elements

- Select the element you want to cut.
- Select **Edit > Cut**.
- Click on the element that you want to paste into.
- Select **Edit > Paste** to paste the content OR **Edit > Paste Elements** to paste the element.

 Not all elements can be pasted into other elements (see chapter "Copying and pasting elements").


Duplicating elements

- Select the element you want to duplicate.
- Select **Edit > Duplicate**.
- The duplicated element is placed slightly offset on top of the original element.

Deleting elements

- Select the element you want to delete.
- Select **Edit > Delete**.
- In the **Delete** submenu, you have the following items to select from:

Field content	Only delete the content of the elements.
Entire field	Delete the entire field.
Selected markers	The entire markers with the selected elements on them are deleted without a confirmation prompt.
This page	The currently visible page is deleted.
Pages...	A dialog opens to delete several pages.

-  If a menu item is not available (grayed out), the functionality for the selected situation cannot be used.

Locking elements

Text fields, image fields, barcodes and shapes can all be locked.

However, only in locked text fields is it still possible to change the content and formatting.


Among other things, the following properties are locked:

- Size and position
 - Border and fill
 - Field properties
 - Orientation and tab order
- Select the element you want to lock.



Click on this toolbar icon to lock the selected element.

Example of a locked element



Creating square elements

For creating square elements, see chapter "Symmetry of elements"

Symmetry of elements

Symmetry of elements can be used to either keep the dimensions (aspect ratio) of the elements or to set them to the same values (square).

Various options are available:

Inserting while holding down the Shift key (square dimensions)

If you insert the elements while holding down the Shift key, the dimensions remain square.

Exceptions:

- Line – is inserted horizontally or vertically
- Rounded text field – is always rounded
- Scale

Dragging while holding down the Shift+Alt keys (setting square dimensions)

If you drag existing elements (multiple selection possible) at their corners while holding down the shortcut Shift+Alt, the dimensions are changed quadratically.

Exceptions:

- Line – is changed horizontally or vertically
- Scale

Dragging while holding down the Shift+Ctrl keys (keeping proportions)

If existing elements (multiple selection possible) are dragged at a corner while holding down the shortcut Shift+Ctrl, the proportions of the dimensions are kept. The aspect ratio is not changed.

Exceptions:

- Line – retains its angle
- Scale

Changing the order of elements

If a number of elements are arranged on top of each other, you can use the "Layout" toolbar to change the order of the elements.

The following settings apply to the selected element in the current layer.



The element is moved one layer forward.



The element is moved one layer back.



The element is brought to the front.



The element is sent to the back.

- Select the element you want to move, then click on the relevant icon.

You can also access these functions from the menu bar by selecting **Shape** and then the required layer setting.

Resizing elements

- Click on the element you want to resize.



- Drag the corners to make the element larger or smaller.

You can specify the exact dimensions in the "Size and position" category in the "Properties" window.

See section "Properties window".

Setting the same height

- Select the elements whose height you want to change, then click on this icon.
- To adjust the height, select **Shape > Same Height** on the menu bar.

Setting the same width

- Select the elements whose width you want to change, then click on this icon.
- To adjust the height, select **Shape > Same Width** on the menu bar.

Saving an image in a file

If you want to save **all** images embedded in the program file (e.g. for transferring the file), select **File > Embed Image and Save As...** and save the file under a different name.

All images are integrated/embedded in the file.

To save images embedded in files externally again, see chapter "Transferring an image from a file")

Transferring an image from a file

Images can be integrated in the program files (see chapter "Adjusting properties – Content"). The "Type" property of the image is set to the "integrated" value.

Proceed as follows to subsequently transfer these images from the file:

- Right-click on the integrated image.
- Select **Save as Image...** in the shortcut menu that opens.
- Select the path and image name and click on **Save**.

Grouping

Several (at least two) elements of a marker can be grouped.

- Select the elements to be grouped and select **Edit -> Group**.

It is possible to compile groups in further groups.

Changes to certain properties have an effect on the whole group (e.g. line thickness, fill color). The group is selected via the first click on a group element. A further click on an element selects the element in the group, allowing its properties to be changed (e.g. its text).


When a group is ungrouped, any groups within it are preserved.

Only elements of the same field type can be grouped (see also chapter "Field").

Selected elements within a group can be deleted from the group.

Moving a group with the mouse

A group can only be moved with the mouse at its outer limits. The mouse pointer changes accordingly.

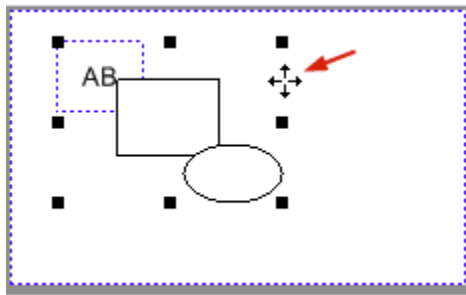

Overview of existing groups

An overview of the existing groups is displayed in the object selection. A group can also be selected via this view (see chapter "Selecting elements").

Formatting text


You can format text and set lines using the "Format Text" toolbar or the "Properties window".

Aligning text

To align text, select it and click the relevant icon in the "Format Text" toolbar.

Changing the barcode type

In the "Properties" window you can select a barcode type in the "Content" category (see also section "Content" in chapter "Properties window").

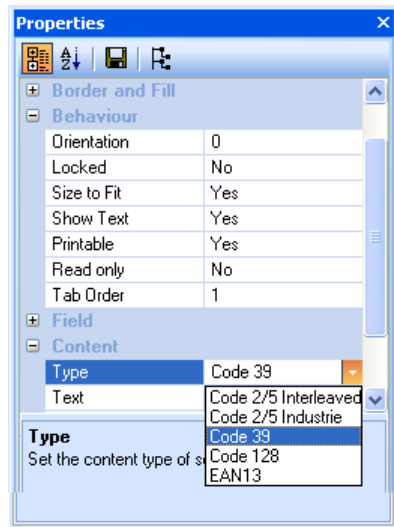


- Select the desired barcode type in the field "Type".
- Next, in the "Text preview" field, you can enter the numeric or alphanumeric code, depending on the barcode type.
- Certain barcodes have further properties which can be selected (e.g. size or ECC level for the error correction value).

Editing layers

The pages of a marker type are organized into layers.

The individual layers are edited in the "Layers" window.


- To show or hide the layers, select **View > Layers** on the menu bar.
- Double-click on the layer you want to change (e.g. "Marker layer") to open the "Layer Properties" window.

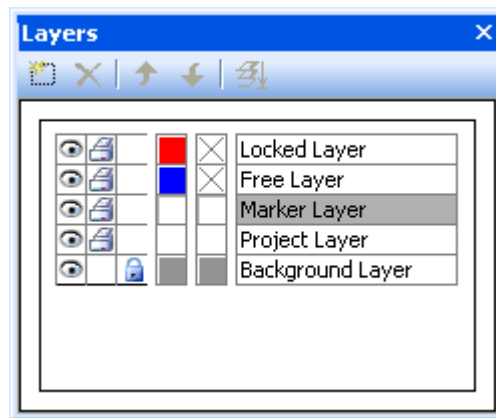

Changing the layer name

You can change the layer name via the "Layer Properties" dialog box (see chapter "Editing layers").

- Enter the new name in the "Layer name" field and confirm your input by clicking on **OK**.




The new name applies to this file.

Changing the layer color

You can change the colors of layers in the "Layer Properties" window. To open it, double-click the name of the layer you want to change (see chapter "Editing layers").

- Click on the arrow in the relevant field to change the border and fill color. You can select a color from the drop-down field.

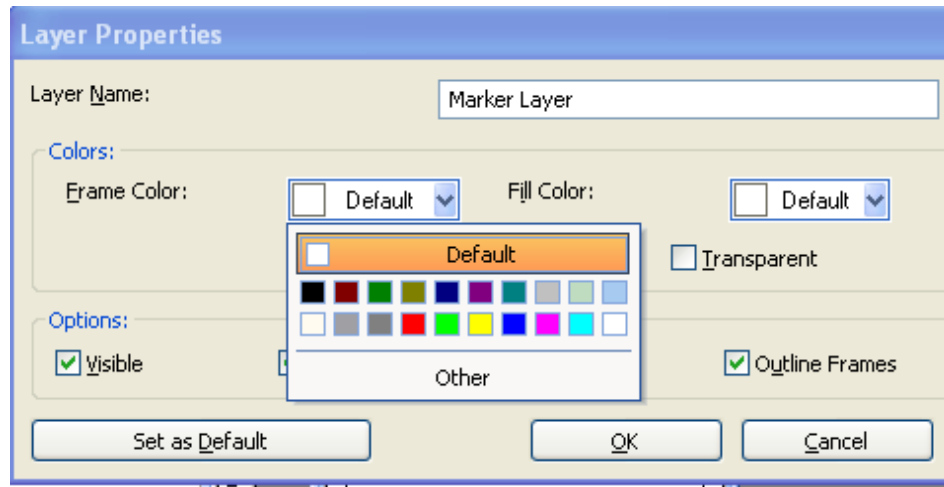

- You can click on the **Other...** button for advanced color selection options.


Here you can select a standard color or create a custom color.

Hiding a layer

- To disable a layer so that it is no longer visible, click on the eye icon:



Layers not showing this icon will not be displayed.

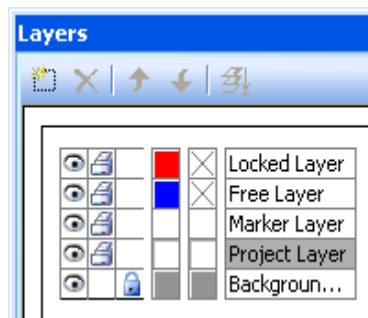


You can display the layer by clicking the box again.

Not printing a layer

- If you do not want to print a layer, click on the printer icon:



Layers not showing this icon will not be printed.

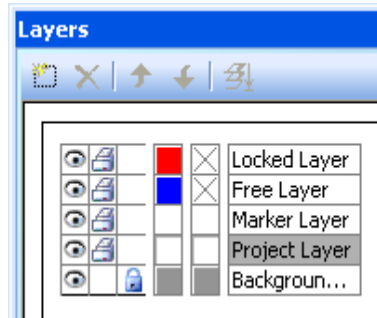

Adding a free layer

Unlike the other layers, free layers can be duplicated.

- Click on the following icon in the "Layers" window to add a new free layer.



If you click on the icon again, another free layer is added.

Removing a free layer

- In the "Layers" window, click on the free layer you want to remove. Click on this icon:



You can remove all free layers except for one, which must always be present.

Moving a free layer to another position

If you have created a number of free layers, you can move them in relation to each other, i.e. you can change the order of layers on top of each other.

The "Layers" window has the following icons:



Moves the layer up one layer.



Moves the layer down one layer.

- Select the free layer you want to move and click on the relevant button.

Reducing free layers to a single layer

Click on this icon to reduce all free layers to a single layer:



You cannot select individual layers and reduce them. It is only possible to reduce all free layers to a single layer.
Reduction to one layer cannot be undone!

Locking layers

You can lock specific layers to prevent the elements on them from being edited. Even text cannot be changed on a locked layer.

- Click on the layer you want to lock.
- In the "Layers" window, click inside the third column for the layer.

The following icon appears.



The layer is now locked and cannot be edited.


You can remove the lock by clicking on the field again.

Predefined text sequence


Defining a predefined text sequence

Follow these steps to define a text sequence:

- Open a marker type and insert the text to be saved (e.g. A 1 to A 10) into a text element.

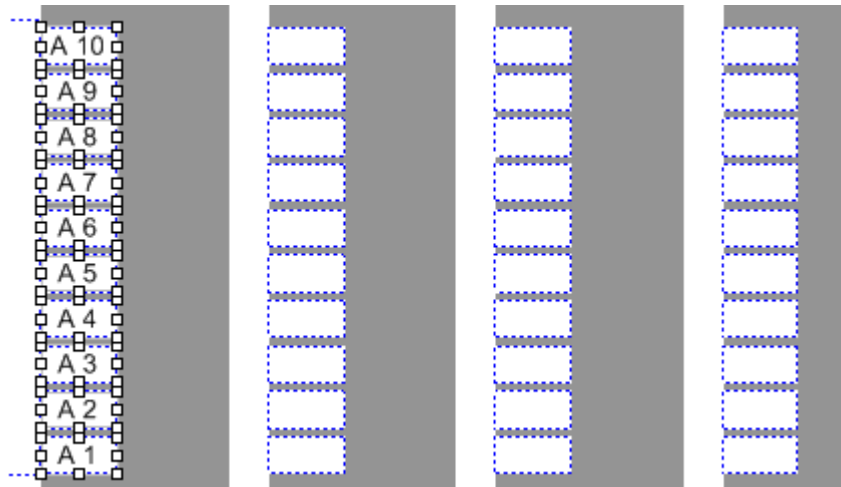

- Select the text that you want to save as a text sequence.
- Select **Tools > Predefined Text Sequence....**
- Give the text sequence a revealing name.

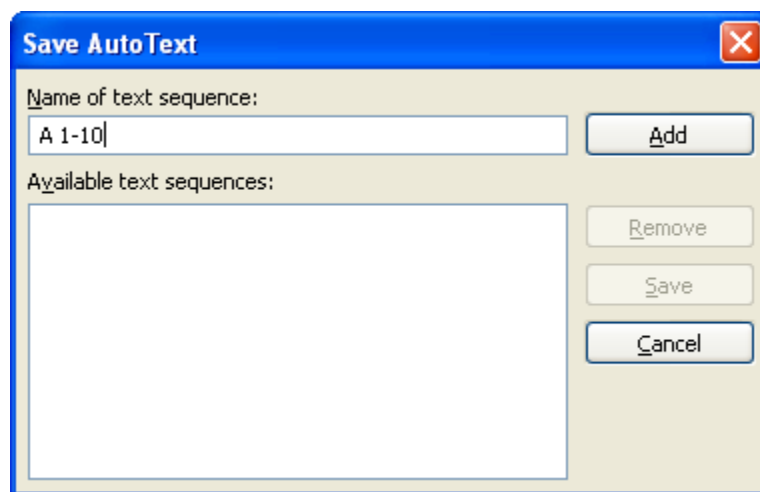


- Click on **Add** and then on **Save**.

To insert a predefined text sequence, see section "Inserting a predefined text sequence".

Inserting a predefined text sequence


Follow these steps to insert a predefined text sequence (see "Defining a predefined text sequence"):

- Open a marker type and select the element after which you want to insert the predefined text sequence.
- Open **Insert > Predefined Text Sequence....**
- Select the required sequence and the number of inserts.

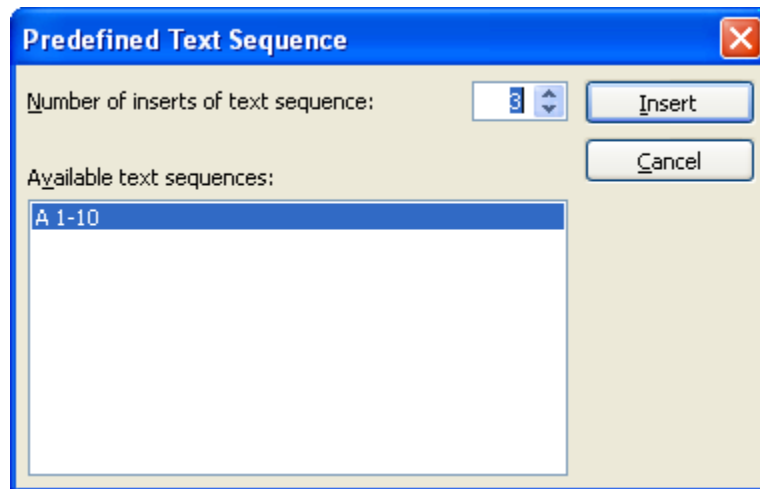

- Click on **Insert**.


Here, the predefined text sequence was inserted three times:

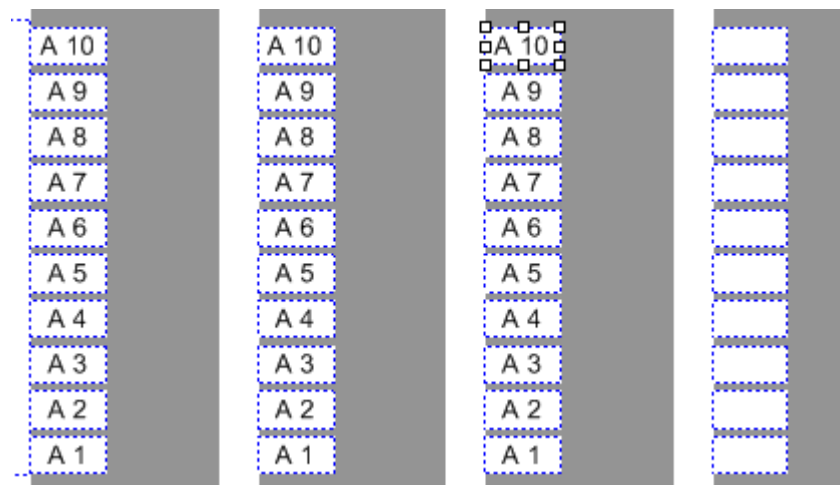

Consecutive numbering

Introduction


With the "Consecutive Numbering" function you can add consecutive numbers to marker types.

 Only document-individual fields can be captioned with the Auto Fill function (see chapter "Properties window").

- Select the field or an area where you want the caption to appear.
- Select **Insert > Consecutive Numbering....**

The window for consecutive numbering opens up.






Consecutive Numbering window

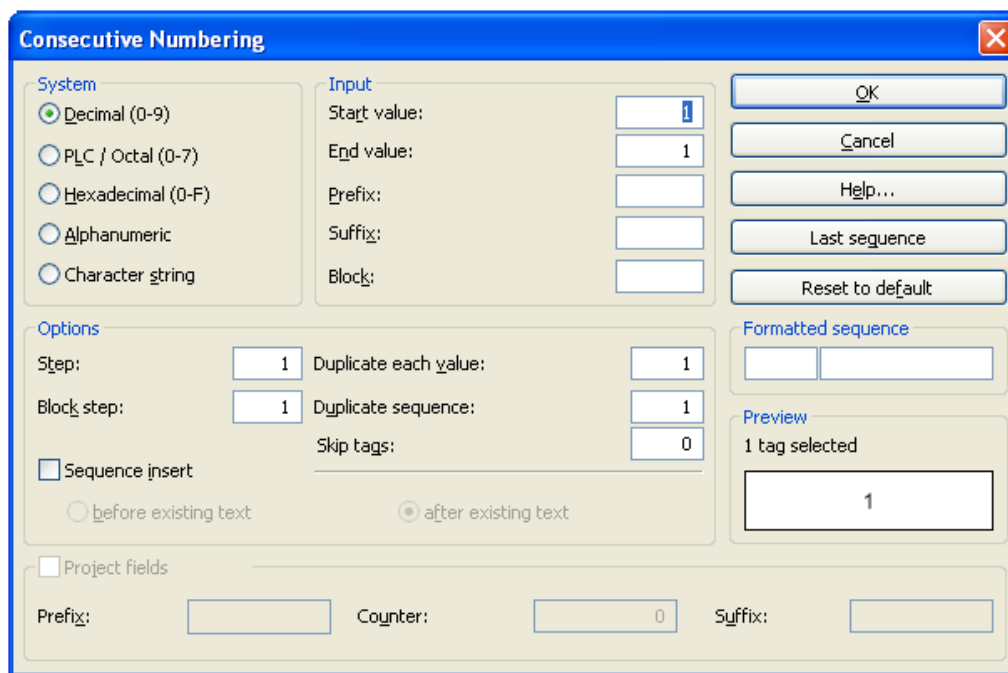

The "Consecutive Numbering" dialog box is used to configure the numbering of document fields. It features several sections: "System" with radio buttons for Decimal (0-9), PLC / Octal (0-7), Hexadecimal (0-F), Alphanumeric, and Character string; "Input" with fields for Start value, End value, Prefix, Suffix, and Block; "Options" with fields for Step, Duplicate each value, Block step, Duplicate sequence, Skip tags, and checkboxes for Sequence insert and Project fields; and a "Formatted sequence" section with a preview of the resulting tag. The "OK", "Cancel", "Help...", "Last sequence", and "Reset to default" buttons are located on the right side.

System	Input	Options	Formatted sequence
<input checked="" type="radio"/> Decimal (0-9)	Start value: 1	Step: 1	1
<input type="radio"/> PLC / Octal (0-7)	End value: 1	Duplicate each value: 1	
<input type="radio"/> Hexadecimal (0-F)	Prefix:	Block step: 1	
<input type="radio"/> Alphanumeric	Suffix:	Duplicate sequence: 1	
<input type="radio"/> Character string	Block:	Skip tags: 0	
		<input type="checkbox"/> Sequence insert	
		<input type="radio"/> before existing text	
		<input checked="" type="radio"/> after existing text	
		<input type="checkbox"/> Project fields	
		Prefix: Counter: 0 Suffix:	

The window has the following buttons:

	Click on the OK button to confirm your inputs.
	Click on the Cancel button to cancel the process.
	Click on the Help button to load the Help.
	Click on the Last Sequence button to load the last sequence used.
	Click on the Reset to Default button to restore the predefined default values.

In the "System" group, select the notation you want to use for numbering.

Decimal

This uses the decimal system, i.e. the ten digits from 0 to 9, then 10, 11, 12, etc.

PLC / Octal

Choose this option to set a PLC-specific caption format. The PLC caption format usually includes two counters, separated by a period (e.g. 4.0).

Counter Y uses the octal system from 0 to 7, and block counter X uses the start value in the "Block" field in conjunction with the block step. The "Prefix" field usually contains a letter (e.g. I for Input), and a suffix can also be defined (see example 2).

Hexadecimal

This notation is based on the hexadecimal system, which uses the characters 0 to 9, A, B, C, D, E, F.

Example: 0, 1, ...,9, A, B, C, D, E, F, 10, 11, ...,18, 19, 1A, 1B, 1C, 1D, 1E, 1F, 20, ... 29, 2A, ... 2F, 30, ... etc.

Alphanumeric

Three numbering sequences are possible with this option: a to z or A to Z or 0 to 9.

Example: b to m (only one character is allowed, not AA to ZZ for example).

Character string

The same word is written to all the text fields, e.g. "ISB". Character strings: 1234 or ABCD or 1a2Bd3.

In the "Input" group, enter the following values:

Start value and End value

Numbering can be in ascending or descending order.

The values to which the "Start value" and "End value" fields are automatically set depend on the number of fields selected.

Prefix

You can prefix one or more alphanumeric characters to the counted value. (e.g. Conductor or C or 2004-)

Suffix

You can append one or more alphanumeric characters to the counted value (e.g. left or X).

Block

This software defines a block as an additional counter inserted between the prefix and the start value.

The "Options" group is where you make the following settings:

Step

Here you define the value by which the start value will be incremented/decremented.

Examples:

If start value = 1, end value = 20 and step = 3, the following sequence of numbers is generated:
1, 4, 7, 10, 13, 16, 19

If start value = 8, end value = 2 and step = 2, the following sequence is generated: 8, 6, 4, 2

If start value = A, end value = K and step = 2, the following sequence is generated:
A, C, E, G, I, K

Block step

Here you define the value by which you want to increment the block, e.g. block = 0 and block step = 2. Example: 0, 2, 4, 6....

Duplicating each value

Here you specify how many times you want to duplicate each value.

If you enter the value 2 in the field, the following sequence is generated for numbering from 1 to 5: 1, 1, 2, 2, 3, 3, 4, 4, 5, 5.


Duplicating a sequence

Here you specify how many times the sequence (the value between start and end) will be needed.

Skip markers

Here you specify the number of captioned fields you want to skip.

Example: Start value = 1, end value = 5, skip = 3

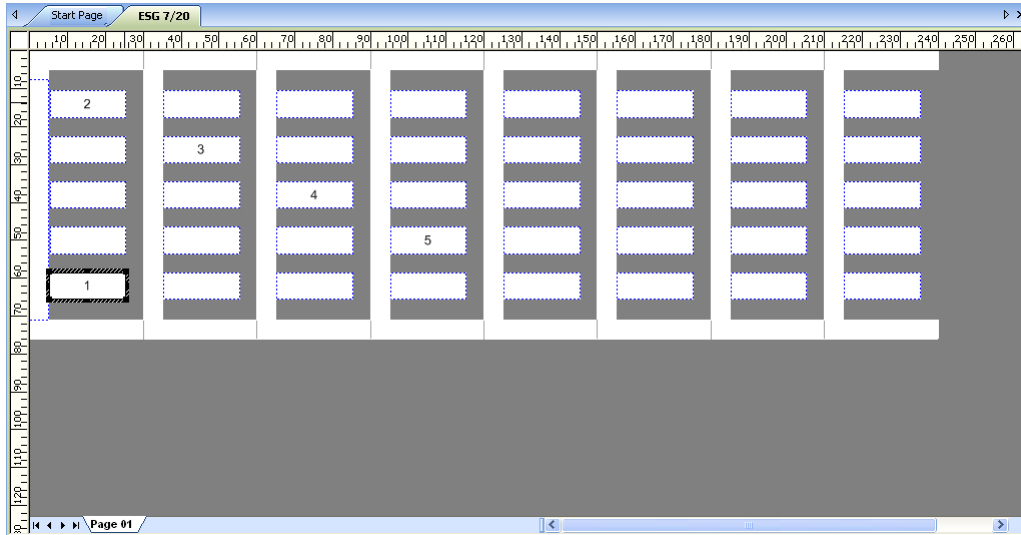

Insert sequence

Click on the check box to activate or deactivate this function.

If the fields you are captioning already contain text, you can specify where you want the text to appear. Select the relevant radio button:

Before existing text

After existing text

If you do not activate this function, the entire content of the marker will be overwritten.

Project fields

Click on the check box to activate or deactivate this function.

This option enables you to automatically number project fields. The start value can be entered in the "Number" field (there is NO consecutive numbering if the "Number" field is deleted). You may also enter a "Prefix" or a "Suffix".

Formatted sequence

In the left field, enter the format for the block counter and, in the right field, enter the format for the numbering sequence defined by the start value and end value.

The following formatting options can be used for the block and the numbering sequence. The block format is only applied if the "Block" field contains an entry.

#.00	The numbers are formatted to two decimal places. For the number sequence 1 to 3, this produces the following formatted numbers: 1.00 then 2.00 then 3.00, etc.
\$.00	A constant appears before the number (the dollar sign in this example).
#,###.00	Formats the number sequence 1000 to 2000 as follows: 1,000.00 then 1,001.00 then 1,002.00, etc.
0%	Formats the number sequence 1 to 5 as 100%, 200%, ..., 500% (percentage).

Preview

The first captioned field is displayed here.

Automatic recognition of field content


The Auto Fill function attempts to identify the text of the first selected field so it can put appropriate default settings in the "Consecutive Numbering" window.

For example, if you enter A4.0X in a text field, the system recognizes that A is the prefix, X is the suffix, the block counter is 4 and the start value is 0.

Example 1

We want to caption a MultiCard as follows:


The start value will be 1 and the end value will be 3. There will be a block in front of the value, counting from 0. Each number (block plus start value) will be preceded by a P and concluded by an S. One field will be skipped, i.e. there will be an empty field between the captioned fields. Each field will appear twice in succession. The values of the block entry will start at 0 and be incremented by 2, i.e. 0, 2, 4, 6.

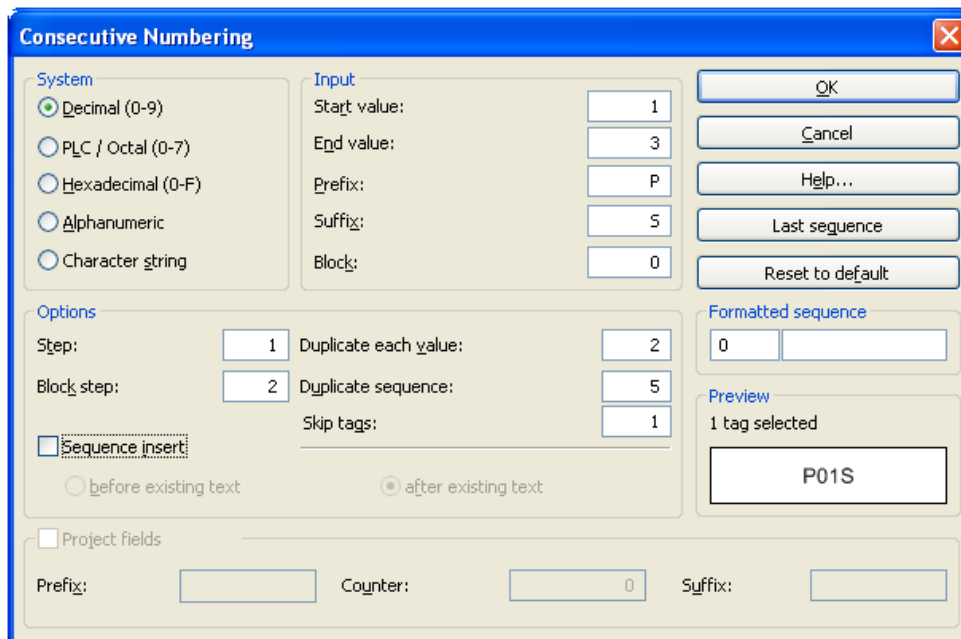

The 'Consecutive Numbering' dialog box is shown with the following settings:

- System:** ☒ Decimal (0-9), ☐ PLC / Octal (0-7), ☐ Hexadecimal (0-F), ☐ Alphanumeric, ☐ Character string
- Input:** Start value: 1, End value: 3, Prefix: P, Suffix: S, Block: 0
- Options:** Step: 1, Duplicate each value: 2, Block step: 2, Duplicate sequence: 5, Skip tags: 1, ☐ Sequence insert, ☐ before existing text, ☒ after existing text
- Formatted sequence:** 0
- Preview:** 1 tag selected, P01S
- Project fields:** ☐ Prefix: , Counter: 0, Suffix:

Result:

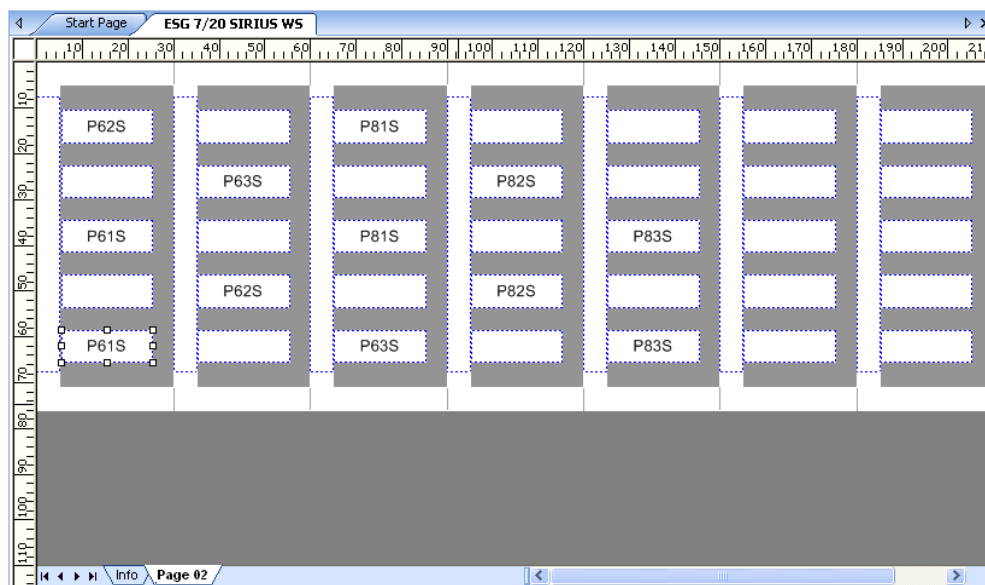


The 'ESG 7/20 SIRIUS WS' MultiCard layout is shown with the following fields:

Field	Value
P62S	
	P63S
P61S	
	P62S
P61S	
	P63S
P81S	
	P81S
	P63S
P82S	
	P82S
	P83S
P83S	
	P83S

Example 2

PLC captioning format


The relays 4, 5 and 6 are to be captioned. Each of these relays has five inputs (= I), to be numbered from 0 to 4. Numbering is required to begin at I4.0 up to I4.4, then I5.0 to I5.4 and finally I6.0 to I6.4.

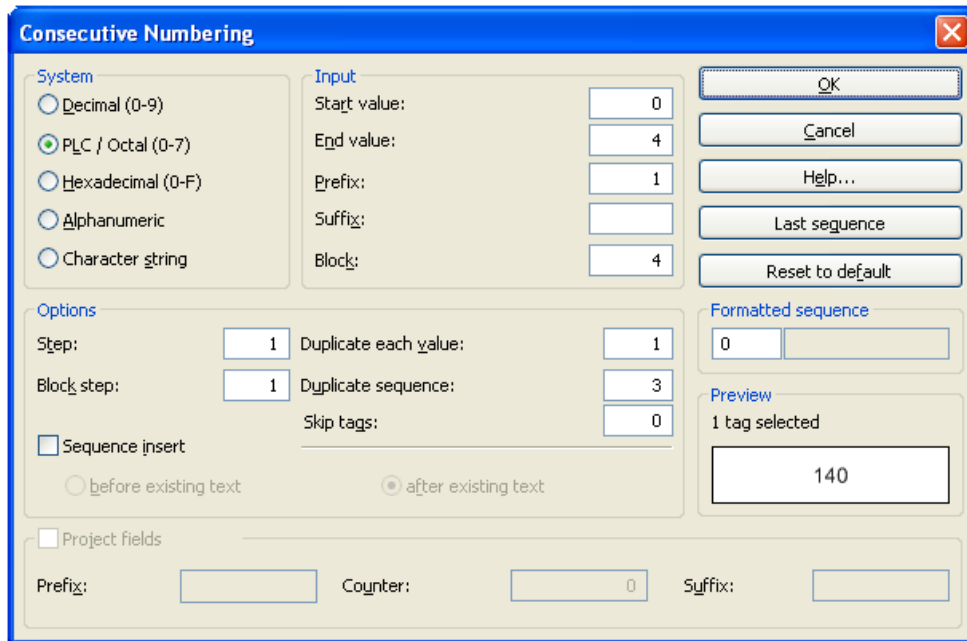

The 'Consecutive Numbering' dialog box is shown with the following settings:

- System:** ☒ PLC / Octal (0-7)
- Input:** Start value: 0, End value: 4, Prefix: 1, Suffix: (empty), Block: 4
- Options:** Step: 1, Duplicate each value: 1, Block step: 1, Duplicate sequence: 3, Skip tags: 0
- Sequence insert:** ☐ before existing text, ☒ after existing text
- Project fields:** ☐ Prefix: (empty), Counter: 0, Suffix: (empty)
- Formatted sequence:** 0
- Preview:** 1 tag selected, 140

Result:

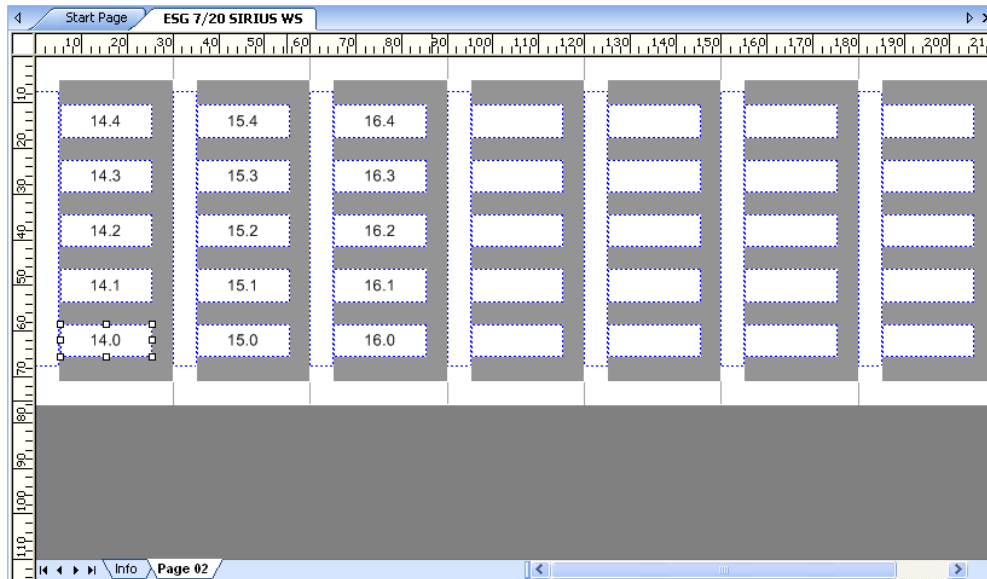

The diagram shows a ladder logic network with three relays (4, 5, and 6) and their inputs. The inputs are numbered from 14.0 to 16.4. The diagram is titled 'ESG 7/20 SIRIUS WS' and is on 'Page 02'.


Relay	Input	Value
4	I4.0	14.0
	I4.1	14.1
	I4.2	14.2
	I4.3	14.3
	I4.4	14.4
5	I5.0	15.0
	I5.1	15.1
	I5.2	15.2
	I5.3	15.3
	I5.4	15.4
6	I6.0	16.0
	I6.1	16.1
	I6.2	16.2
	I6.3	16.3
	I6.4	16.4


Incrementing and decrementing


Instead of consecutive numbering, numeric values can also be incremented and decremented via a function.

Two options are available

- Automatic recognition of the numeric value by selecting two text fields, see ("Automatic recognition of numeric value")
- Continuation of the numeric value with a default value (see "Continuing the numeric value with a default value")

 There is pattern recognition which only considers the numeric values of one text. Example: After incrementing, "A-10x" becomes "A-11x"

 Any negative sign for a number is interpreted as a text character and is not taken into consideration.

 The "Increment Value" and "Decrement Value" functions always fill the next text field. If there are several text fields on one marker, they are filled one after the other.

The step of the function can be set via the options (see chapter "Basic settings").

Automatic recognition of the numeric value


If you select two text fields with numbers, the difference between the figures in the two fields is used as the value.

Follow these steps:


- Select at least two text fields with numeric values.
- Select **Insert > Increment Value** or **Insert > Decrement Value**

Example:

Selecting text fields

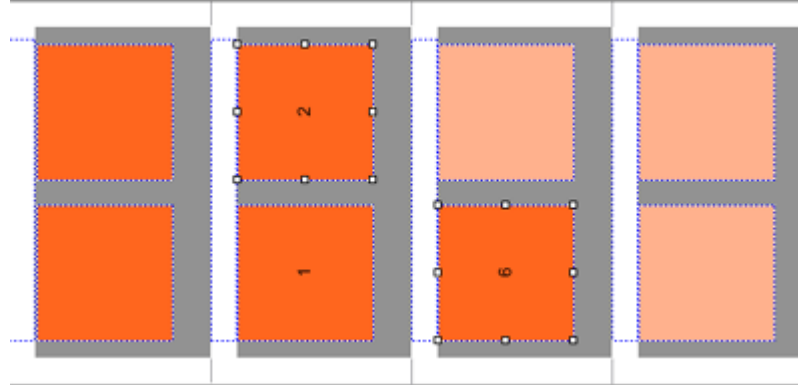

Incrementing values twice

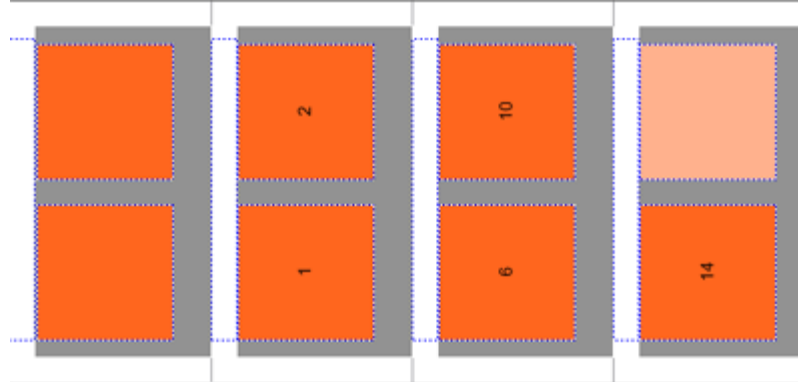

Continuing the numeric value with a default value


If you only select **one** text field with a number, a preset value is used for incrementing and decrementing. The respective step can be set via the options dialog (see chapter "Basic settings").

Follow these steps:




- Select a text field with a numeric value.
- Select **Insert > Increment Value** or **Insert > Decrement Value**.

Color coding

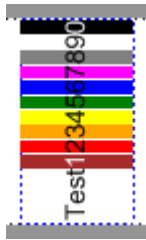
The background and font colors of the numbers 0 to 9 can be set via the color coding option.



The settings for the background and font color are set via the options menu (see section "Color coding" in chapter "Options dialog").

-  Color coding can only be used in single-lined text!
-  The color coding is applied to complete elements (not to parts of the text).
-  The color coding settings are saved in the project file (e. g. *.mpc).
This enables you to create different files with different color codings.

If the color codings defined in the program differ from the ones defined in the project, the following message box appears:

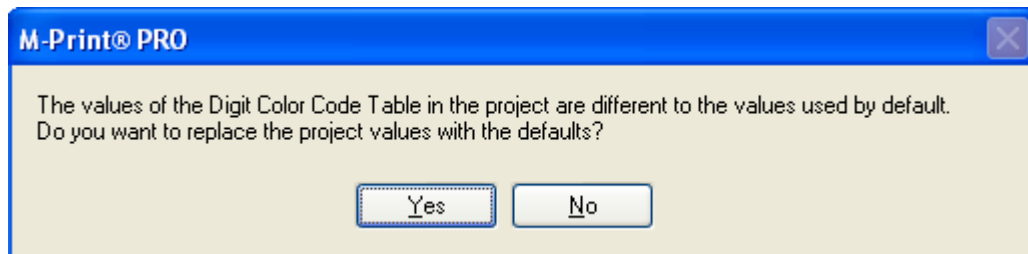

- Click on **Yes** to accept the color values defined in the program.
- Click on **No** to keep the color values defined in the project.

Synchronizing content

Text elements can be linked to other text elements (so-called data sources).

Follow these steps:

- Click on the text elements to which you want to assign a data source (e. g. TEXT FIELD 2).
- Open the "Properties" window (see chapter "Properties window")
- Enter the field name of the data source in the "Data Source" field (e. g. TEXT FIELD 1).
- Select **Edit > Synchronize Content**.

The content of TEXT FIELD 1 is transferred to TEXT FIELD 2.

Orders, Order Wizard

The Order Wizard enables you to order marker types from the currently open project by e-mail.

The screenshot shows the 'Order Assistant' dialog box with the 'Order List' tab selected. The dialog has a title bar with a close button. Below the title bar are tabs: General, Address, Order List (selected), Additional Information, and Mail Options. Inside the 'Order List' tab, there are two radio buttons: 'Enquiry' (unselected) and 'Order' (selected). Below the radio buttons is a table with the following columns: 'Posit...', 'Custom Order ...', 'Weidmueller Or...', 'Product', 'Pag...', 'Order ...', and 'Marker Type Title'. The table is empty. Below the table are four buttons: 'Copy', 'Add Position...' (highlighted with a blue border), 'Delete Position', and 'Delete All Positions'. At the bottom of the dialog are six buttons: 'Save as Default', 'Load Default', 'Send', 'Cancel', 'Save', and 'Print'.

To open the Order Wizard, select **Tools > Order...** from the menu bar. .

- Select **Tools > Order....**
- Make the settings on the tabs.

Save as Default

The settings of the active tab are saved as defaults.



The delivery address stated in the order must be in the ordering party's country.

Filter functions

Filtering in fields

You can use the filter to view elements with special phrases.
Select **View > Filter > Filter...** to show the filter dialog.

Example:
Before the
filter:

5	10	15	20	25	30
4	9	14	19	24	29
3	8	13	18	23	28
2	7	12	17	22	27
1	6	11	16	21	26

Filter setting:

Filter ✕

Use this dialog box to limit your display to markers that have the properties that you specify.

Condition

Filter on Field(s): All Textfields ▾

☐ Starts with ☒ Contains

Phrase: 1

Remove Apply Cancel

Result:

13	18				
12	17				
11	16				
10	15	21			
1	14	19			

Filter overflow


You can show fields with text overflow via **View > Filter > Filter Overflow**.
The font size can be narrowed or shortened for these fields.

Licensing

With the licensed version you have the unrestricted rights for using the program according to the software key.


To license the program, select **Help > License Key...** from the menu bar .

First select the license key you have, then follow the further instructions.

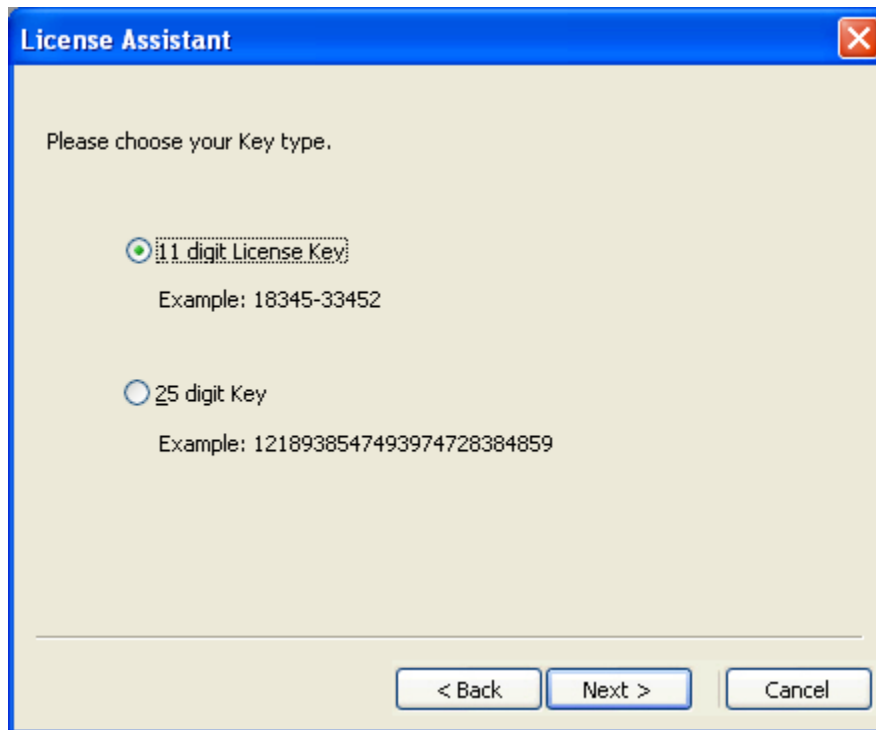

Multiple insert

You can insert multiple text fields, barcodes and images from the clipboard.

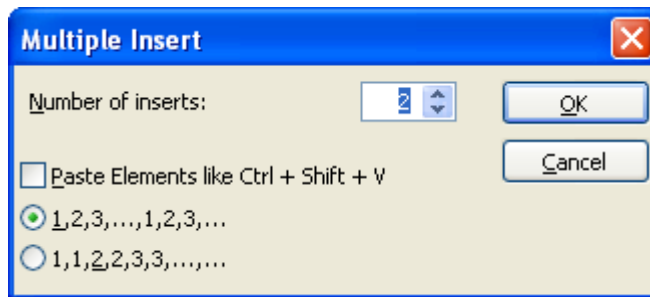


Select **Edit > Multiple Insert...** for multiple insertion .

Inserting a line break

This function allows line breaks to be inserted subsequently in the content of text fields.

To do this, select **Edit > Insert Line Break...** from the menu bar.

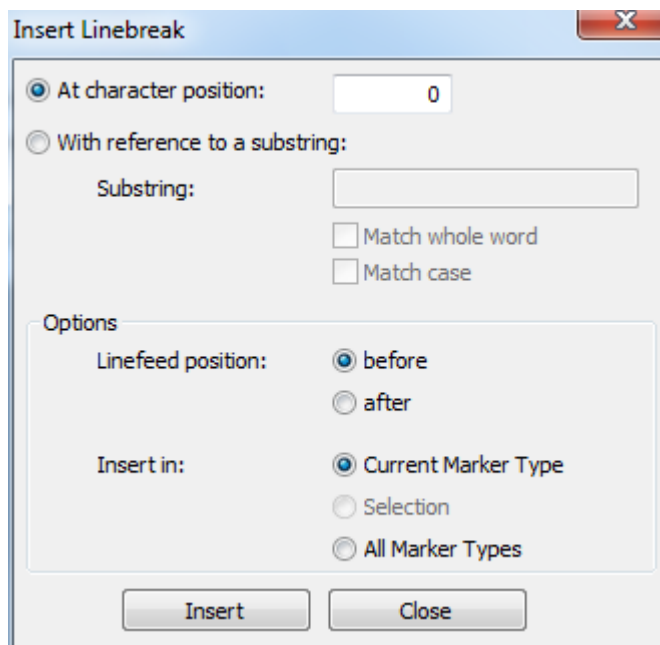

Excel editing

The content of existing text fields can also be edited in Excel.
Select **Edit > Start Excel Editing**.

In Excel you can then edit the text content and all supported formats of the text fields.




Close Excel or select **Edit > Exit Excel Editing** in the program to transfer the content to the application.

Multi-level terminals

You can use this function to resort selected data with a predefined step.
Select **Edit > Multi-level Terminal**.

If no markers are selected, sorting will be effected using all markers.

Example:

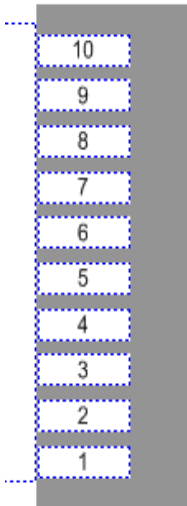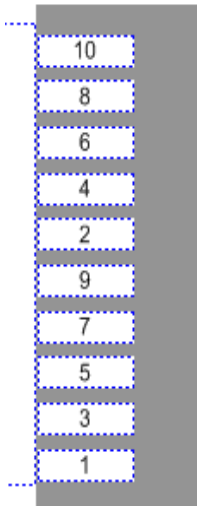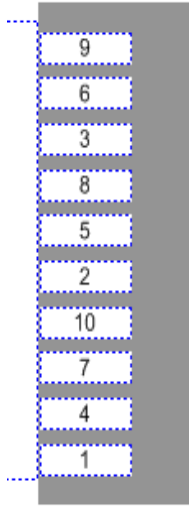Default values:	Multi-level terminal selection 2 = Two-tier terminal	Multi-level terminal selection 3 = Three-way terminal
	Sorting: 1,3,5,7,9 then 2,4,6,8	Sorting: 1,4,7,10 then 2,5,8 then 3,6,9
		


Scales

Scales and rounded scales can be inserted as new elements (see chapter "Inserting a scale").


The start and end values determine the value range of the scale. The intervals of the tick marks (major / minor interval) always relate to the value range.

Scale properties

Scales are characterized by the following properties:

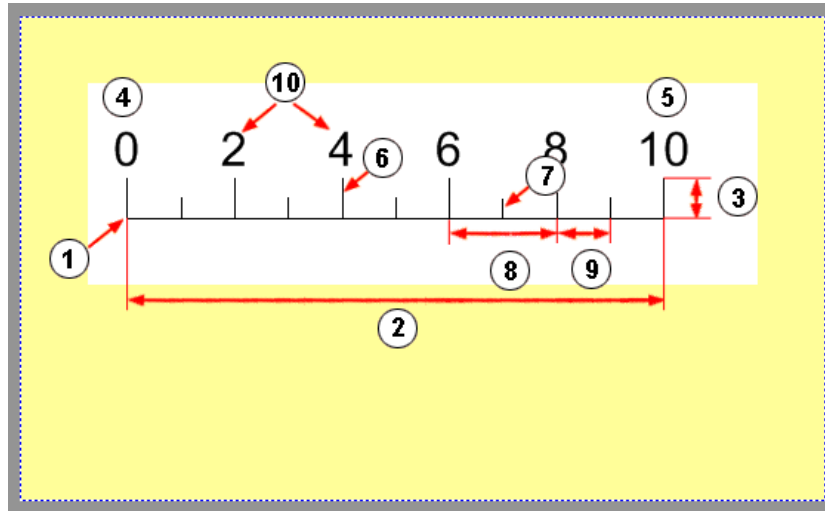

- 1 Scale zero-point (scale zero-point left, scale zero-point top)
- 2 Scale length
- 3 Scale height
The scale height corresponds to the height of the major tick marks.
- 4 Start value (start and end values determine the value range of the scale.)
- 5 End value
- 6 Major tick mark
- 7 Minor tick mark
- 8 Interval of the major tick mark (major interval)
- 9 Interval of the minor tick mark (minor interval)
- 10 Caption interval

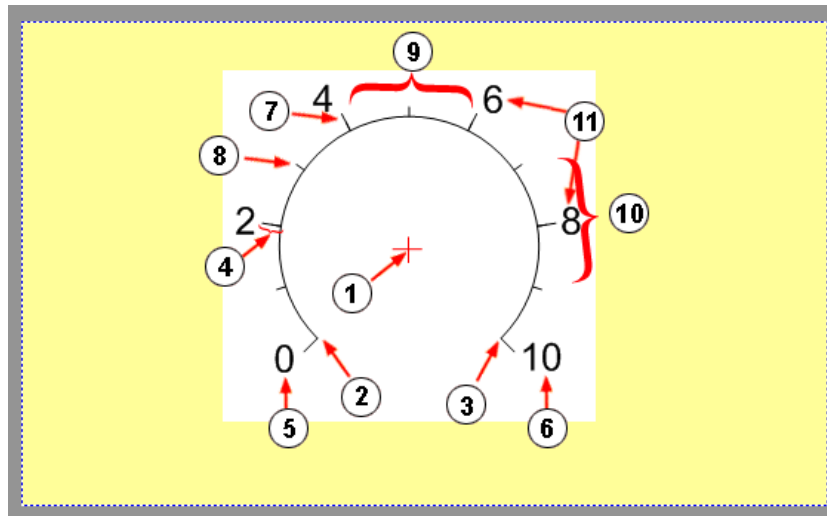


- 1 Scale zero-point (scale center left, scale center top)
- 2 Start angle (see also chapter "Rounded scale")
- 3 End angle
- 4 Scale height
The scale height corresponds to the height of the major tick marks.
- 5 Start value (start and end values determine the value range of the scale.)
- 6 End value
- 7 Major tick mark
- 8 Minor tick mark
- 9 Interval of the major tick mark (major interval)
- 10 Interval of the minor tick mark (minor interval)
- 11 Caption interval

A further explanation of the properties can be found in chapter "Inserting a scale".

Rounded Scale

The base line of a rounded scale is a circular arc.

The scale is arranged clockwise along the circular arc. The zero-point is at the top.

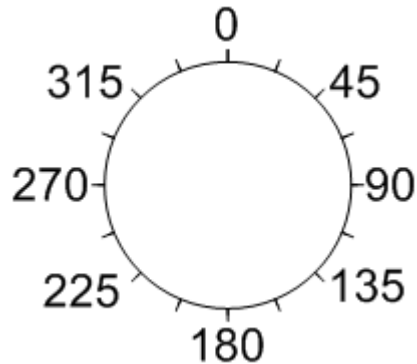


Tangential captioning causes the scale captions to be arranged tangentially to the base line (see "Example 1" in chapter "Scale examples").

Reference Points

The value pattern of a scale can also be defined by reference points.

A reference point indicates the exact position of a value on the scale.

The value pattern is linear between the reference points.

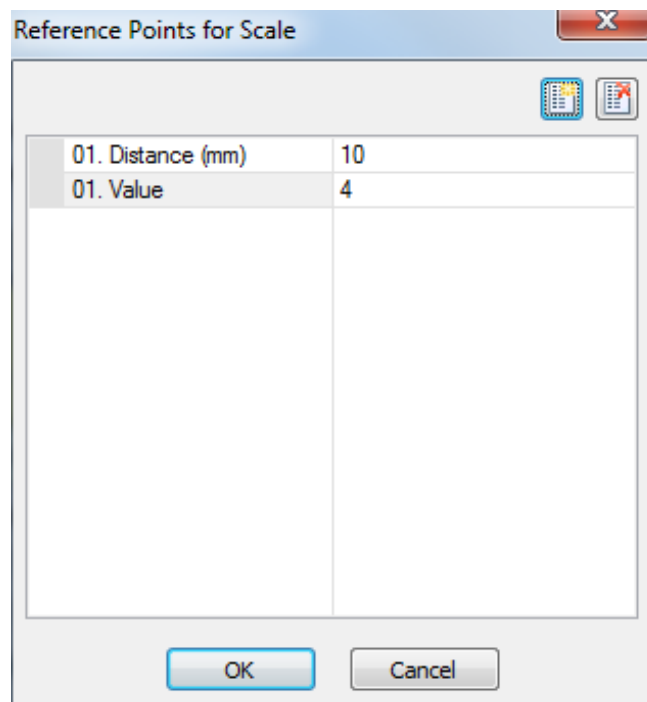

Add reference point

Adds a new reference point in the dialog.



Delete reference point


Deletes the selected reference point.

Interval The interval of the reference point from the start of the scale.

Value Caption value of the reference point. Whether the caption value is displayed or not depends on the selected caption interval of the scale.

With a straight scale, the value should be in the visible range of the element. With a rounded scale, it should be between the start angle and the end angle.

Example:

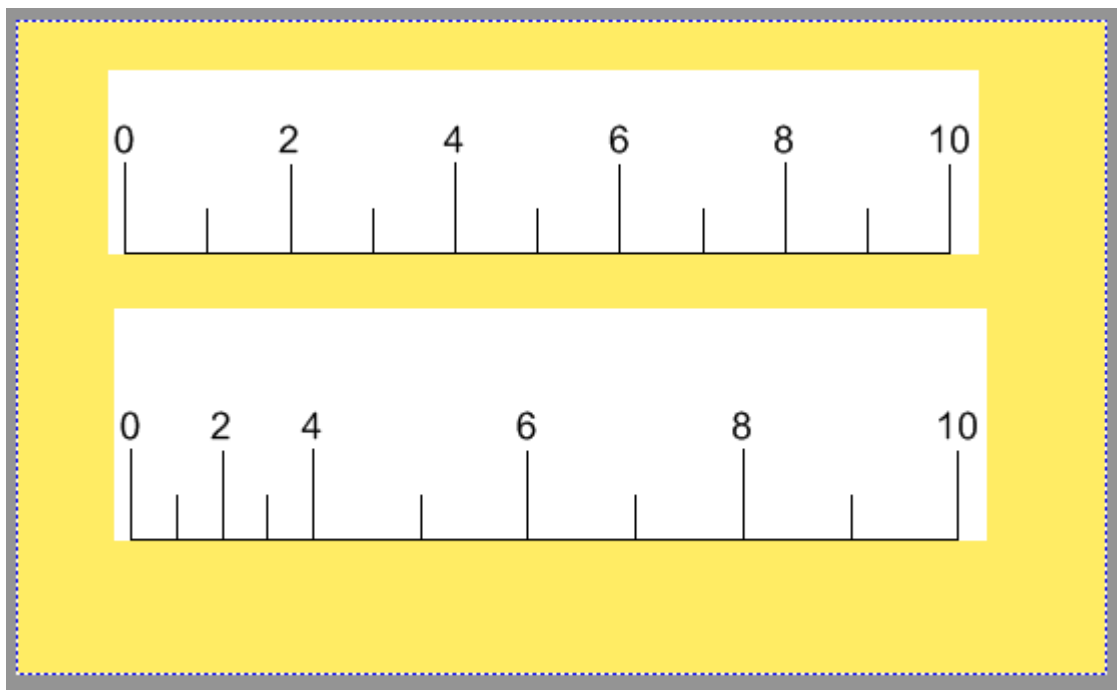


The upper scale does not contain reference points.

For the lower scale, a reference point with the value 4 has been defined at an interval of 10 mm.

At the selected caption interval of 2, the reference point is also captioned. The area before and after the reference point is also divided in a linear manner.

Scale examples


Example 1:

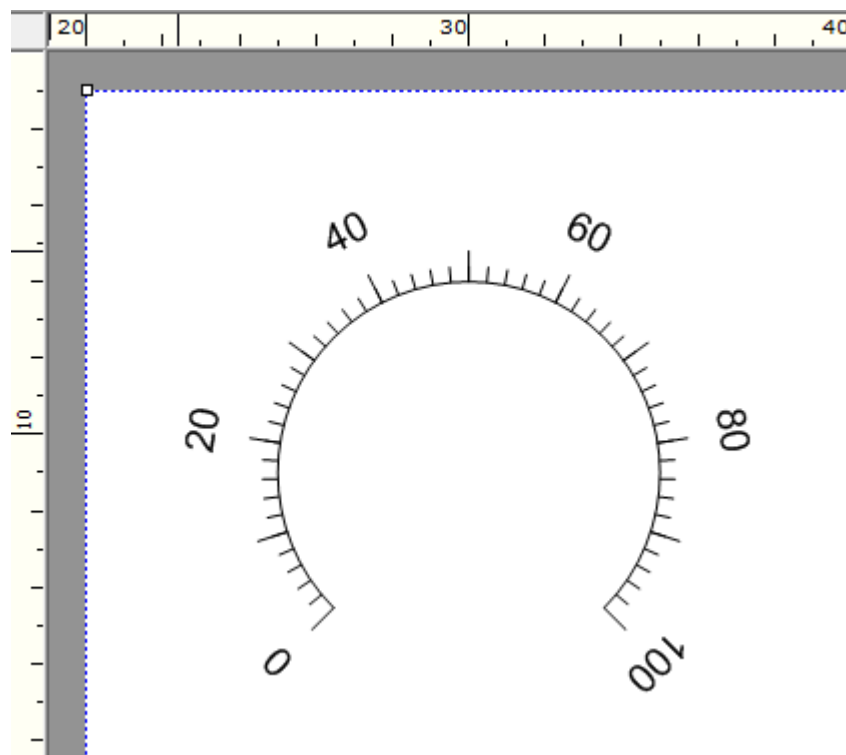

The illustration shows a round scale with the following properties:

Scale radius	5 mm
Start angle	225 (or -135)
End angle	135
Scale center left	10 mm
Scale center top	10 mm
Scale height	0.8 mm
Caption orientation	Tangential
Start value	0
End value	100
Value distribution	Linear
Major tick mark	10
Minor tick mark	2
Caption interval	20
Font size	3


Example 2:

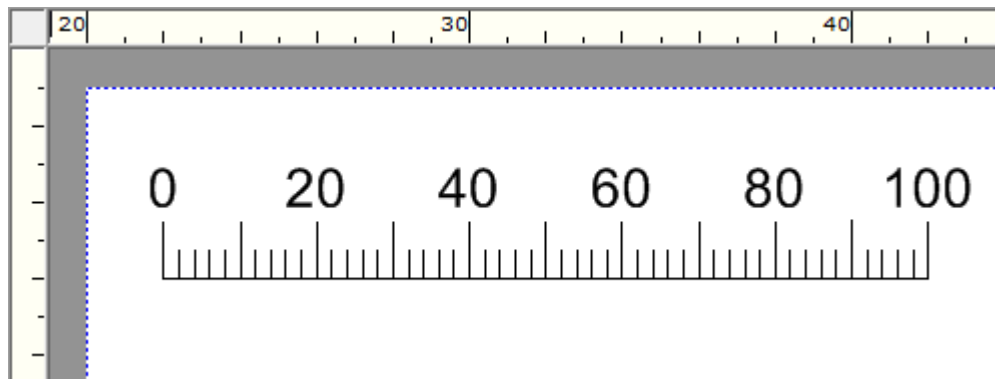

The illustration shows a scale with a linear value pattern and the following properties:

Scale length	20 mm
Scale zero-point left	2 mm
Scale zero-point top	5 mm
Scale height	1.5 mm
Start value	0
End value	100
Value distribution	Linear
Major tick mark	10
Minor tick mark	2
Caption interval	20
Font size	4

Example 3:

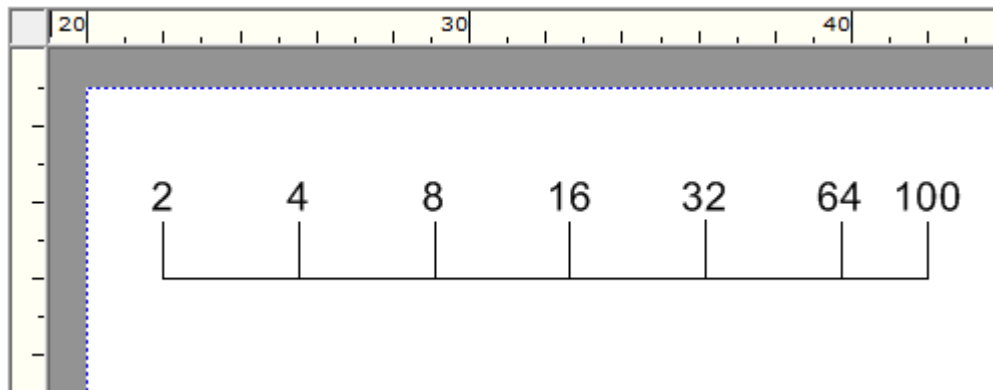

The illustration shows a scale with a logarithmic value pattern and the following properties:

Scale length	20 mm
Scale zero-point left	2 mm
Scale zero-point top	5 mm
Scale height	1.5 mm
Start value	2
End value	100
Value distribution	Logarithmic
Major tick mark	Automatic
Minor tick mark	Automatic
Caption interval	Automatic
Basis of the logarithmic scale	2
Font size	3


Endless strips

Endless strips are rolled goods, i.e. endless material that can be printed from one side.

Compared to other marker types, it is the user who determines the appearance of the layout.

To insert an endless strip, select the corresponding marker from the product catalog.


A basic dialog or an extended dialog opens, depending the marker that is opened.

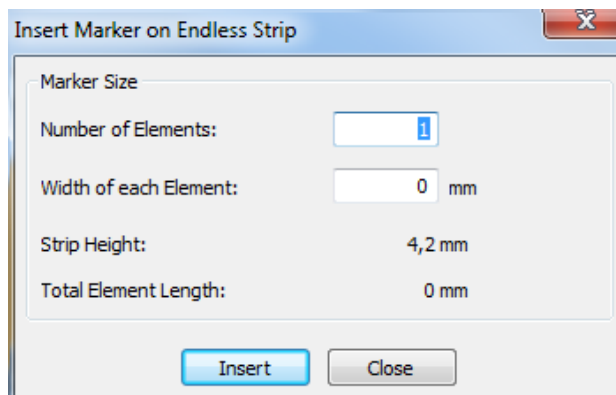

The dialog box is titled "Insert Marker on Endless Strip". It contains a section labeled "Marker Size" with the following fields:

- Number of Elements: 1
- Width of each Element: 0 mm
- Strip Height: 4,2 mm
- Total Element Length: 0 mm

At the bottom, there are two buttons: "Insert" and "Close".

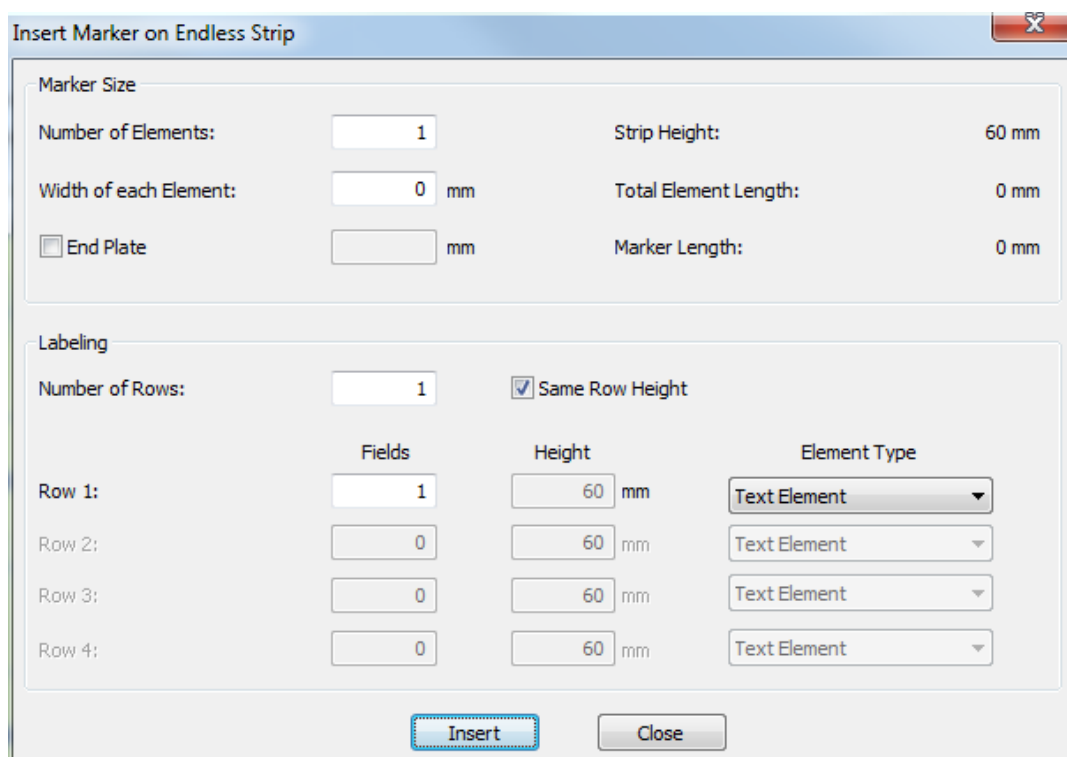

The dialog box is titled "Insert Marker on Endless Strip". It contains a section labeled "Marker Size" with the following fields:

- Number of Elements: 1
- Width of each Element: 0 mm
- Strip Height: 60 mm
- Total Element Length: 0 mm
- ☐ End Plate
- Marker Length: 0 mm

Below the "Marker Size" section is a section labeled "Labeling" with the following fields:

- Number of Rows: 1
- ☒ Same Row Height

	Fields	Height	Element Type
Row 1:	1	60 mm	Text Element
Row 2:	0	60 mm	Text Element
Row 3:	0	60 mm	Text Element
Row 4:	0	60 mm	Text Element

At the bottom, there are two buttons: "Insert" and "Close".

The following can be displayed, depending on the marker:

Number of elements / Width of each element

The number of elements multiplied by the width of each element determines the total element length.

End plate

As the strip is cut off, it may be necessary to leave a small space for the cutting loss.

Strip height

The strip height is specified by the selected product from the product catalog.

Total element length

Display of the total length (number of elements x width of each element)

Marker length

The length of the marker on the strip. It is specified by the total length of the elements plus the end plate.

Number of rows

Number of rows for each marker.

Between 1 and 3 rows are usually used, as the height of the strip is limited. The total height of all the rows should not be greater than the height of the strip.

Same row height

The row heights are calculated automatically.

Row...

Row on the marker.

Fields

Number of fields (e.g. text fields) which should be displayed in the row.

Height

The height of the row.

The total height of all the rows should not be greater than the height of the strip.

Element type

The following can be selected:

Text element:	The row consists of text elements that can be captioned
Connector	Graphic connector object

Paste

Inserts the selected settings as a marker. Further markers can be inserted as long as the dialog is not closed.

Newly inserted markers are added to the end of the strip.

Connector

There are the following graphic connector elements, which can be adjusted via the "Properties" window:



Type: Start



Type: Junction



Type: T-Junction




Type: End

Examples of endless strips

Three different marker settings are added to an endless strip in the example.

Setting 1:

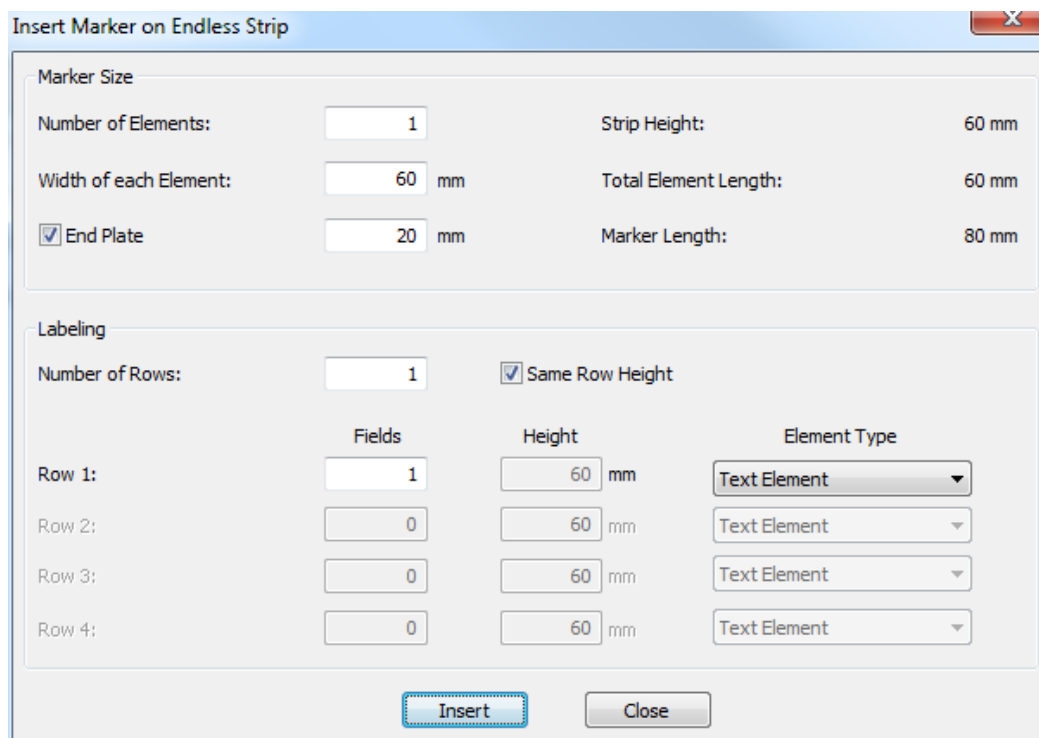

The dialog box is titled "Insert Marker on Endless Strip". It contains two main sections: "Marker Size" and "Labeling".

Marker Size:

- Number of Elements: 1
- Width of each Element: 60 mm
- ☒ End Plate: 20 mm
- Strip Height: 60 mm
- Total Element Length: 60 mm
- Marker Length: 80 mm


Labeling:

- Number of Rows: 1
- ☒ Same Row Height

	Fields	Height	Element Type
Row 1:	1	60 mm	Text Element
Row 2:	0	60 mm	Text Element
Row 3:	0	60 mm	Text Element
Row 4:	0	60 mm	Text Element

Buttons: Insert, Close

Result 1:

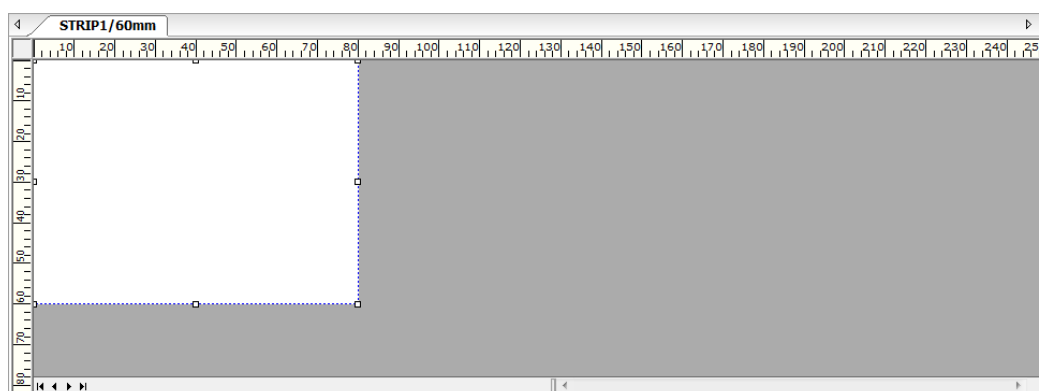

Setting 2:

Insert Marker on Endless Strip

Marker Size

Number of Elements:

1

Strip Height:

60 mm

Width of each Element:

60 mm

Total Element Length:

60 mm

☐ End Plate

0 mm

Marker Length:

60 mm

Labeling

Number of Rows:

2


☒ Same Row Height

	Fields	Height	Element Type
Row 1:	2	30 mm	Text Element
Row 2:	8	30 mm	Text Element
Row 3:	0	30 mm	Text Element
Row 4:	0	30 mm	Text Element

Insert

Close

Result 2:

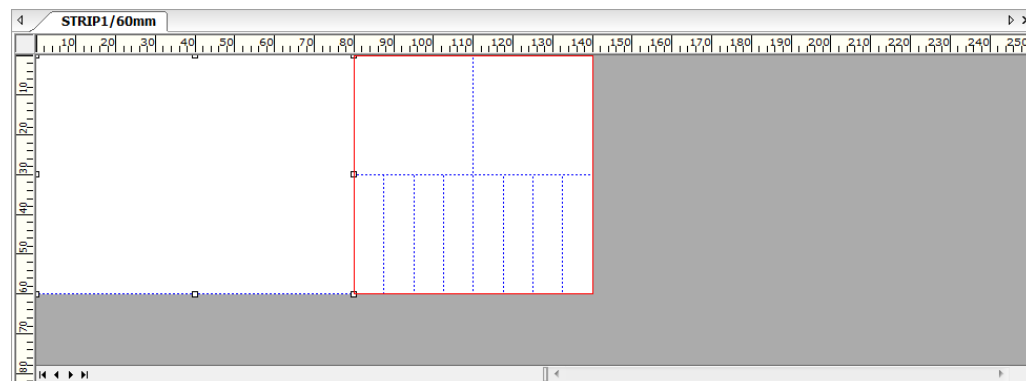

Setting 3:

Insert Marker on Endless Strip

Marker Size

Number of Elements:	2	Strip Height:	60 mm
Width of each Element:	40 mm	Total Element Length:	80 mm
<input type="checkbox"/> End Plate	0 mm	Marker Length:	80 mm


Labeling

Number of Rows: 3 ☐ Same Row Height

	Fields	Height	Element Type
Row 1:	2	10 mm	Text Element
Row 2:	4	25 mm	Text Element
Row 3:	8	25 mm	Text Element
Row 4:	0	20 mm	Text Element

Insert **Close**

Result 3:

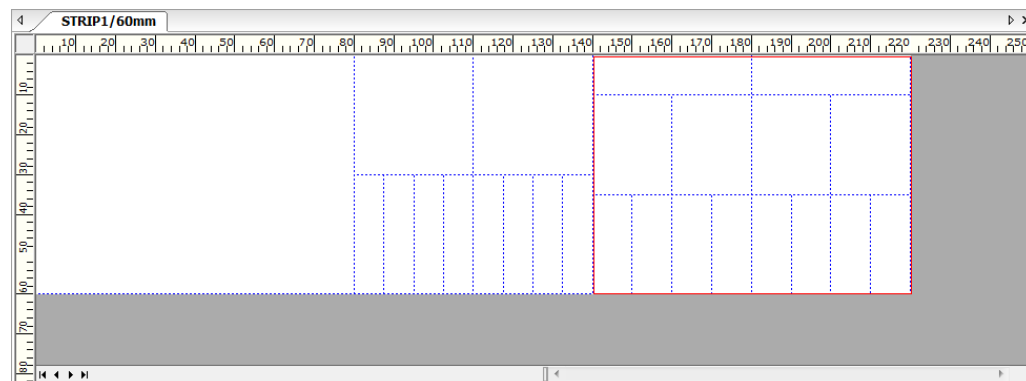

Document protection


The document protection feature lets you protect the layout of your project file against changes. Consequently only the content can be changed – like with a form.

Note the following document protection properties:

- Applies to all elements for which the "Locked" property has been set (see chapter "User interface", section "Behavior").
- Protects the "Locked", "Printable" and "Read only" properties, among other things.
- Prevents the deletion, moving and addition of elements.

Document protection settings

The following settings, among others, can be made by selecting "**Tools -> Document Protection Settings...**" from the menu bar:

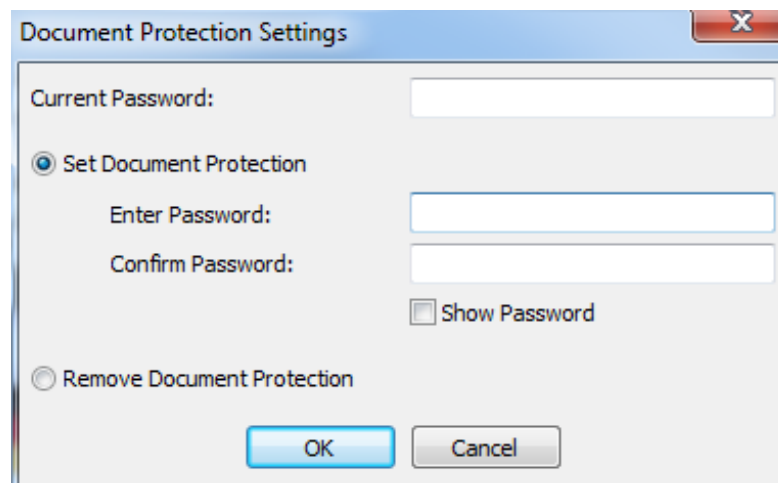

Current Password:

The current password has to be entered in order to change the password or remove document protection.

Set Document Protection


You can define a new password for document protection here. The previous password is overwritten.


Remove Document Protection

You can remove existing document protection here. The current password has to be entered.

Enabling document protection

Follow these steps to enable document protection:


- Create a project file and set the "Locked" property to "Yes" for all fields that need to be protected (see chapter "User interface", section "Behavior").
- Select **Tools -> Document Protection Settings...** from the menu bar or click on the  icon.
- If no password has been assigned yet, the document protection settings dialog opens.

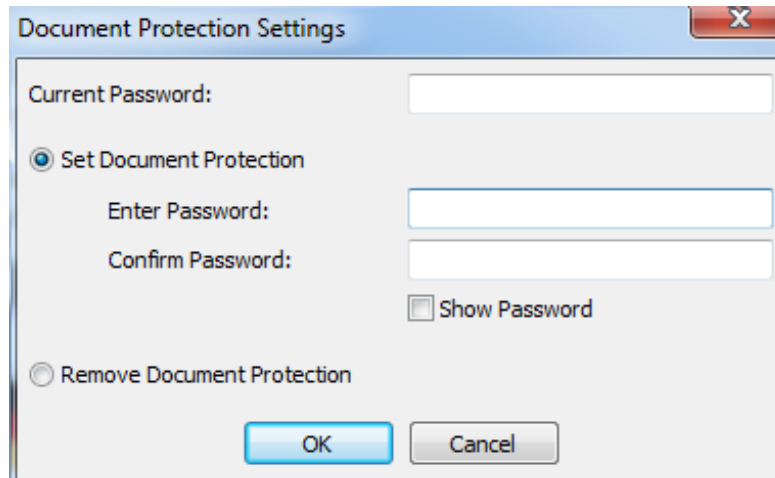

- Type in a new password and click on **OK**.


Document protection has now been enabled.

That document protection has been enabled is shown

- on the toolbar by the Enabled icon ()
- and after the version number (see chapter "User interface", section "Introduction").

Disabling document protection


Follow these steps to disable document protection:


- Open a protected project file.
- Select **Tools -> Document Protection Settings...** from the menu bar or click on the  icon.
- A dialog opens, requesting the password.

When the password has been entered, document protection is disabled until the project file is closed again.

Removing document protection

Follow these steps to remove document protection:

- Open a protected project file.
- Select **Tools -> Document Protection Settings...** from the menu bar or click on the  icon.
- The document protection settings dialog opens.

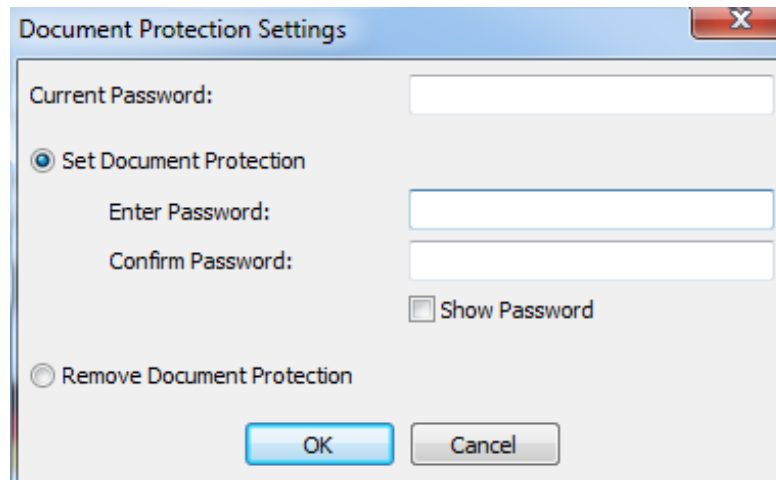


- Type in the current password, select "Remove Document Protection" and click on **OK**.

Document protection has now been disabled.

User interface

Introduction

The user interface can consist of different elements, depending on the configuration.

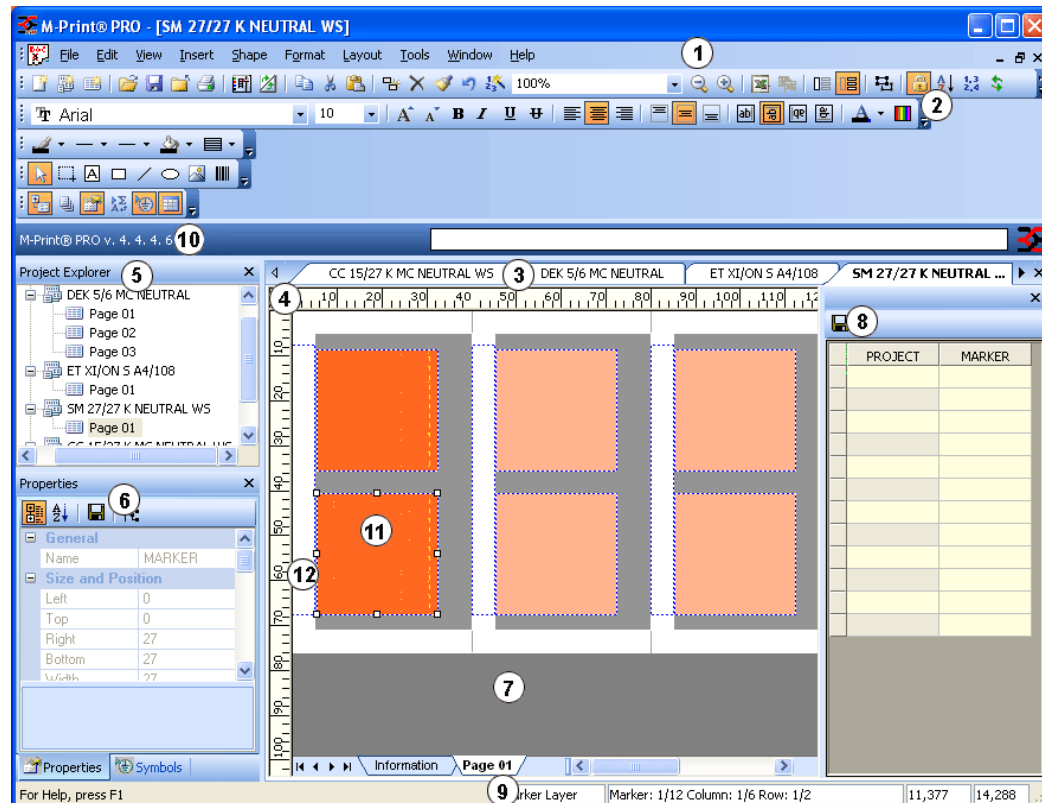

1 Menu bar

The menu bar enables you to use the most important program functions. Menu items can be active or inactive.

2 Toolbars

You can use the toolbar icons to execute important commands. The toolbars are movable and dockable.

3 Tabs

Tabs are arranged below the toolbars. If you click on a tab, the associated marker type moves to the foreground.

4 Ruler

There are rulers along the top and the left of the workspace. You can use the rulers to measure distances and spacing.

5 Project Explorer

The default position of the Project Explorer is on the left of the user interface. The Project Explorer has a hierarchical structure and is used for managing projects (see section "Project Explorer").

6 **Properties window**

In the "Properties" window you can display and change the properties of various elements, such as text fields, images or barcodes (see chapter "Properties window").

7 **Workspace**

The workspace occupies the right of the user interface. Here you can view and edit the currently selected marker type.

8 **Data grid**

The data grid is used to show and edit the content of the marker elements "text field" and "barcode" in tabular form. (See chapter "Data grid").

9 **Status bar**

The status bar runs along the bottom of the user interface. The following items are shown:

- Active layer (e.g. marker layer, free layer, etc.)
- Number of available markers, columns, lines of the active layer
- Position of the cursor along the X and Y axes and the unit of length (e.g. mm)
- Status of the CAP, NUM and SCRL functions
Active functions are shown in black.

10 **Version number**

Display of the current program version.

11 **Marker areas**

Printable areas on the marker types.

By default, each marker area (short: marker) has a document-individual text element (see section "Field").

The marker areas are arranged on the marker layer.

12 **Project layer**

By default, the project layer has a document-individual text element, the so-called project marker.


Elements

Text fields, shapes (lines, rectangles, ellipses, scales), images and barcodes are all referred to as "elements".

Menu bar

This section describes the most important functions of the individual menus.

File menu

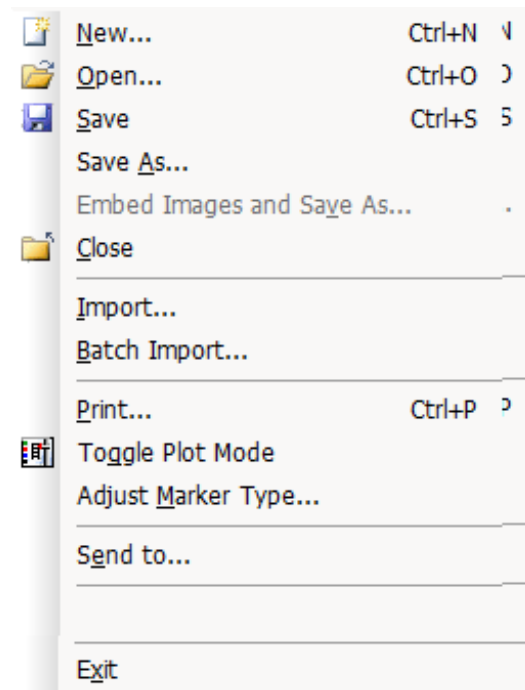

New

You can use this menu item to create a new file.

Open

Opens an existing file. The specification of a file name can be set via the options dialog (see chapter "Options dialog", section "Environment", section "General").

Save

Saves a file you have been working on.

Save As...

Lets you specify a new name when you save a file.

Embed Images and Save As

Embed images available in the program file and save under the file name.

Close

Closes a file.

Import...

You can use this menu item to import data from other formats.

Batch Import

You can import external data via a script.

Print...

This menu item displays the dialog box for printing marker types.

Toggle Plot Mode

Switches to plot mode (see section "Plot mode").

Adjust Marker Type...

Adjusts the marker type (see section "Adjusting the printer offset").

Send to...

This menu item enables you to send your current project by e-mail.















Recent Files

This part of the menu lists recently opened files.

Exit

You can use this menu item to exit M-Print PRO.

Edit menu

	<u>Undo</u>	Ctrl+Z
	Re <u>d</u> o	Ctrl+Y
<hr/>		
	Cu <u>t</u>	Ctrl+X
	<u>C</u> opy	Ctrl+C
	<u>P</u> aste	Ctrl+V
	Paste Elements	Ctrl+Shift+V
	Multiple <u>I</u> nsert...	Ctrl+M
	<u>D</u> uplicate	Ctrl+D
<hr/>		
	Group	Ctrl+G
	Ungroup	Ctrl+Shift+G
<hr/>		
	Start Excel editing	F5
	Exit Excel editing	
<hr/>		
	<u>F</u> ind	Ctrl+F
	<u>R</u> eplace	Ctrl+H
	Insert Line <u>b</u> reak...	Ctrl+Shift+F
<hr/>		
	<u>S</u> ynchronize Content	Ctrl+Shift+Y
<hr/>		
	<u>S</u> elect	▶
<hr/>		
	De <u>l</u> ete	▶
<hr/>		
	Ch <u>a</u> nge Marker Type...	
	Delete <u>M</u> arker Type	
<hr/>		
	Format Painter	
	Sort Mark <u>e</u> rs...	
	Fl <u>i</u> p Markers	Ctrl+F9
	Multi-level Terminal...	

Undo

This undoes the last editing step.

Redo

Redoes the steps that have been undone. Redoing relates to the basic functions and cannot be undone again

Cut

This menu item cuts one or several selected elements.

Copy

This menu item copies one or several selected elements.

Paste

This menu item pastes the clipboard content into a selected field.

Paste Elements

This menu item pastes a copied element into a selected field (e.g. a symbol).

Multiple insert

Inserts a copied element multiple times (see section "Multiple insert").

Duplicate

This menu item duplicates a selected element and places it (slightly offset) on top of the original element.

Grouping

Groups the selected elements (or groups) as a new group (see section "Grouping").

Ungroup

Ungroups the selected group.

Start Excel Editing

This menu item starts Excel editing (see section "Excel editing").

Exit Excel editing

This menu item ends Excel editing.

Find

Calls the search dialog. The current marker is checked for the entered search criterion. It is possible to search in several rows.

Replace

Opens the search/replace dialog.
The current marker is checked for the entered search criterion.
It is possible to search and replace in several rows.

Inserting a line break

Opens a dialog to insert line breaks (see section "Inserting a line break").

Synchronize content

Synchronizes all fields for which data sources exist (see section "Synchronizing content").

Select

This menu item gives you several options for selecting elements (e.g. All fields (current page) or All fields (all pages)).

Delete

This menu item gives you several options for deleting elements (e.g. text field, etc.).

Change Marker Type...

This menu item enables you to change the marker type.
The content is transferred (if possible).

Delete Marker Type

This menu item enables you to delete the marker type.

Format Painter

You can use this function to copy the formatting, font, color, etc. to another element.

Sort markers

Opens the sort dialog. Here, you can sort the markers by various sort criteria.

Flip Markers


This function enables you to flip the order of the selected markers.

Multi-level Terminal...

Opens the multi-level terminal dialog.

You can use this function to resort selected data with a predefined step (see chapter "Multi-level terminals").

View menu

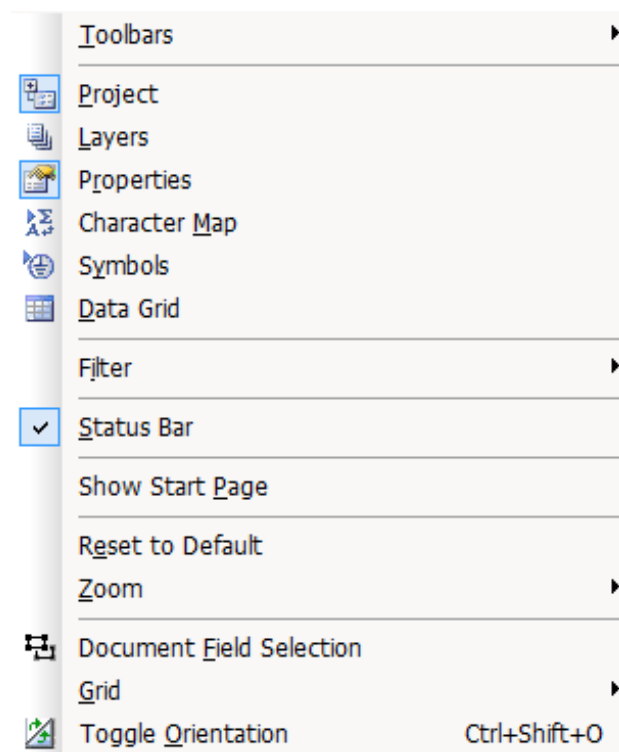

Toolbars

This menu item contains the following submenu items.

Standard

The "Standard" toolbar cannot be disabled.

Layout

To position elements (e.g. rotating, alignment)

Format Text

Contains text formatting functions like font and font size, color, etc.

Format Element

Contains the functions for formatting text elements such as

line thickness or fill color.

Element

Selection box for inserting all available elements, such as text fields, images and barcodes.

Docking Bars View

This opens a window in which you can show or hide the various editing windows such as "Properties" and "Layers" and the Project Explorer.

Header Line

This option shows/hides the title bar showing the application name and version.

Customize...

This shows a dialog box in which you can change the way the toolbar icons are displayed on screen, or even create new toolbars.

Project

Showing or hiding the Project Explorer.

Layers

Showing or hiding the "Layers" window.

Properties

Showing or hiding the "Properties" window.

Character Map

Showing or hiding the "Character Map" window.

Symbols

Showing or hiding the "Symbol" window.

Data grid

Showing or hiding the data grid.

This table is used for data entry. The data is shown simultaneously on the markers (see chapter "Data grid").

Filter

Filters your current marker according to certain criteria so that only the filtered result is shown (see section "Filter functions").

Status bar

Showing or hiding the status bar.

Show Start Page

Showing or hiding the start page in the workspace.

Reset to Default

Resets all changed settings to default.

Zoom

This menu item contains the following submenu items.

Maximize

Maximize the drawing area display

Minimize

Minimize the drawing area display

Original size

Reset the size of the drawing area display

Document Field Selection

When a marker is selected, all marker fields are selected.

Grid

This menu item contains the following submenu items.

Show

This option places gridlines over the marker type
You can use the gridlines to help you align the elements
(see chapter "Snapping elements to the grid").

Snap to Grid

Here you specify whether you want elements to snap to the gridlines.


Toggle orientation

In the rotated view, all elements are shown rotated by 90°. The elements (e.g. barcode or text) can still be edited in WYSIWYG mode in the rotated view.



The rotated view is possible for all marker types that are NOT "endless".

Insert menu

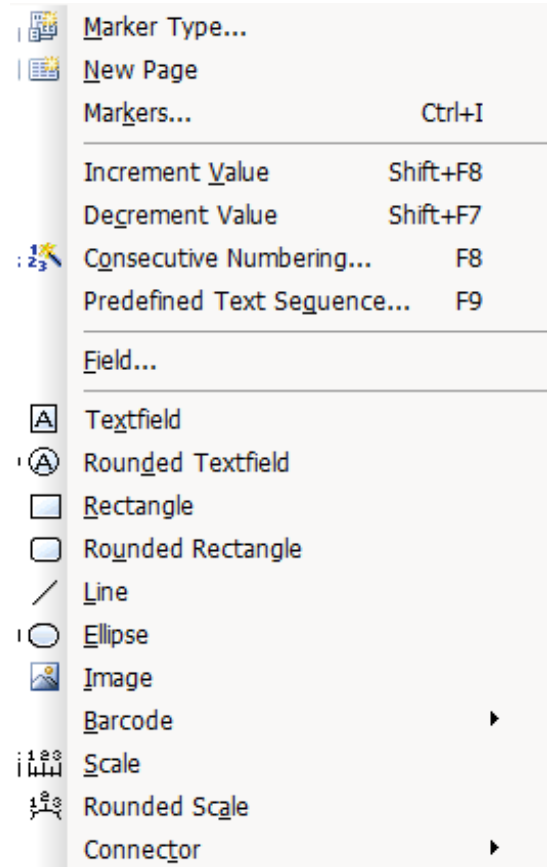

Marker Type...

You can insert a new marker type via this shortcut menu item. The product catalog is shown for selection.

New Page

Adds a new page for the current marker type.

Markers...

Adds a selectable number of markers to the marker type.

To insert endless strips, see chapter "Endless strips".

Increment Value

The numeric value of a marker/text element is incremented and inserted in the next marker/text element.




The previous content of the target text field is overwritten!

Decrement Value

The numeric value of a marker/text element is decremented and inserted in the next marker/text element.



The previous content of the target text field is overwritten!


 The value is only decremented in the positive number range!

Consecutive Numbering...

This menu item allows you to number the markers automatically (see chapter "Consecutive numbering").

Predefined Text Sequence...

Inserts a predefined text sequence, see chapter "Inserting a predefined text sequence".

 Predefined text sequences are only possible for text elements.

Field

Here, you can insert the field functions (e.g. system date or page number).

Text field

Adds a text field.

Rounded text field

Adds a rounded text field.

Rectangle

Adds a rectangle.

Rounded Rectangle

Adds a rounded rectangle.

Line

Adds a line.

Ellipse

Adds an ellipse.

Image

Adds an image.

Barcode

This menu item opens another submenu, where you can add a barcode of the type shown (e. g. Code 39, Code 2/5 Industrial, EAN13) (see section "Inserting a barcode").

Scale

Adds a scale (see section "Inserting a scale").


Rounded Scale

Adds a rounded scale (see section "Inserting a scale").

Connector

Inserts various connectors. This is only active for endless strips (see "Endless strips").

Shape menu

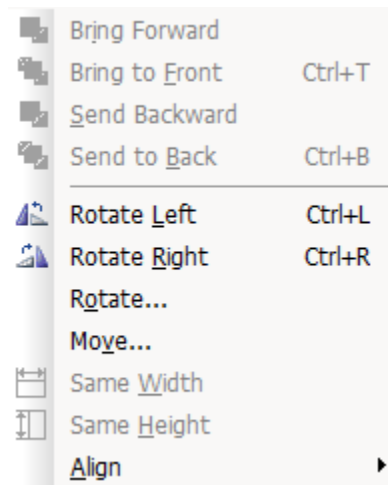


You can use this menu to set the layer of the shape, rotate it, move it and change the width and height.

Moving a shape


- Select **Shape > Move....**

The following window appears:

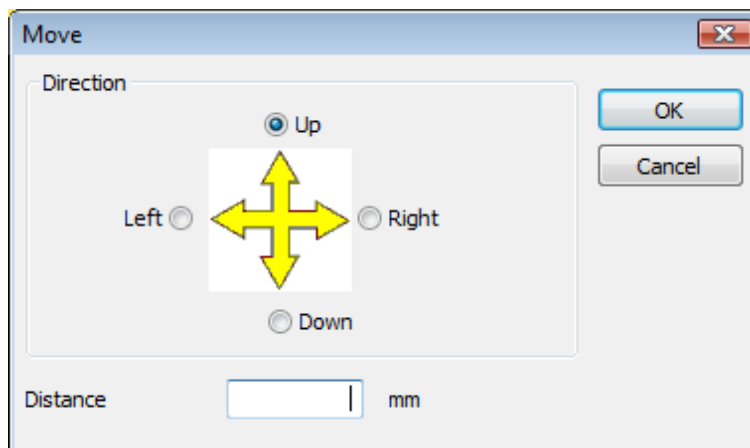

- Click on the relevant radio button to indicate the direction in which you want to move the element.
- Enter the number of millimeters (inches, μm , cm) you want to move the element. The unit of measure displayed depends on the settings in the options dialog.
- Confirm your input by clicking on **OK**.

Format menu

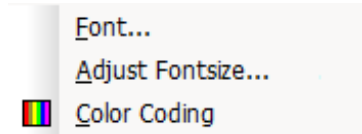


Font

This opens the window in which you can define the font, font size and so on.

Adjust fontsize in case of overflow

The font size of text fields with overflow can be adjusted automatically.

The optimal font size is determined so there are no longer any overflow fields present.

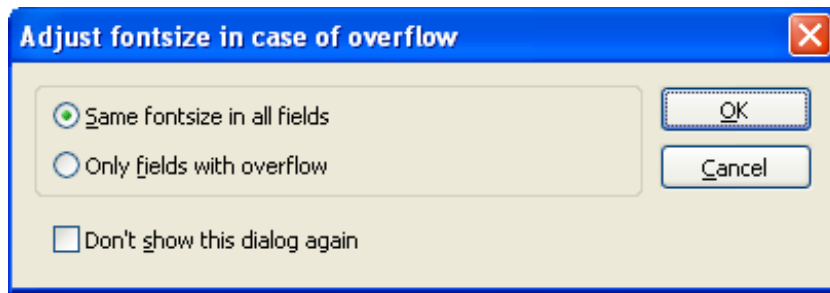


Color coding

Switches on color coding for the selected text fields (see chapter "Color coding").

Layout menu

The "Layout" menu can only be used with a special license.
Please contact the program producer to get the license or the user guide for it.

Tools menu

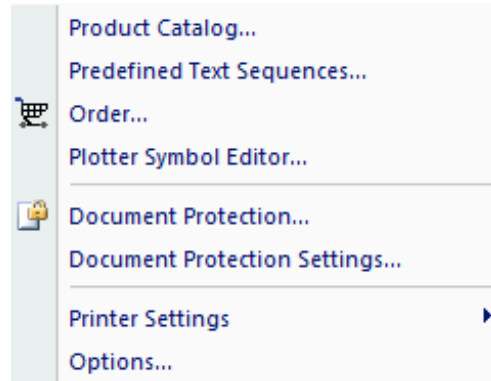

Product Catalog...

Open the "Product Catalog" window, e.g. to add a new marker type to the current project.

Predefined Text Sequence...

You can use this menu item to define a text sequence which you can then insert via **Insert > Predefined Text Sequence...** (see also chapter "Defining a predefined text sequence").



Predefined text sequences are only possible for text elements.

Order...

The Order Wizard enables you to order marker types from the currently open project by e-mail (see chapter "Orders, Order Wizard").

Plotter Symbol Editor...

Opens the Plotter Symbol Editor (see section "Symbol Explorer/Plotter Symbol Editor").

Document Protection...

This enables or disables document protection. If no password has been set for document protection yet, the settings dialog opens (see chapter "Document protection").

Document Protection Settings...

Via the document protection settings dialog you can set a new password or remove document protection (see chapter "Document protection settings").


Printer Settings

- **Set Printer Correction...**
This adjusts the printer's feed rate (see section "Printer correction").
- **Set Material-dependent Slip...**
With this menu item, you can correct the material slip.

Options

Opens the options dialog where you can define various personal settings, such as the unit of measure, color of grid lines etc. ... (see chapter "Options dialog").

Window menu

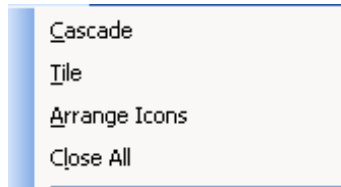

Cascade

Select this menu item to arrange the open marker types and start page so they overlap each other.

Tile

Select this menu item to arrange the open marker types and start page so they are on top of each other in the workspace.


Arrange Icons

This menu item minimizes all windows to icon size.

Close All

This menu item closes all marker types. If you have not saved the file, a message box appears.

Help menu

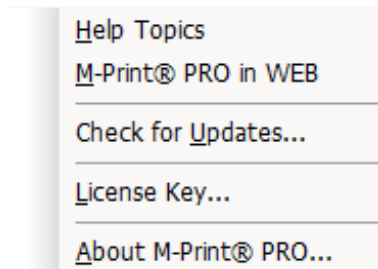

Help Topics

This menu item takes you to online help.

Program on the Web

This menu item opens the program's website in your default browser.

Check for Updates...

This looks on the Internet for current updates for the software.

License Key...

This menu item opens the licensing process window. Here you can, among other things, see the program's license key if it has already been entered (see section "Licensing").

About ...

Displays the version number.

Toolbars

This chapter describes the most important elements of the toolbars.
Many of the standard icons such as Save, Format etc. are not described any further.

Standard

The "Standard" toolbar is always visible.



Description of icons:



Closing the file

Closes the open project. A confirmation prompt concerning saving might appear.



Toggle plot mode

Switches the view to plot mode.
Unplottable elements (e.g. barcode, rectangle) are not shown in plot mode.



Toggle orientation

Switches the view in the workspace between horizontal and vertical.
Not possible for endless strips.



Duplicate

Duplicates the selected elements.



Grouping

Groups the selected elements (or groups) as a new group (see section "Grouping").




Ungroup

Ungroups the selected group.



Consecutive numbering

Opens the dialog for consecutive numbering (see chapter "Consecutive numbering").



Start / exit Excel editing

The content of text and barcode fields can also be edited in Excel (see chapter "Excel editing").



Toggle between active layers

Switches between the project and marker layers.
Toggling can be automatic (see chapter "Options view").



Show or hide document field selection

When you click on an element (e.g. text, image), the associated elements are marked on the other marker (this does not apply to single fields).

Example of showing:



Example of hiding:



Lock element

Locks the selected element against format changes. Content (e.g. text) can still be adjusted (see also chapter "Locking elements").



Sort markers

Opens the dialog to sort the markers.



Synchronize content

Synchronizes the elements with a stored data source (see chapter "Synchronizing content").



Order

Opens the Order Wizard dialog (see chapter "Orders, Order Wizard").



Document protection

Protects the open file against layout changes or removes document protection (see chapter "Document protection").

Layout

You can show or hide the "Layout" toolbar through the menu bar via **View > Toolbars > Layout**.



The icons enable you to edit the selected elements as follows:

- arrange them
- align them
- rotate them
- adjust their size

Format Text

You can show or hide the "Format Text" toolbar through the menu bar via **View > Toolbars > Format Text**.



Description of icons:



Choose font

Choose the font for selected text or text elements.



Choose font size

Choose the font size for selected text or text elements.



Increase font size

Increase the font size for selected text or text elements.
Each click on the icon increases the font size by one.



Decrease font size

Decrease the font size for selected text or text elements.
Each click on the symbol decreases the font size by one.



Increase / decrease character spacing

The character spacing for the selected text elements is increased or decreased.



Increase / decrease row height

The row height for the selected text elements is increased or decreased.



Bold

Format the selected text or text elements in bold.



Italic

Format the selected text or text elements in italics.



Underline

Underline the selected text or the content of text elements.



Strikethrough

Strike through the selected text or the content of text elements.



Align left



Center



Align right



Vertical alignment top



Vertical alignment center



Vertical alignment bottom



Set text orientation to 0°



Set text orientation to 90°



Set text orientation to 180°



Set text orientation to 270°



Change text color

Choose the color of selected text or of the content of text elements.



Color coding

Applies the defined color coding to the selected text element (see chapter "Color coding").

Format Element

If you cannot see this toolbar, select **View > Toolbars > Format Text**.



You can also use the "Properties" window to change the color and fill pattern (see section "Border and fill").

Description of icons:



Line color

If you now draw a new line, it will have the chosen color.

To change the color of existing lines, first select the lines and then choose the color you want.



Line thickness

If you now draw a new line, it will have the chosen thickness.

To change the thickness of existing lines, first select the lines and then choose the thickness you want.



Line type

If you now draw a new line, it will have the chosen line type.

To change the type of existing lines, first select the lines and then choose the type you want.



Fill color

Change the fill color of selected elements.



Fill pattern

Change the fill pattern of selected elements.

Elements

You can show or hide the "Elements" toolbar through the menu bar via **View > Toolbars > Elements**.



Description of icons:



Select

Tool to select elements.

Can also be used in combination with the Ctrl and Shift keys.



Multiple selection

(See chapter "Selecting elements").



Text field

Drag the mouse on the marker to create a text field.



Rounded text field

Drag the mouse on the marker to create a rounded text field.



Create rectangle / square

Drag the mouse on the marker to create a rectangle.



Create rounded rectangle / square

Drag the mouse on the marker to create a rounded rectangle.



Draw line

Drag the mouse on the marker to draw a line.



Draw circle / ellipse

Drag the mouse on the marker to create an ellipse.



Insert image

Drag the mouse on the marker to create a frame and select an image.

The program supports the image formats BMP, EMF, GIF, ICO, JPG, PNG, WMF and TIFF.



Inserting a barcode

Drag the mouse on the marker to create a barcode field.

The program supports the following barcode types:

- Code 39
- Code 128
- Code 2/5 Industrial
- Code 2/5 Interleaved
- EAN13
- EAN8
- EAN128
- UPC-A
- UPC-E
- QR-Code
- DataMatrix

You can adjust the barcode type in the "Properties" window (see section "Content").



Drag the mouse on the marker to create a straight scale. A dialog box opens for further settings (see chapter "Inserting a scale").



Drag the mouse on the marker to create a rounded scale. A dialog box opens for further settings (see chapter "Inserting a scale").



Drag the mouse on the marker to create a connector. You can adjust the connector type in the "Properties" window.
This is only active for endless strips.



You can set the exact size and position of elements in the "Properties window".



You will find further instructions for inserting elements in chapter "Commonly used functions".

Docking Bars View

You can show or hide the "Docking Bars View" toolbar through the menu bar via **View > Toolbars > Docking Bars View**.



Description of icons:



Show or hide Project Explorer

See also chapter "Project Explorer".



Show or hide layers

See also chapter "Layers".



Show or hide properties

See also chapter "Properties window".



Show or hide character map

See also chapter "Inserting special characters".



Show or hide symbols

See also chapter "Inserting symbols".



Show or hide data grid


See also chapter "Data grid".

Project Explorer

- You can show or hide this through the menu bar via **View > Project**.

When you open a project, it appears in the Project Explorer, with its subprojects. The individual marker types are shown for each subproject. The associated pages are among the marker types.

To see the details or to get a better overview, you can expand or reduce the lower-level hierarchical structures in the Project Explorer by left-clicking on the "+" and "-" icons:

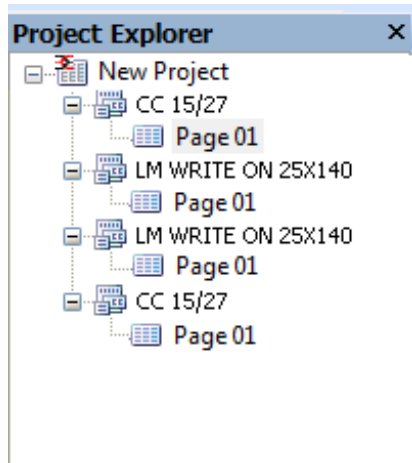


- i** If you press **x** on the numeric keypad of your keyboard, you can open all the sublevels of a hierarchical level at once.

Shortcut menu

Click on an object in the Project Explorer, then press the right mouse button.

This opens the shortcut menu.

The shortcut menu contains functions that are relevant to the particular object, i.e. only the functions in dark type are available.

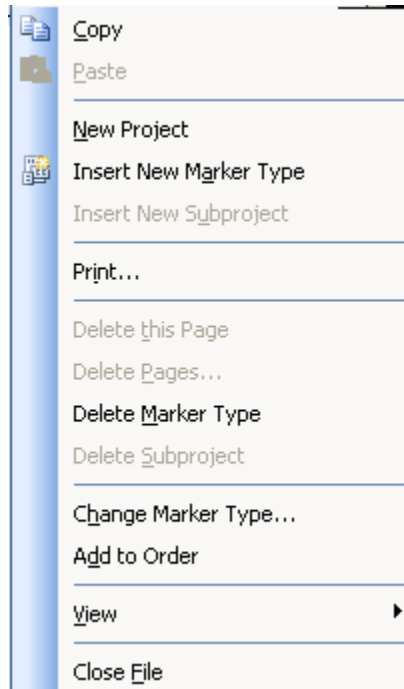

Copy

You can use this shortcut menu item to copy a selected marker type or subproject.

Paste

Select the project or subproject to which you want to paste the copied marker type or subproject.

New Project

This shortcut menu item enables you to create a new project.

Insert New Marker Type

You can insert a new marker type via this shortcut menu item. The new marker type will then appear in the Project Explorer.

Insert New Subproject

You can insert a subproject below the current project or subproject via this shortcut menu item.

Print

This opens the dialog box for printing marker types.

Delete this Page

Select the page you want to delete.

Delete Page

A selection dialog enables you to select the pages to be deleted.

Delete Marker Type

This shortcut menu item deletes the currently selected marker type. The deleted marker type no longer appears in the Project Explorer.

Delete Subproject

This item removes the currently selected subproject. The deleted subproject no longer appears in the Project Explorer.

Change Marker Type...

This menu item enables you to change the marker type.

Add to Order

You can add the selected article to your order list with this shortcut menu item (see section "Orders, Order Wizard").

View

Here you can switch between different views (see section "View menu").


Closing the file

The current project is closed. If you have not saved it yet, a confirmation prompt appears.

Properties window

The properties of the various elements (e.g. text field, image, barcode or scale) are visible in the "Properties" window.

- To show or hide, select **View > Properties** on the menu bar.

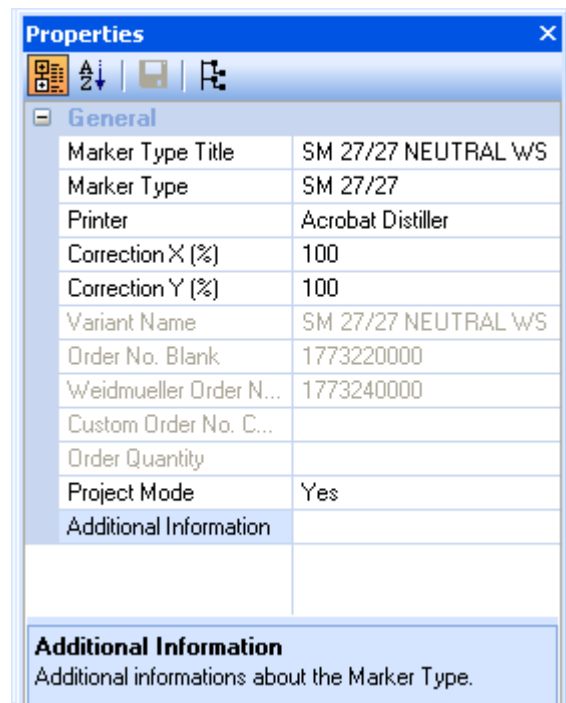

The view of the "Properties" window can be selected via the icon buttons.



Show properties sorted by categories.



Show properties sorted alphabetically.



The defined properties are saved as defaults for the selected object.
The properties of "locked" fields cannot be set as defaults. Unlock them first (see section "Behavior").




This displays all layers and the elements in the layers in a tree structure.

You will find more information in chapter "Marker properties".

Marker properties

If you click on the marker name in the Project Explorer, the marker properties are displayed.

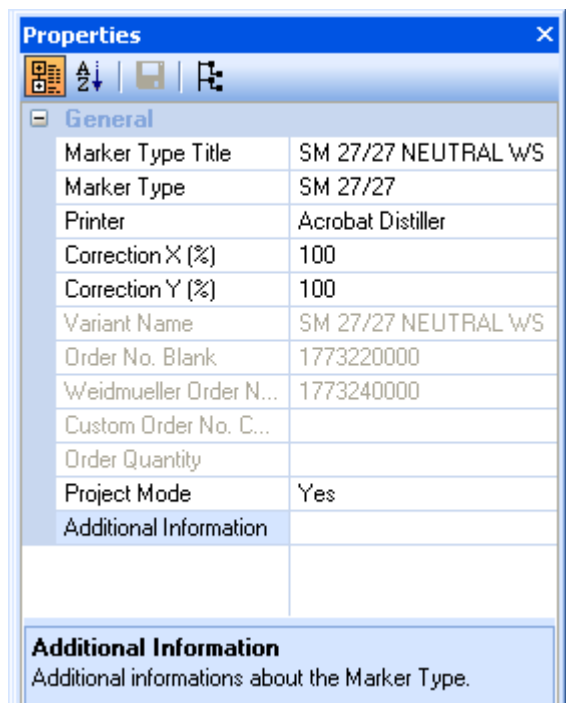

Marker type title - Title of marker type
 - You can change the name.

Marker type The selected marker type.
 If you select another marker type here, the program tries to apply
 the content (see also "Edit menu").


Printer The printer mapped to the marker type (see also "Printing").

Correction The saved printer corrections.

Project mode Whether project mode has been selected or not. (See also chapter
 "Options dialog").

Showing properties

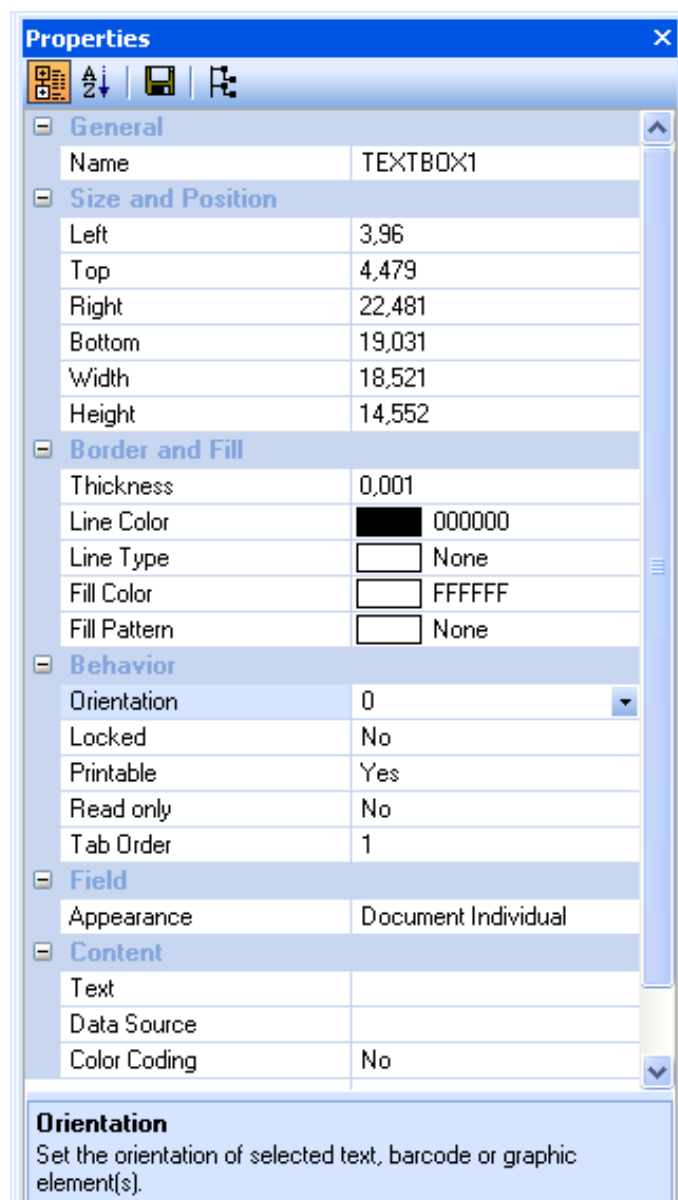



- To show the "Properties" window, select **View > Properties**.
- Click on the element with the properties you want to change.



The screenshot shows the 'Properties' window for a text box element named 'TEXTBOX1'. The window is organized into several sections: General, Size and Position, Border and Fill, Behavior, Field, and Content. The 'General' section shows the name 'TEXTBOX1'. The 'Size and Position' section shows coordinates for Left, Top, Right, Bottom, Width, and Height. The 'Border and Fill' section shows settings for Thickness, Line Color (black), Line Type (None), Fill Color (white), and Fill Pattern (None). The 'Behavior' section shows Orientation (0), Locked (No), Printable (Yes), Read only (No), and Tab Order (1). The 'Field' section shows Appearance (Document Individual). The 'Content' section shows Text, Data Source, and Color Coding (No). At the bottom, there is an 'Orientation' section with a description: 'Set the orientation of selected text, barcode or graphic element(s)'.

General	
Name	TEXTBOX1

Size and Position	
Left	3,96
Top	4,479
Right	22,481
Bottom	19,031
Width	18,521
Height	14,552


Border and Fill	
Thickness	0,001
Line Color	 000000
Line Type	 None
Fill Color	 FFFFFFFF
Fill Pattern	 None

Behavior	
Orientation	0
Locked	No
Printable	Yes
Read only	No
Tab Order	1

Field	
Appearance	Document Individual

Content	
Text	
Data Source	
Color Coding	No

Orientation
Set the orientation of selected text, barcode or graphic element(s).

-  The "Properties" window shows different properties, depending on the selected element.


Locked (grayed-out) properties are either not available or locked for the selected element. To unlock, set the "Locked" property to "No" (see section "Behavior").

Adjusting properties

The "Properties" window is subdivided into the following categories, which are described in more detail below.

- General
- Size and position
- Border and fill
- Behavior
- Field
- Content


General

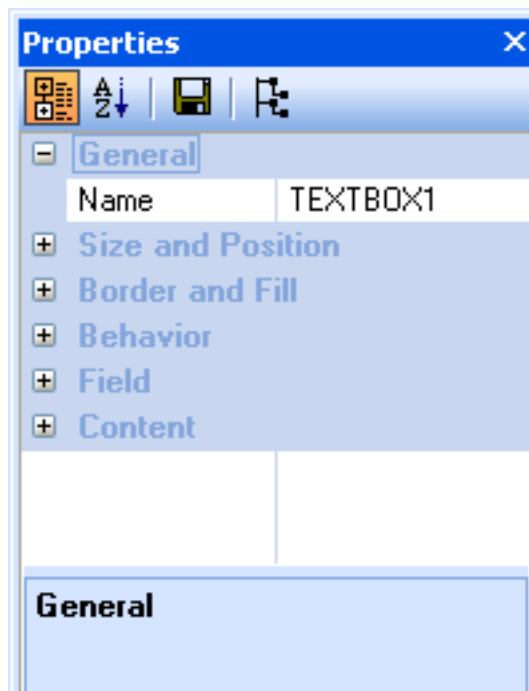

- Name
- Designation of the selected element.
 - You can change the name.
 - This name is also used in column mapping when files are imported (see chapter "Import – Field mappings").
 - This name also appears as a column heading in the data grid.

☞ The name must not contain special or blank characters!

Size and position

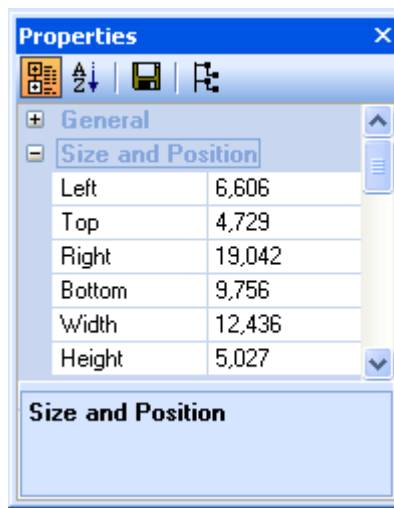


You can use this category to specify the size and position of the element.

- Distances are measured from the zero point, which is located in the top left corner of the MultiCard/label.
- The unit of measure is defined in the options dialog (see chapter "Options").

The "Moving elements" section describes alternative methods for moving an element.

Border and fill

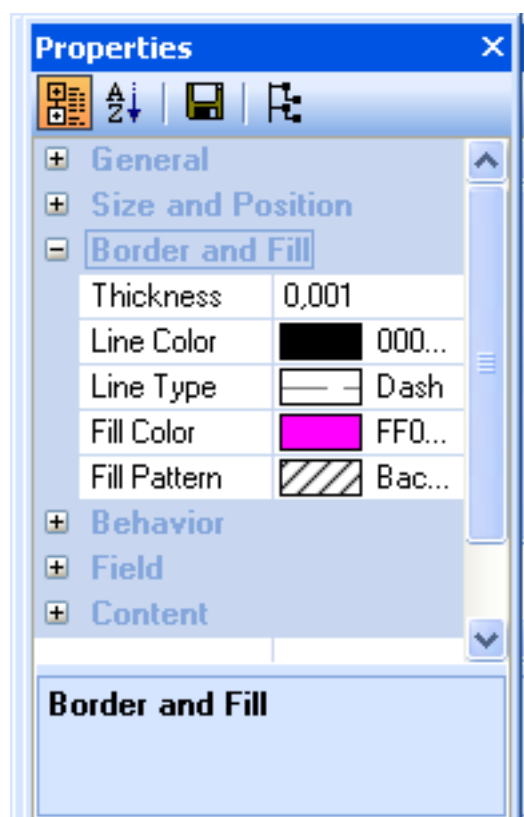


You can use this category to specify the line thickness, color, pattern and line type of the selected object. A color value can be entered directly for the color settings.

The color value is created as follows: RRGGBB (red, green, blue)
Enter the hexadecimal value.

Example: FF0000 is red



Behavior

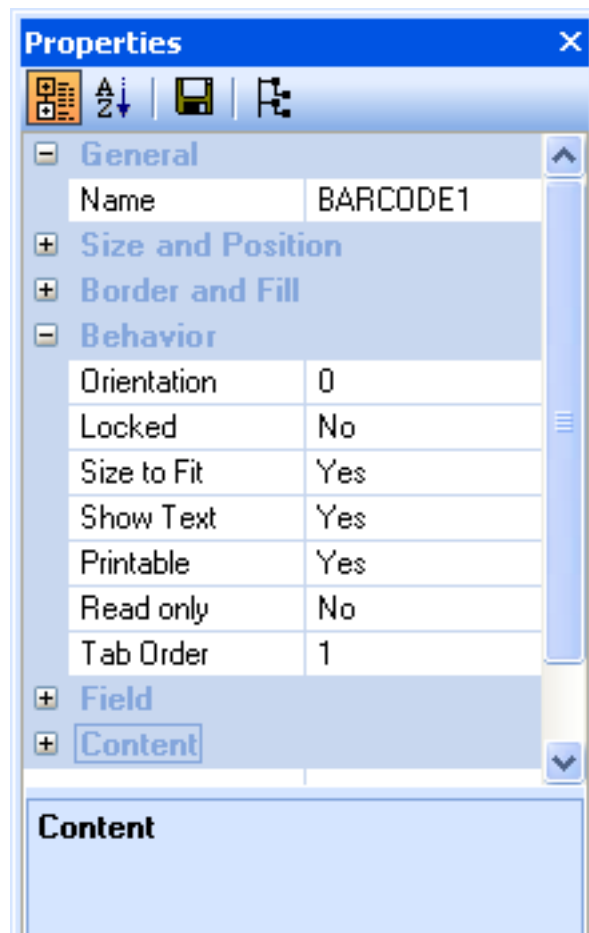

- | | |
|-------------|--|
| Orientation | <ul style="list-style-type: none">- Element orientation in steps of 90°.- Only for text field, image and barcode- Document-individual property |
| Locked | <ul style="list-style-type: none">- Element lock- Locked elements cannot be modified.- Exception: The content of text fields can still be modified.- The properties of locked elements cannot be set as defaults.- In addition, the lock can be protected with the document protection feature (see chapter "Document protection") |
| Size to fit | <ul style="list-style-type: none">- The content is adjusted to the size of the barcode or image field or displayed in original size- See example- Only for image and barcode |
| Show text | <ul style="list-style-type: none">- Shows or hides the plain text of a barcode field- Only for barcode |

- | | |
|-----------|---|
| Printable | - The element is or is not printed with the project. |
| Read only | - The content is locked so that it cannot be modified.
- Only for text field, image and barcode |
| Tab order | - Order by which the field is selected with the Tab/Enter key.
- Values from 1 to x are allowed
- Fields with the same tab order are selected in the order of their creation. |

Example:







Barcode		
Size to fit Yes		The barcode field is compressed horizontally. The numbers thus close up.
Size to fit No		The original distance between the numbers remains, but not all content is shown.

Image		
Size to fit Without		The image is shown in its original size.
Size to fit Proportionally		The image is adjusted to the dimensions of the image field and may be distorted.
Size to fit Rectangle		The image is adjusted to the dimensions of the image field. The proportions are retained.

Field

You can use the "Field" category to specify the type of the field.

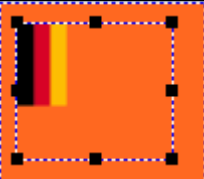


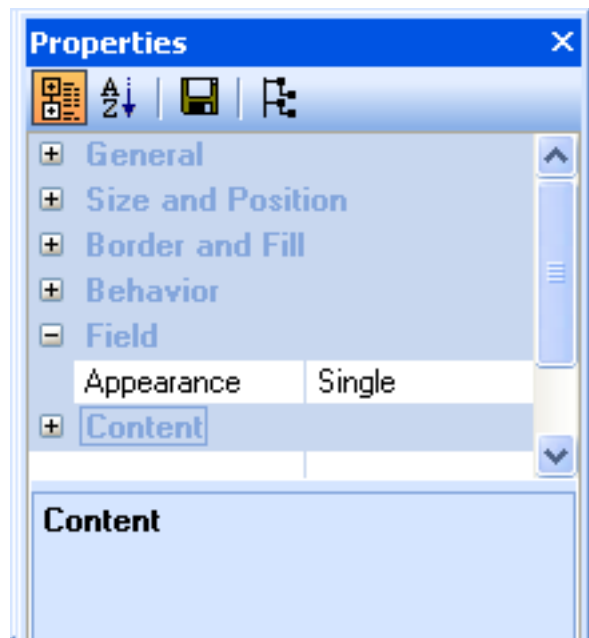You can choose from these field types:


- | | |
|---------------------------|---|
| Single field | <ul style="list-style-type: none">- A single field has no association with any other field.- Each single field has its own separate formatting and content.- If you make changes to a single field, the changes only apply to that particular field.- The opposite of a single field is a document field. |
| Identical document field | <ul style="list-style-type: none">- Exists on every marker area.- Has identical text content and position and formatting properties on every marker area. |
| Individual document field | <ul style="list-style-type: none">- Exists on every marker area.- Is a field with identical position and formatting properties on every marker area.- But it may have individual (different) texts/text formats on every marker area. |

Example:


Single field

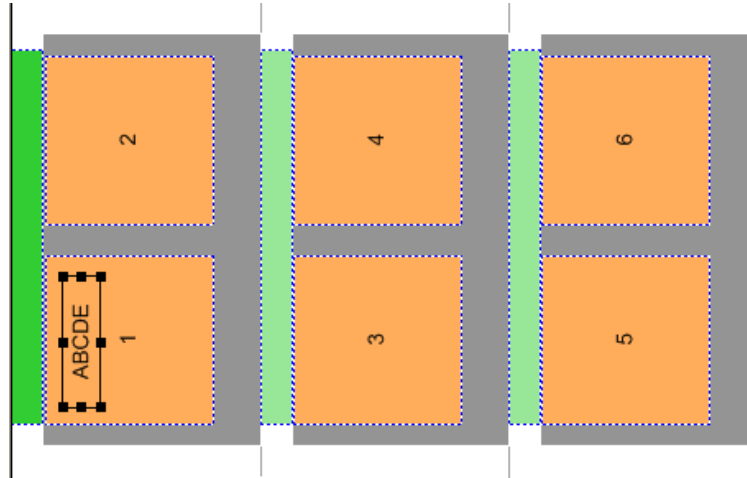

Identical document field

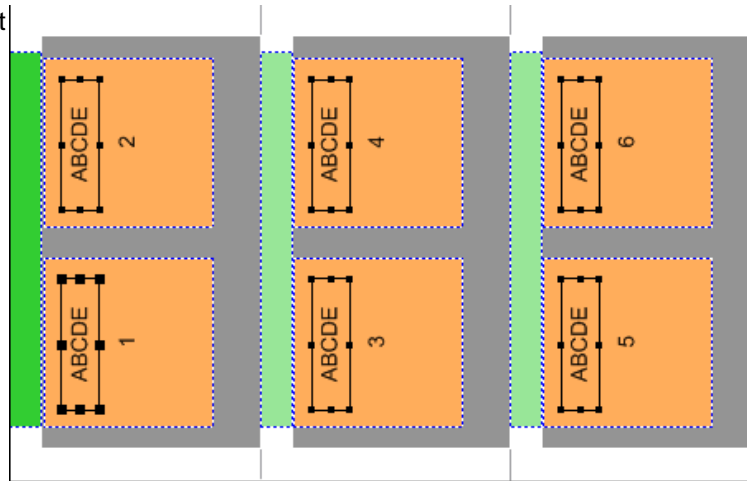


Individual document field

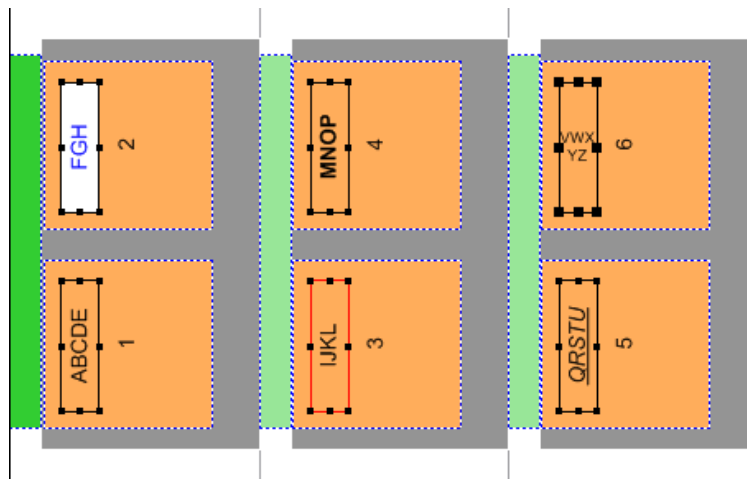

Content

The content of single elements.

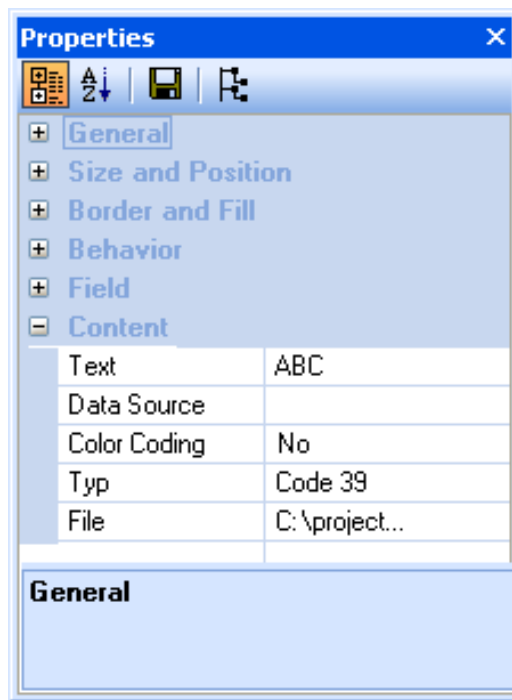

- | | |
|--------------|---|
| Text preview | <ul style="list-style-type: none">- The text content of the element.- Only for text field and barcode |
| Data source | <ul style="list-style-type: none">- The name of the element acting as the data source for synchronization (see chapter "Synchronizing content").- Only for text field and barcode |
| Color coding | <ul style="list-style-type: none">- The saved color coding is applied to numbers entered (see "Color coding").- Only for text field. |
| Type | <ul style="list-style-type: none">- For images: the way the image is inserted.<ul style="list-style-type: none">- <i>Path</i>: the image is inserted as a reference to an image file- <i>Embedded</i>: the image is embedded in the project- See also chapter "Saving an image in a file" and „Transferring an image from a file"- For barcodes: the selected barcode type (Code 39, Code 128, Code 2/5 Industrial, Code 2/5 Interleaved, EAN13)- Only for image and barcode. |
| File | <ul style="list-style-type: none">- If an image of the "path" type is inserted, the image is selected via "File".- Only for image. |


Anchor angle	<ul style="list-style-type: none">- Specifies the angle at which the text starts. 0 corresponds to the upper start position (12 o'clock).- For rounded text fields only.
Scale values	A description of the scale properties can be found in chapter "Scale properties".

Selecting elements



Click on this icon in the "Properties" window to specifically select elements.

This displays all layers and the elements in the layers in a tree structure.

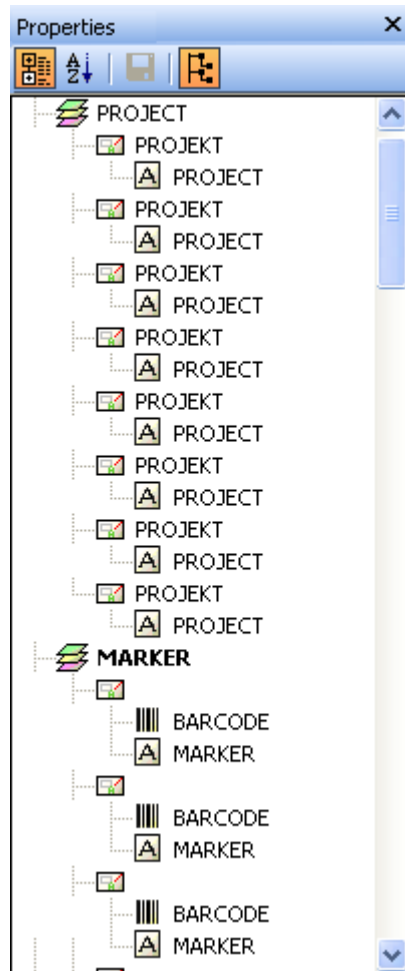

Example:

The illustration shows Page 01 with the project layer and eight project areas. You can also see the marker layer with one marker area containing a barcode and a text field.

Clicking on the barcode, for example, activates it in the marker area in the workspace, ready for editing.

This selection method is useful for elements in layers.


Workspace

The workspace shows the start page by default when the application is started (Menu **View > Show Start Page**).

When you open a project/marker type, it is displayed in the workspace.

Shortcut menu in the workspace

Right-click inside the workspace.
This shortcut menu appears:

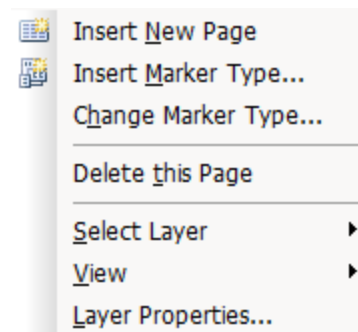

Inserting: New page

A new page is added to the active marker type in the workspace.

Insert Marker Type

You can use this shortcut menu item to add a new marker. The product catalog is shown, and you can select a marker type or a template to be inserted from it.

Change Marker Type...

A selection from the product catalog enables you to change the displayed marker type. The content is transferred (if possible).

Delete this Page

Select the page you want to delete.

Select Layer

Switch to another layer (e.g. marker layer, project layer).

View

Here you can switch between different docking bar views (see section "View menu").

Layer Properties

This shortcut menu item enables you to set the layer properties (e.g. color, lock).

Layers

The pages of a marker type are organized into the following layers:

- Locked layer
- Free layer
- Marker layer
- Project layer
- Background layer

In principle, a page consists of either four or five layers. A MultiCard page has all five layers. All other marker types (for example labels, credit-card formats etc.) have all the layers except the project layer.

Background layer

The purpose of the background layer is to provide visual support for the user. You can change the color of the background layer and add elements (text and images) to it. The entire area of this layer can be used. The background layer is always the bottom layer; it is not printed by default and is locked. It is a standard layer and cannot be removed.

Project layer

You can add text or images to the project layer, using the surface area defined for it in the layout. The project layer is always the second layer. It is printed by default and is not locked. It cannot be removed.

Marker layer

The marker layer is the third layer. This is where MultiCard mats or labels are actually captioned. You can arrange any number of text fields, shapes (lines, rectangles, etc.), images and barcodes, using the areas defined in the layout. The marker layer is printed by default. It cannot be removed.

Free layer

The free layer covers the entire surface area of the page. You can arrange text and images anywhere on the layer. The free layer is always under the locked layer. Unlike the other layers, it can be duplicated, and any added free layers can be removed. They can also be moved among each other. In addition, all free layers can be combined into a single free layer. There must always be at least one free layer. It cannot be removed. Free layers may be printed.

Locked layer


You can arrange elements (rectangles, lines, ellipses, scales) on the locked layer, covering the content of the other layers so they cannot be seen or printed. This layer is always the top layer. It cannot be removed.

For example, you could use the locked layer to create a circle at the position of a bore hole or an LED to prevent printing in this area.

Layers window

Here you can see all layers of a marker type (see also chapter "Editing layers").

- To show or hide, select **View > Layers** on the menu bar.

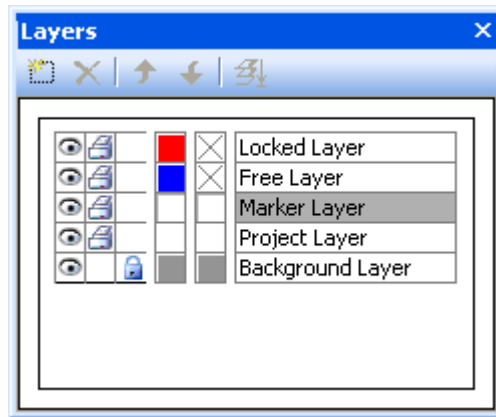

The "Layers" window has the following toolbar:



You can **only** use the icon buttons on the free layers.



Click on this icon to add a new free layer.



Click on this icon to delete the selected free layer.



Click on this icon to move the selected free layer up one layer.



Click on this icon to move the selected free layer down one layer.




Click on this icon to reduce all free layers to a single layer. You cannot undo this action.

- Click on the layer you want to change, then click on the relevant icon.

Layer properties

You can change the settings of layers via the "Layer Properties" window.

To open the "Layer Properties" window, double-click on the name of a layer in the "Layers" window:

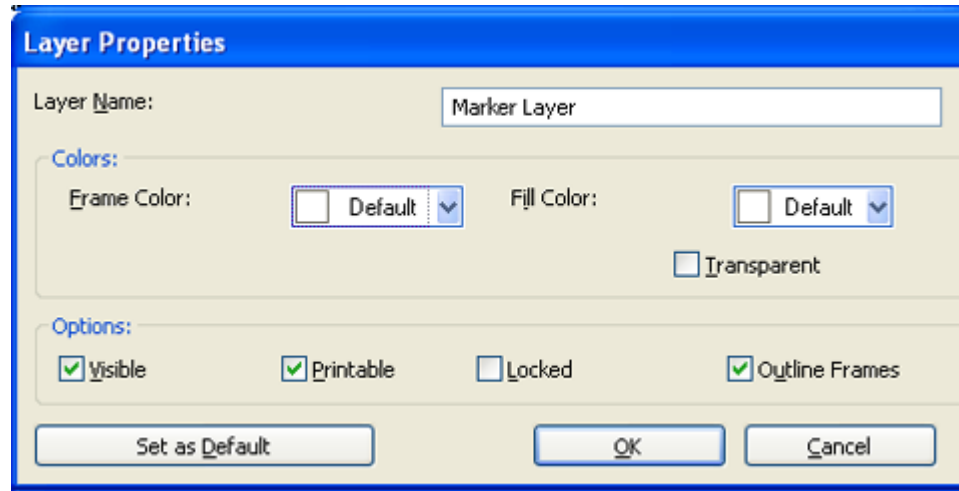

Here you can change the name, border color and fill color of the selected layer.

You can also specify whether you want the layer to be visible or not, and whether you want to print it or not. Here you can also define whether the layer should be locked or be available for editing.


After changing the settings, confirm by clicking on OK.

- ☞ If you click on the **Set as Default** button, you can save your settings and use them as the default settings the next time you open a new marker type.

Data Grid window

To show or hide, select **View > Data Grid** on the menu bar.

The data grid shows the content of text and barcode fields and allows the content to be managed (insertion, editing, copying/pasting).

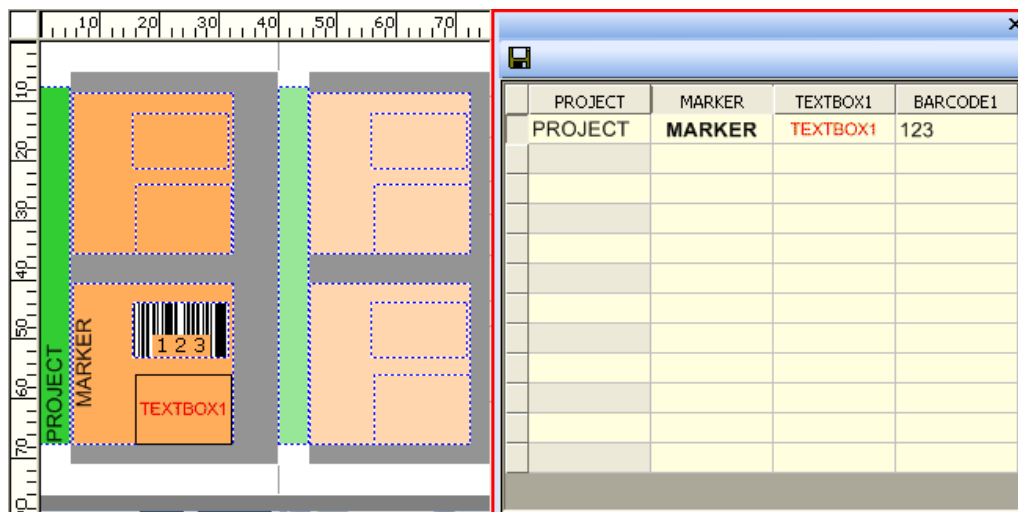

Defining the width of the data grid

You have several options to define the width of the data grid:



Sets the current width as the default for:

- the current marker type
- the whole program


Save project

When a project file is saved, the respective table widths of the open marker types are saved in it.
When the project file is opened, these table widths are available again.

The selected column widths and row heights are also saved.

Shortcut menu of the data grid

The shortcut menu of the data grid allows you to call up different general program functionalities.

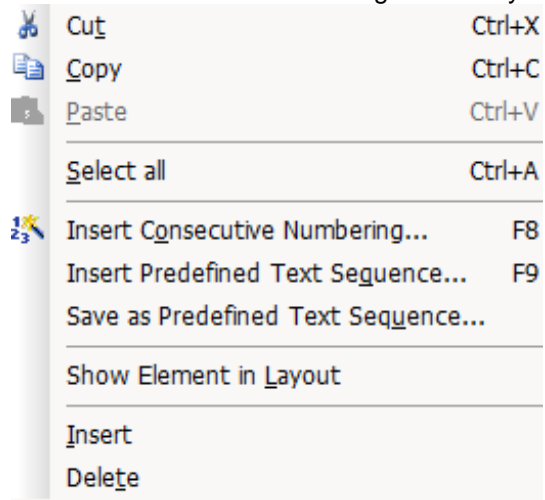

i To show and select a field of the data grid in the workspace, right-click into the field and select **Show Element in Layout** in the shortcut menu.

Row height and column width of the data grid

The row height and column width can be fitted to the optimal width or height of the table content. To do this, select the rows or columns in question and double-click on the gap of the column or row header to set the optimum value.


	PROJECT	MARKER	TEXTBOX1	TEXTBOX2

The selected column widths and row heights can also be saved, see ("Defining the width of the data grid").

Info page

An info page is displayed in addition for a marker type.

If you do not want the info page to be shown, you can disable it in the options dialog (see section "Environment" in chapter "Options dialog").

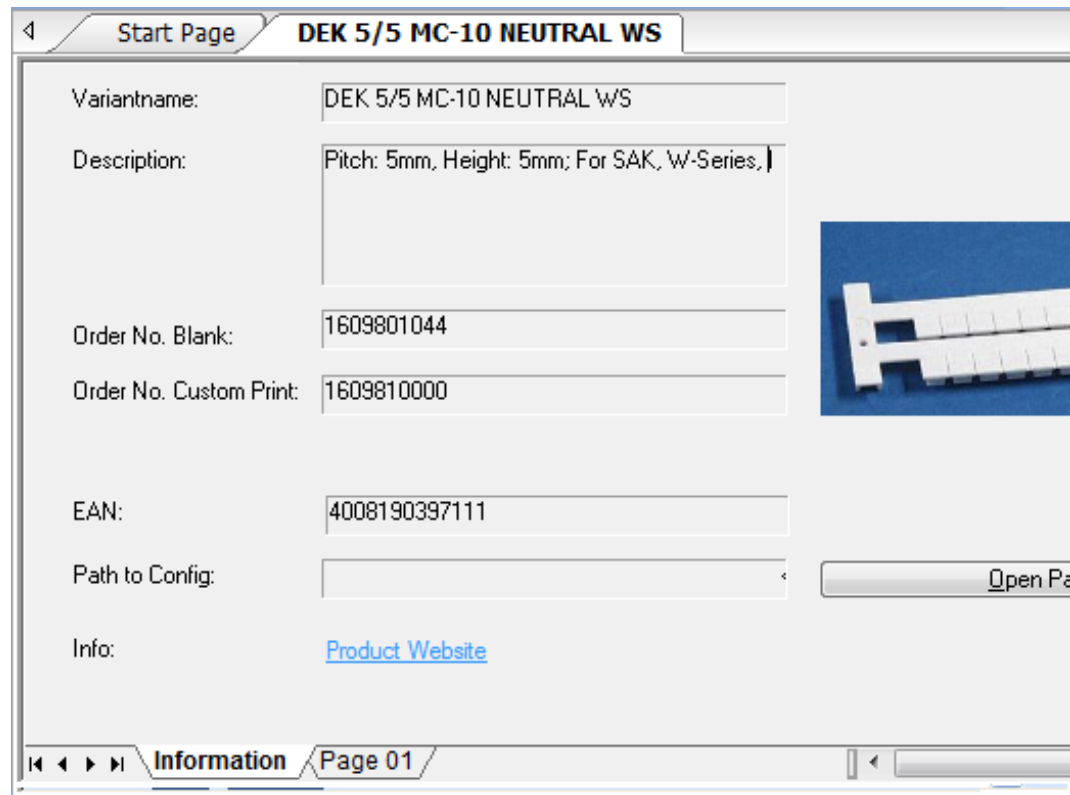

The screenshot shows a software window titled 'Start Page' with a sub-header 'DEK 5/5 MC-10 NEUTRAL WS'. The main area contains several input fields and a button. On the right side, there is a small image of a white marker strip. At the bottom, there is a navigation bar with 'Information' and 'Page 01' tabs.

Variantname:	DEK 5/5 MC-10 NEUTRAL WS
Description:	Pitch: 5mm, Height: 5mm; For SAK, W-Series,)
Order No. Blank:	1609801044
Order No. Custom Print:	1609810000
EAN:	4008190397111
Path to Config:	
Info:	Product Website

Open Pa

The following can be displayed, depending on the product:

Product layout

Path to configuration

Click on "Open Path..." to open the path to the product file (*.mcf) for the marker type.

Sort order

Definition whether sorting is in N-order or W-order.
The basic settings are defined via the product file.

PrintJet settings


If a PrintJet has been assigned (see "Mapping a printer to a marker type"), the heating settings and/or print quality for the printer are shown here. The values can also be set at this point for the product variant.

The print quality of the PrintJet **ADVANCED** can also be set in general via the

options dialog (see **PrintJet ADVANCED**“).

Select PrintJet Heating...

Click on this button to adjust the heating of the PrintJet printers.

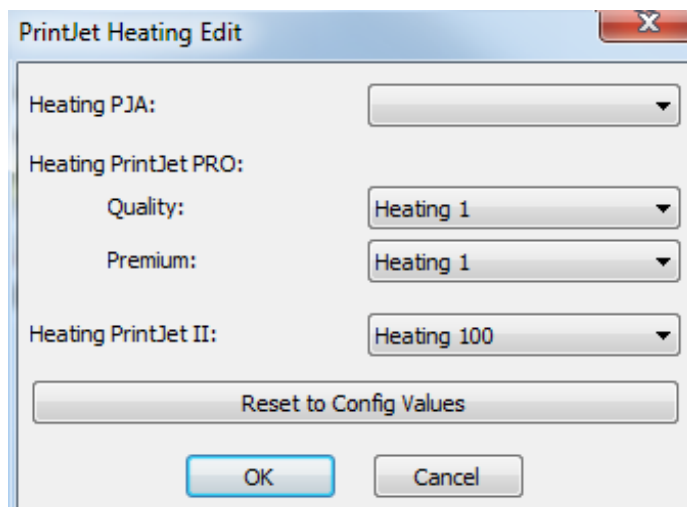

To fine-adjust the heating of the **PrintJet ADVANCED**, you can use the drop-down field "Heating PJA" to choose as follows:

- Much less heat
- Less heat
- Default Default value
- + More heat
- ++ Much more heat

Also see chapter "Options dialog", section "**PrintJet ADVANCED**", section "General".

Getting started

Introduction

This chapter is for users with a sound knowledge of Windows.

The following step-by-step explanation shows the main things you need to do to effortlessly add professional captions to marker types.

Step 1: Starting the program

- Double-click on the program icon on the desktop




or

- Call up M-Print® PRO via Start – Programs – Weidmüller – M-Print® PRO.

Step 2: Selecting the marker type


After starting the application, you will see the "Product Catalog" window:

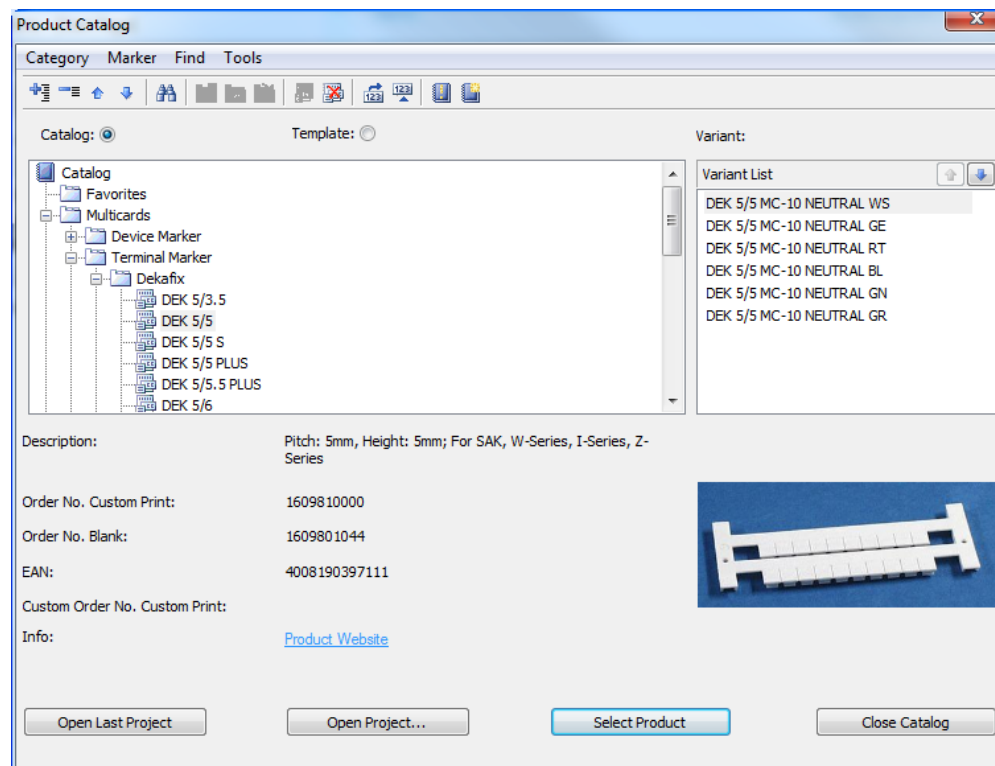


- In the left pane under "Catalog", click on the marker type you want to use. In the right pane, select the variant by clicking on it, then click on the **Select Product** button. The marker type is opened.

Step 3: Captioning the marker

- Select the marker you want to caption by left-clicking on it.

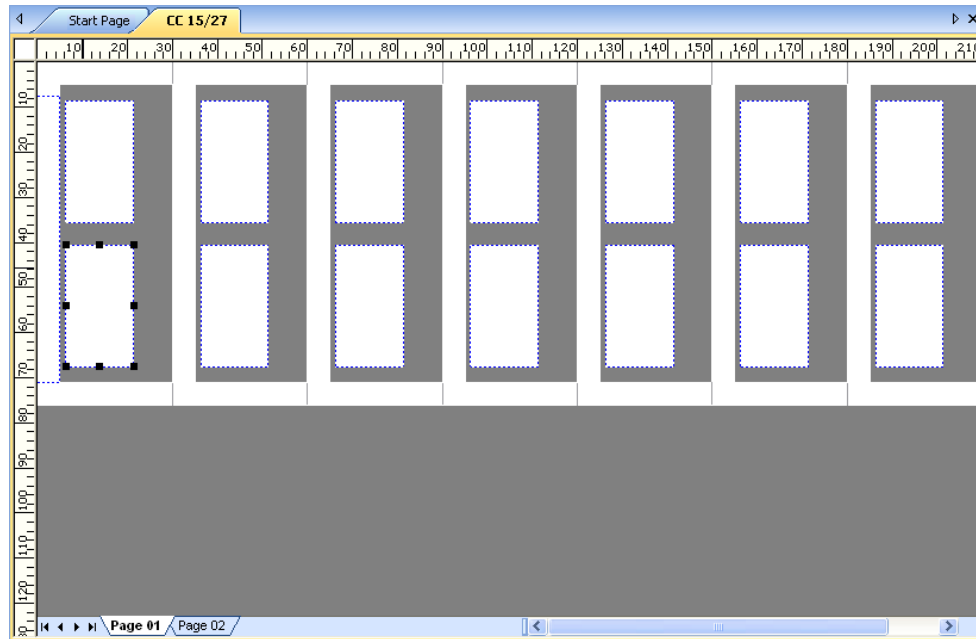

- To move to the next marker, press the **Enter** key or click on the marker you want to move to.



If a text field shows a red triangle when text has been inserted, the text does not fit into the field. Not all of the text is displayed or printed. In this case you must shorten the text or let the program fit it automatically (see chapter "Adjusting the font size").


Step 4: Saving the file

When you have entered all the text, you can save the file as follows:

- Select **File > Save** on the menu bar.
- In the next window, enter the file name and click on the **Save** button.

Step 5: Printing the marker type

- Select **File > Print....** on the menu bar.
- Select a printer from the printer list and click on **Map**.
- In the next window, select the printer type (printer/plotter).
- In the dialog that follows, you can define whether you want to map the output device to all variants of the product. Select "No" to assign just the selected variant.
- Select a marker type from the list and click on the **Print** button (see also chapter "Printing").

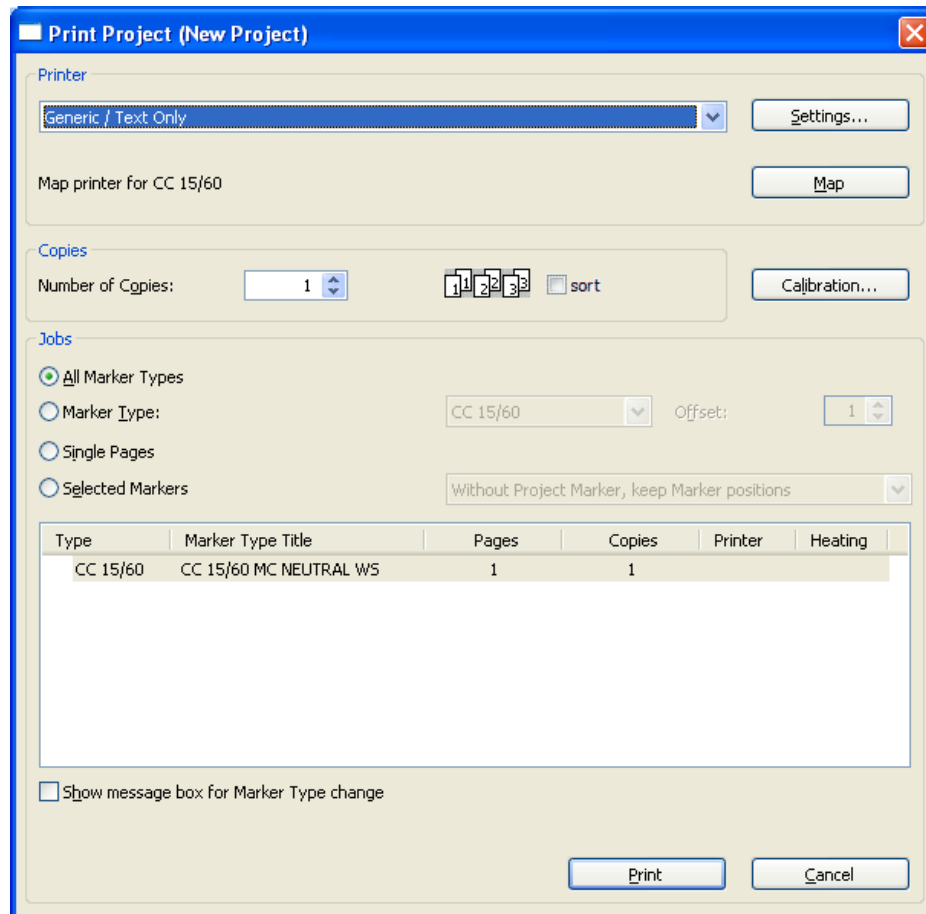

- i** If no printer has been mapped to any or all of the marker types to be printed, pressing the **Print** button sends the data to the default printer.
- h** If printing is not positioned properly, you must calibrate the printer (see chapter "Adjusting the printer to the marker type").

Step 6: Closing the file

- Select **File > Close** on the menu bar.

Managing projects

Project structure

A project (1) can be made up of a number of subprojects (2).

These subprojects can contain any number of MultiCards or labels.


A marker type can consist of several pages (4) and can include a range of elements, such as text, barcodes, images and shapes like lines, rectangles, etc. All images and barcodes are stored in dedicated folders.

Depending on its type, a MultiCard consists of a defined number of marker areas (6) and project areas (5), arranged in horizontal and vertical fields.


The marker areas are the areas actually containing the captioning information. They are on the marker layer.

The project areas are used to assign the marker to a particular project. They are on the project layer..

A project can have several marker types (3).

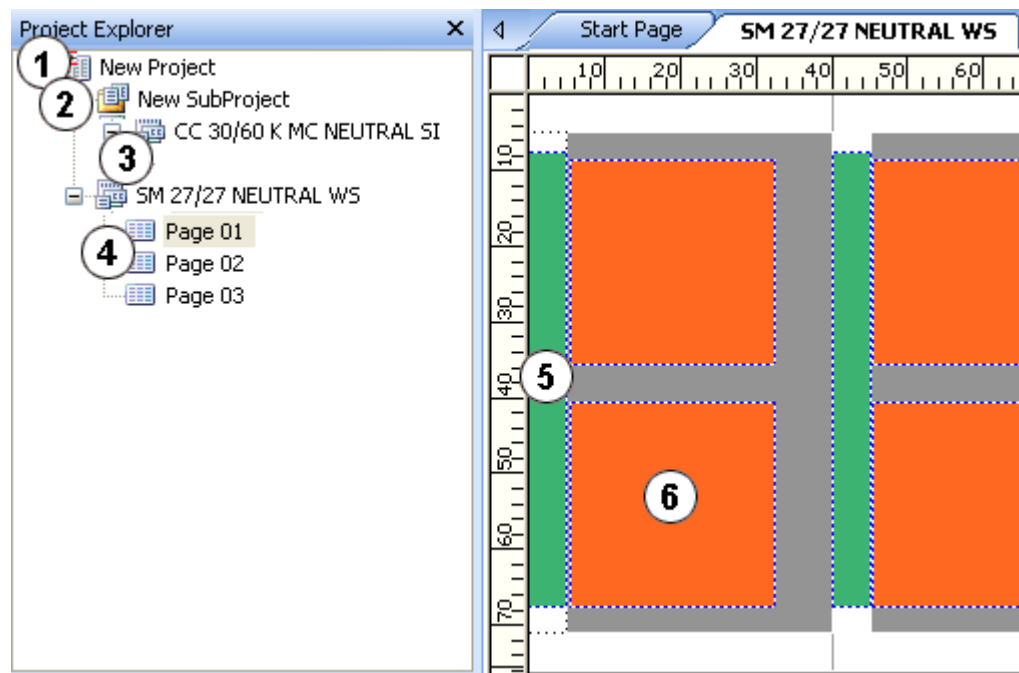


- i** The currently open file or the most recently opened file appears at the top of the list under the **Open** option on the start page.

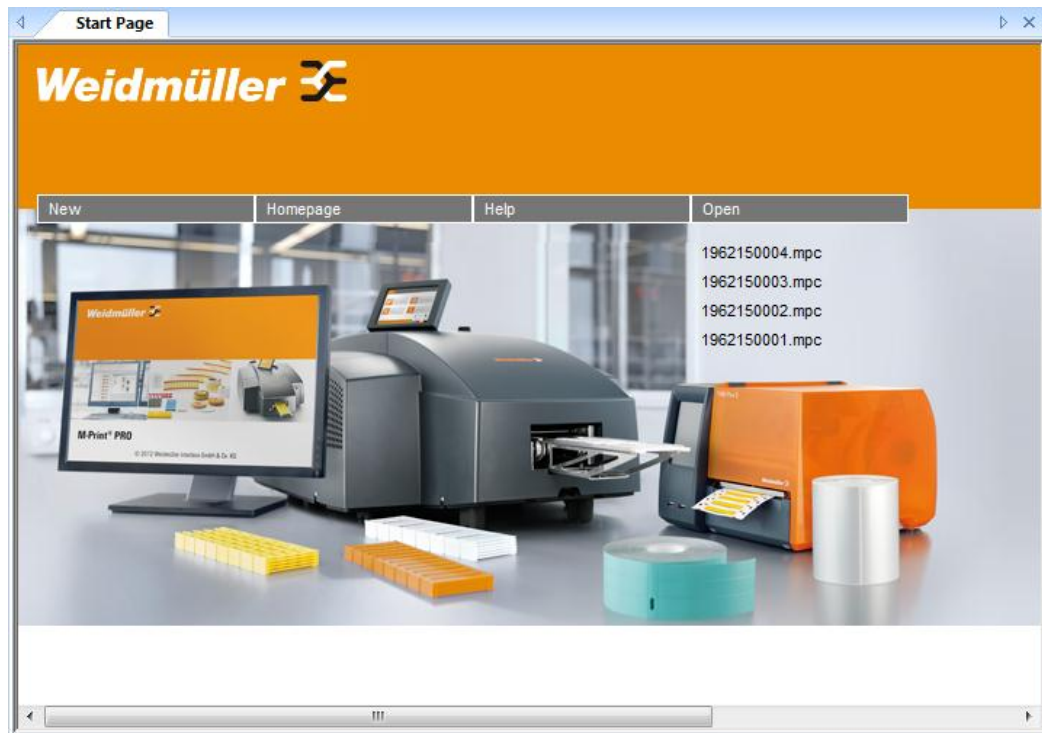

Changing the project name

When you open a new marker type, a new project category is created automatically, with the default name "New Project".

If the Project Explorer is not shown, see chapter "General operation".

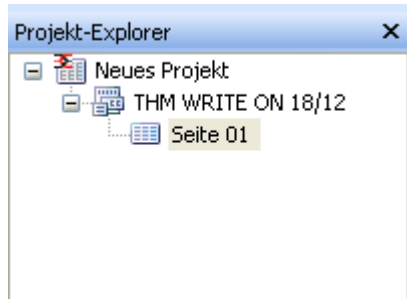

Follow these steps if you want to use a different name:


- Click on the "New project" category.



Click on this toolbar icon.

If the "Properties" toolbar is not shown, see chapter "General operation".

The "Properties" window appears.

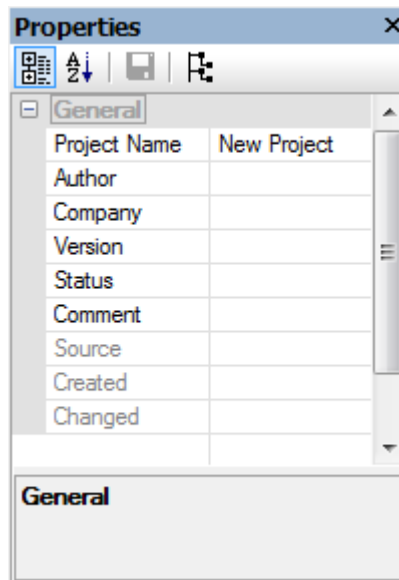


- Click inside the "New project" field and overwrite the entry with the project name you want to use.

Adding a marker type to a project


You can assign several marker types to a project.

- Right-click inside the Project Explorer.

The following shortcut menu appears:

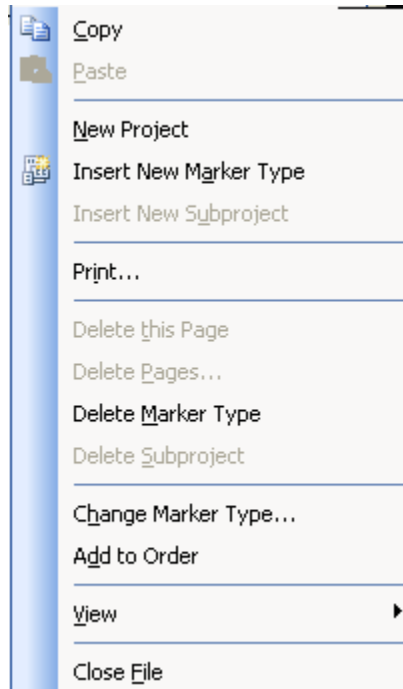

- Select **Insert New Marker Type** on the shortcut menu. Follow the steps shown in the dialog, and the marker type is inserted in the Project Explorer.

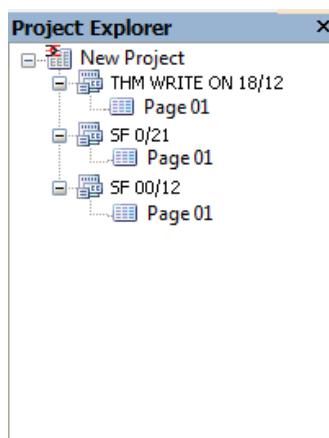


Adding a subproject

To make it easier for you to manage the marker types in a project, you can organize them in subprojects.

Follow these steps to add a subproject:


- Click on the main project at the top of the hierarchy, then press the right mouse button.

The following shortcut menu appears:

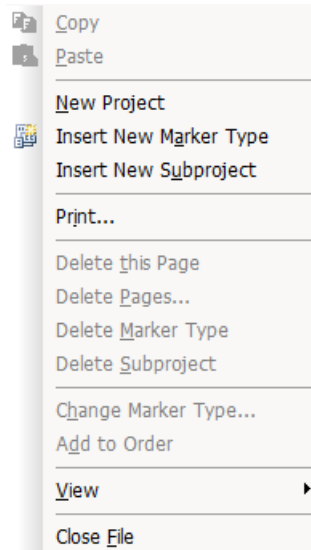

- Select **Insert New Subproject** on the shortcut menu.

The subproject is placed in the hierarchy below the main project.

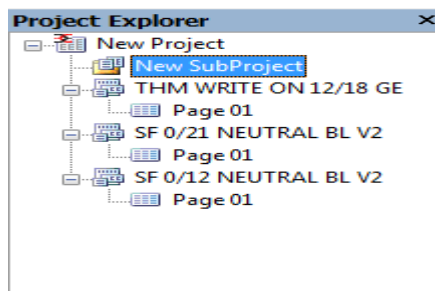


Adding a marker type to the subproject

- Click the subproject and add a new marker type via the shortcut menu (see also section "Adding a marker type to a project").

Follow these steps if you want to add an existing marker type to the subproject:


- Left-click on the marker type you want to move and hold down the mouse button.
- Keeping the mouse button pressed, drag the marker type to the subproject.

The marker type now appears in the hierarchy under the subproject.

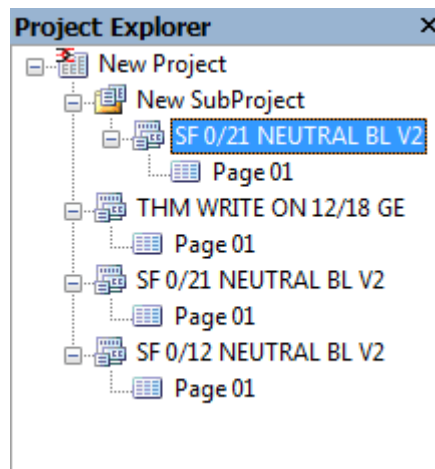

Removing a marker type


- Click on the marker type you want to remove, then press the right mouse button.

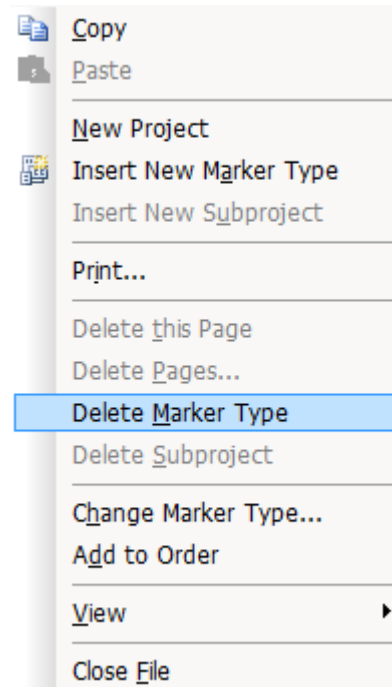

- Select **Delete Marker Type** on the shortcut menu.

Removing a subproject


- Click on the subproject you want to remove, then press the right mouse button.

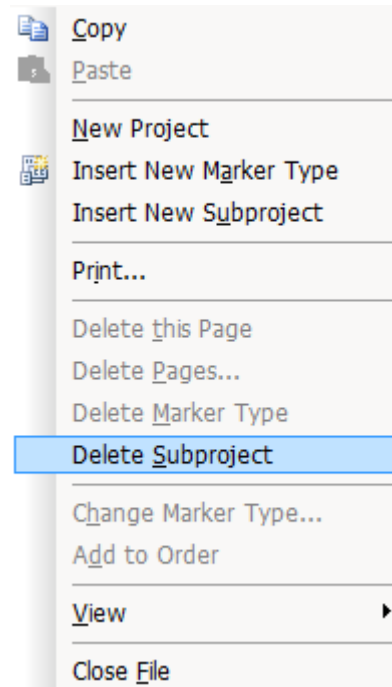

- Select "Delete Subproject" on the shortcut menu.
- ☞ The subproject is removed along with all its associated marker types.

Closing the project

- Right-click inside the Project Explorer.

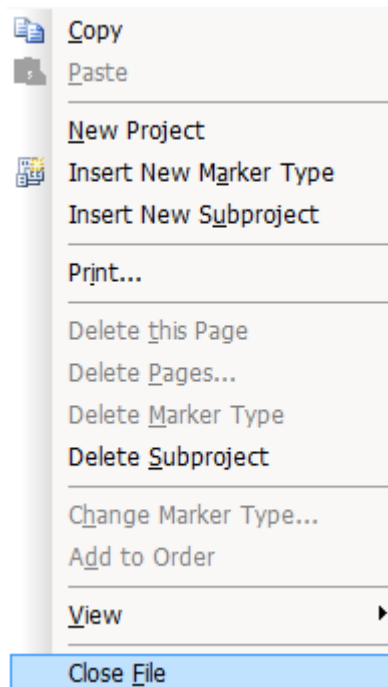

- Select "Close File" on the shortcut menu.



If the file has not been saved, a message box appears asking whether you want to save the file or not.

Product catalog

Introduction

The product catalog contains all the products, with variants, that are available for you to use in the application.

The "Product Catalog" window opens automatically when you start the program: There you can:

- Select a marker type
- Open the most recently edited project
- Open a particular project


The "Product Catalog" window can also be used to organize products.

For example, you can keep products in a special product category if you use them regularly. To do this, you create a new category, then add the relevant products to it.


This chapter describes how you can work with the catalog, how to find a product and how to remove products and categories.

Opening the Product Catalog window

- Open the product catalog by clicking on **Tools > Product Catalog**.

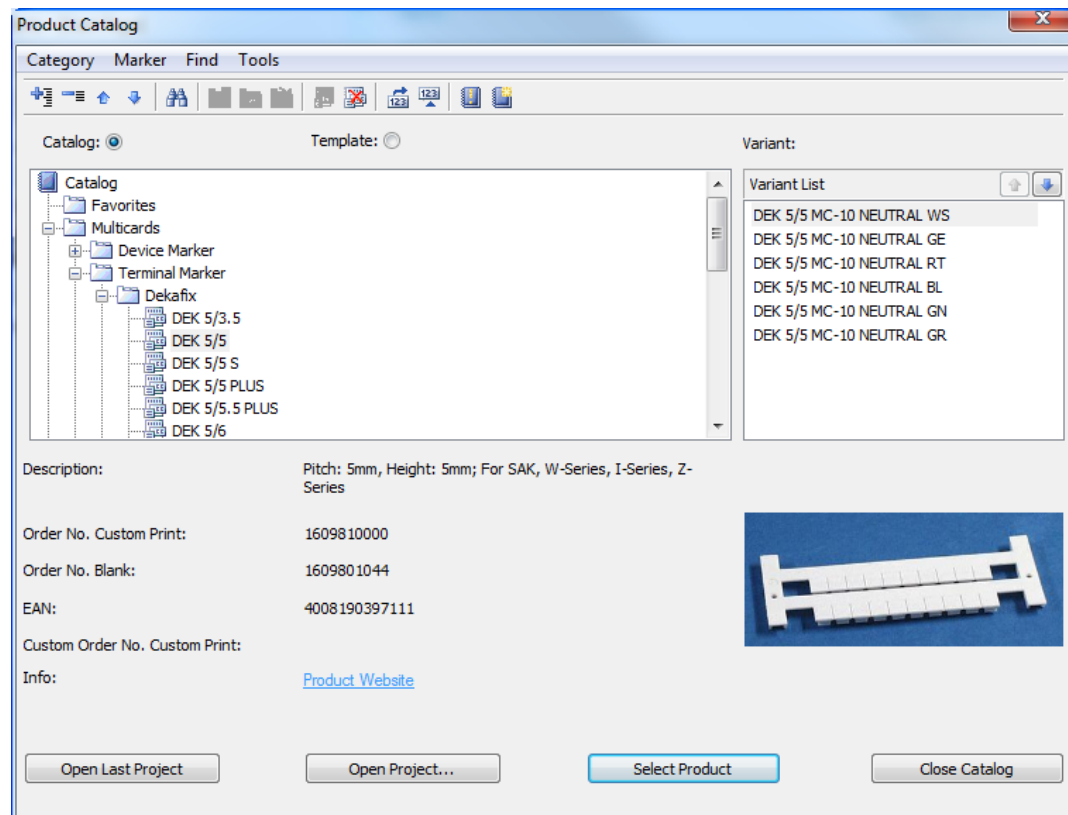


If the relevant information has been defined, the bottom left part of the window contains a description of the selected variant and the material number. The bottom right part of the window shows a photograph of the selected variant.

 You can double-click on the photograph to open a new window with a magnified view of the product.

If you click on **Product Website**, a product data sheet appears via the Internet. The link only appears if there is a data sheet for the product.

This window contains the following buttons:

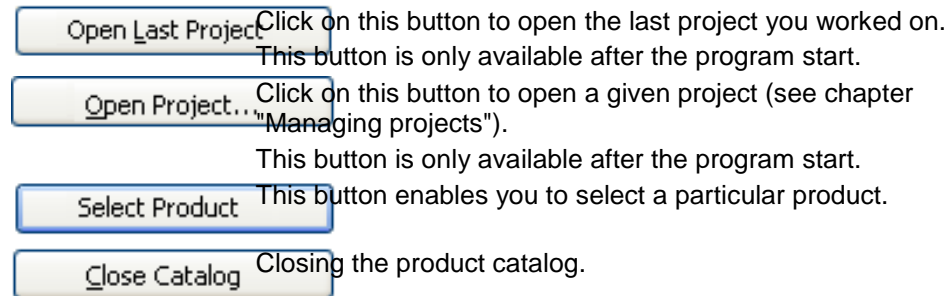

Creating a new product category

You can create your own personal product category where you can store all the markers you use regularly. Follow these steps:


- Open the product catalog (**Tools > Product Catalog**).
- To add a new category, click on the top level ("Catalog").

To add a subcategory, click on the corresponding category and the subcategory will be added under it.

- Select **Category > New**.

•

A new category is created.

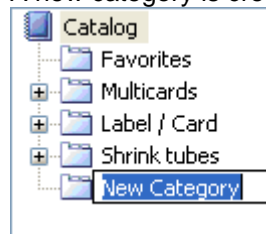

- Enter a name for the new category.


Now you can add the required products to the category (see section "Adding a product").

Adding a product

- Open the product catalog by clicking on **Tools > Product Catalog**.

- Click on the category to which you want to add a product.
- Select **Marker** > **Add**.

The following window appears:

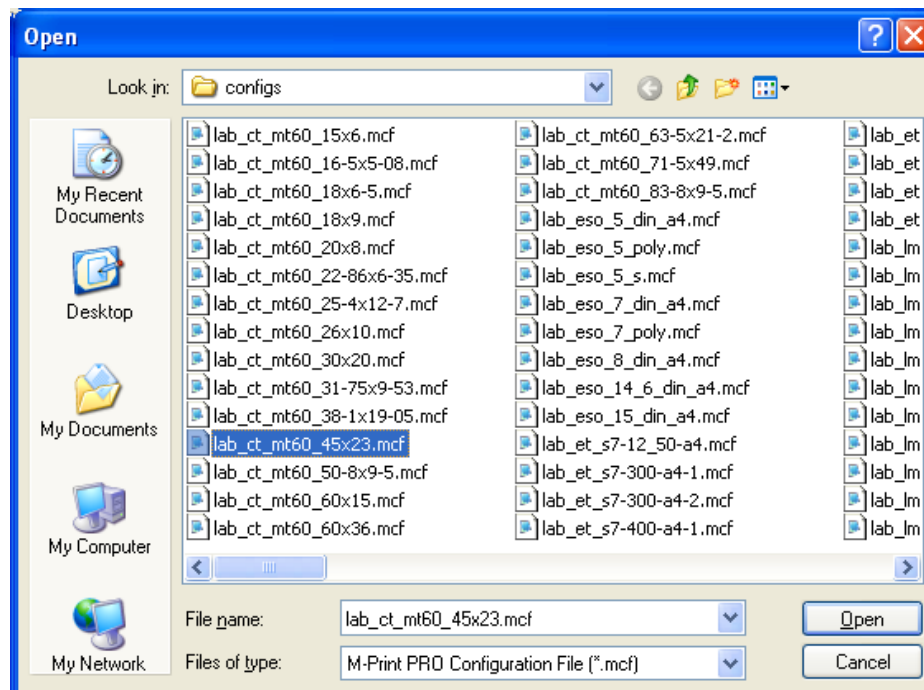


The window shows all products that are available in the application and that have been saved in a dedicated folder.

- Select the product you want to add and click on the **Open** button. The selected product is added to the category.
- Exit the product catalog by clicking on the **Close Catalog** button.

i The catalog is saved automatically.


Removing a product

- Select the product you want to remove by clicking on it.
- On the menu bar of the "Product Catalog" window, click on **Marker Type > Remove**.
- The product is removed from the catalog after a confirmation prompt.

 The product has **ONLY** been removed from the catalog.
It is not deleted from the application folder and can be re-added at any time.

Removing all products from a category

- Click on the category from which you want to remove all products.
- Select **Category > Empty**.
- The category is cleared after a confirmation prompt.

 The products are removed from this category **ONLY**.
They are not deleted from the application folder and can be re-added at any time.

Removing a product category

- Click on the category and select **Category > Remove**.
- The category is removed after a confirmation prompt.


Finding a product

You can use the product search function if you want to select a new marker type without knowing the exact name or material number.


The search function cannot be used to add a product to the catalog (see "Adding a product").

- Open the product catalog by clicking on **Tools > Product Catalog**.
- Select **Find**.

The "Find Variant" window appears:

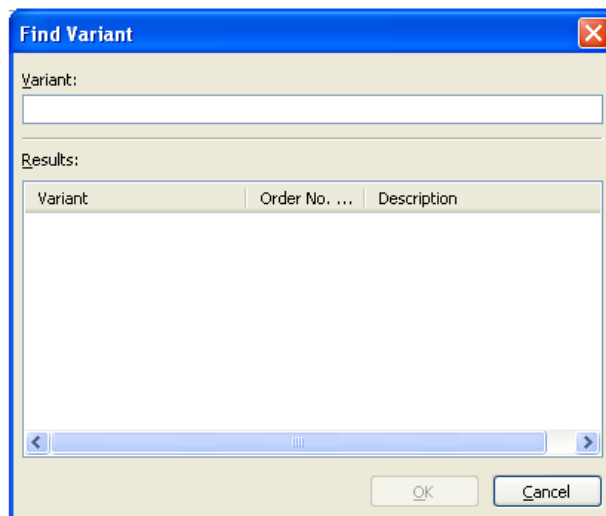

- Enter the product name in the "Variant" field. As soon as you enter the first character, all products starting with that character are displayed.

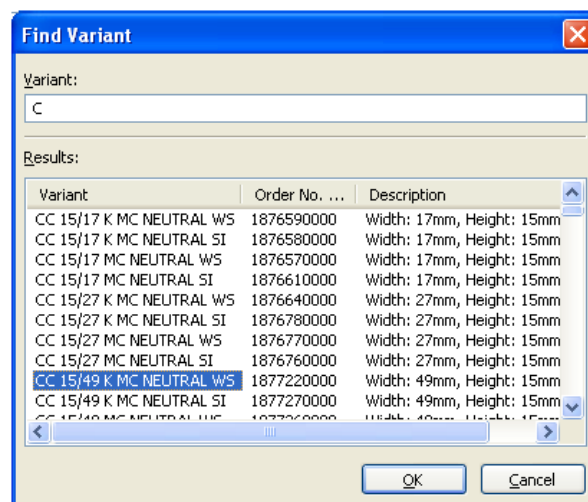

- Click on the product you are looking for to select it, then confirm your choice with **OK**.

Renaming a product

To give the products in the catalog another name (e.g. a company-internal name), you can rename the title and/or the variant name of a product.

The changed variant names are, for example, displayed:

- In the properties (see chapter "Marker properties", section "General").
- In the print dialog (see chapter "Calling up the print dialog").

Follow these steps to rename a variant:

- Open the product catalog by clicking on **Tools > Product Catalog**.
- Select the marker type.
- Highlight the title or the variant name and press the "F2" key.
- Specify a new name and accept the entry with the Return key.
- The name is changed after a confirmation prompt.

Templates

Templates are adjusted and saved marker types.

Templates can be saved as project templates (like marker types) and can also be used like them in many areas (e.g. import).

Further elements (e.g. text fields, image and barcode fields) can, for example, be added to a marker type, and this setting can be saved as a template *.mpt.

Note the following template properties:

- Templates consist of only ONE marker type
- Templates consist of only ONE page
- Saving templates
- Open a marker type and make your settings.
- Select **File > Save As....**
- As the file type, select "M-Print® PRO Template (*.mpt)".
- Save the file in the defined default directory for templates (see chapter "Options", section "Directory") so that it is automatically shown in the product catalog.



If you want to set further elements on the templates, note the following:

- Use document-individual fields or document fields if possible (see chapter "Properties window").
- If you adjust individual properties (colors, emphasis) of elements, set them "as default".

Resetting the product catalog

If you have accidentally deleted configurations from the product catalog or imported a new catalog file (*.mca), you can reset the product catalog.

All the directories – except the "Favorites" folder – are then reset to the delivery state. The content of the "Favorites" folder and the templates is preserved.


- Open the product catalog by clicking on **Tools > Product Catalog**.
- Select **Extras > Reset Catalog**.
- Acknowledge the confirmation prompt.

Updating the product catalog

You can update the product catalog via new or revised configuration files. Follow these steps:

- Open the product catalog by clicking on **Tools > Product Catalog...**
- Select **Tools > Add/Update Products...**

The configuration search window appears:

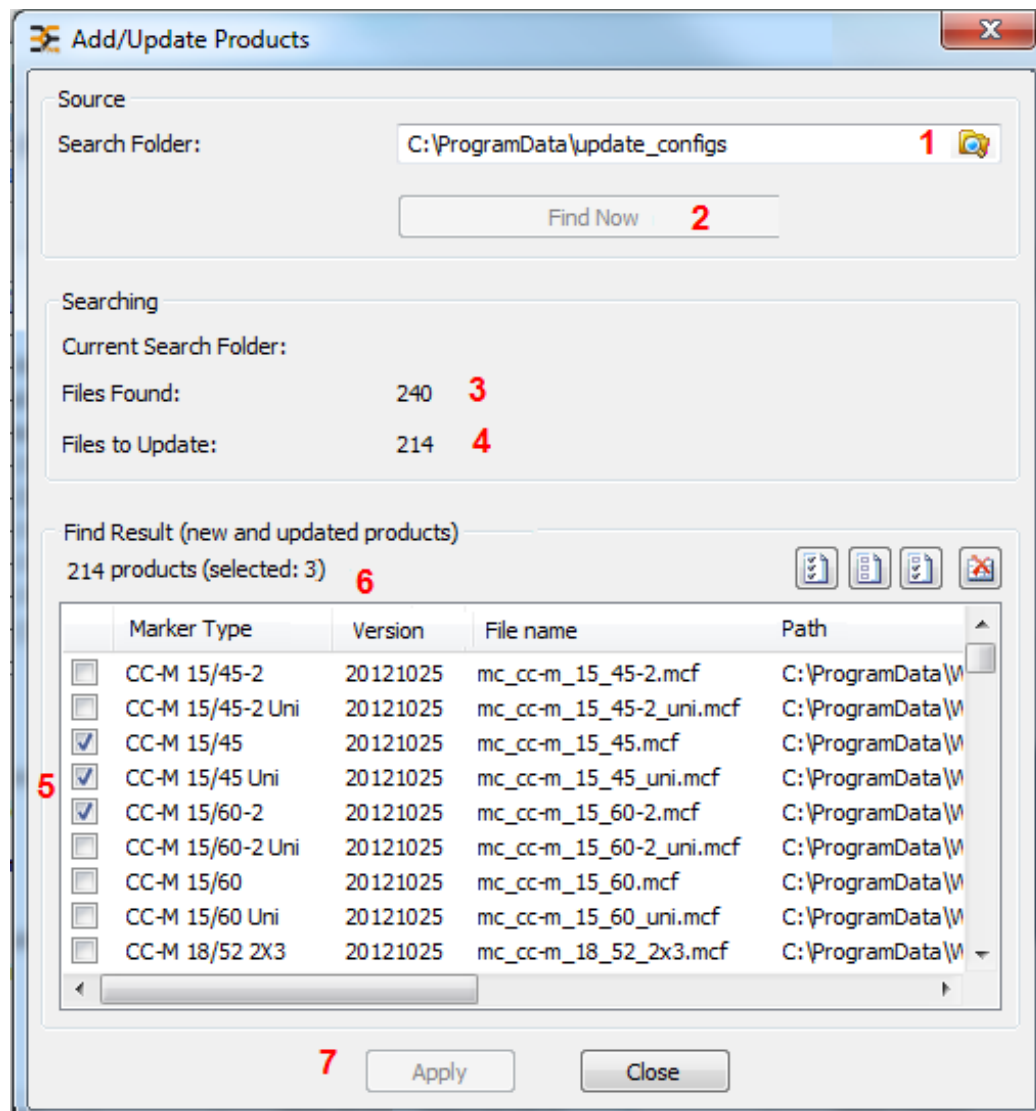

Follow these steps:

- 1 **Search folder**
Select the folder that you want to search for new configuration files.
- 2 **Find Now**

To search for new configuration files, click on "Find Now" in the selected directory.

3 **Files found**

The number of files found during the search run.

4 **Files to update**

The number of new or more recent files.

5 **Select products**

Select the required configurations.

6 **Number of files selected**

The number of files selected is displayed.

7 **Apply**


Click on "Apply" to copy the configuration files to your product catalog.

Options dialog

Introduction

This chapter explains the basic settings that can be set via the options dialog.


- To open the options dialog, select **Tools > Options....** .

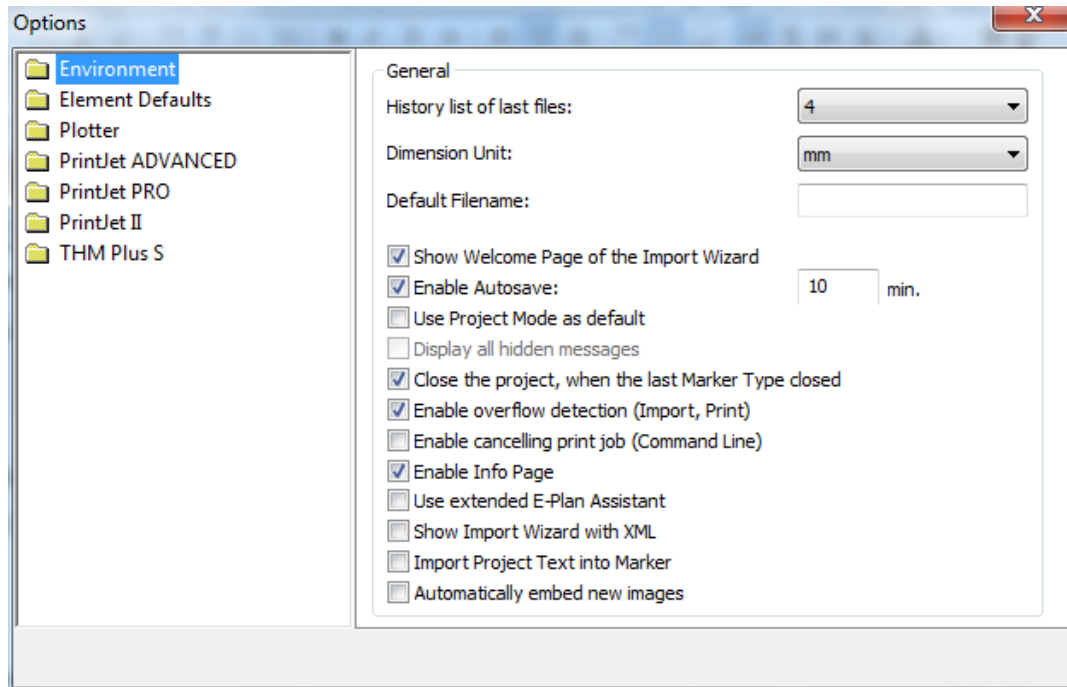

Environment

The environmental settings define the view and the general basic settings.

General

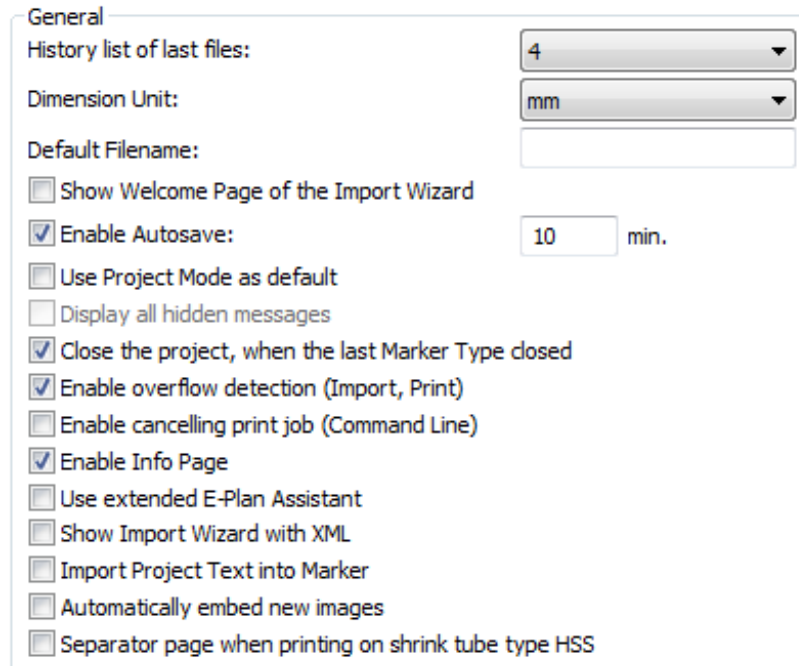

The screenshot shows the 'General' settings dialog box. It contains the following options:

- History list of last files: 4 (dropdown)
- Dimension Unit: mm (dropdown)
- Default Filename: (empty text box)
- ☐ Show Welcome Page of the Import Wizard
- ☒ Enable Autosave: 10 min. (text box)
- ☐ Use Project Mode as default
- ☐ Display all hidden messages
- ☒ Close the project, when the last Marker Type closed
- ☒ Enable overflow detection (Import, Print)
- ☐ Enable cancelling print job (Command Line)
- ☒ Enable Info Page
- ☐ Use extended E-Plan Assistant
- ☐ Show Import Wizard with XML
- ☐ Import Project Text into Marker
- ☐ Automatically embed new images
- ☐ Separator page when printing on shrink tube type HSS

History list of last files

The list of the most recently opened project files is displayed in the **File** menu and on the start page.

Dimension unit

The unit of measure used in the entire program (inch, mm, cm, μm) is assigned here.

Default file name

The default file name that is suggested in the "Save" and "Save As" functions.

Show welcome page of the Import Wizard

Enable autosave


The file is saved automatically at the selected interval.

Use project mode as default


Project mode can only be used for marker types with a project layer.

If there are identically captioned project markers in project mode, only the first of them are captioned.


Project mode: **NO**

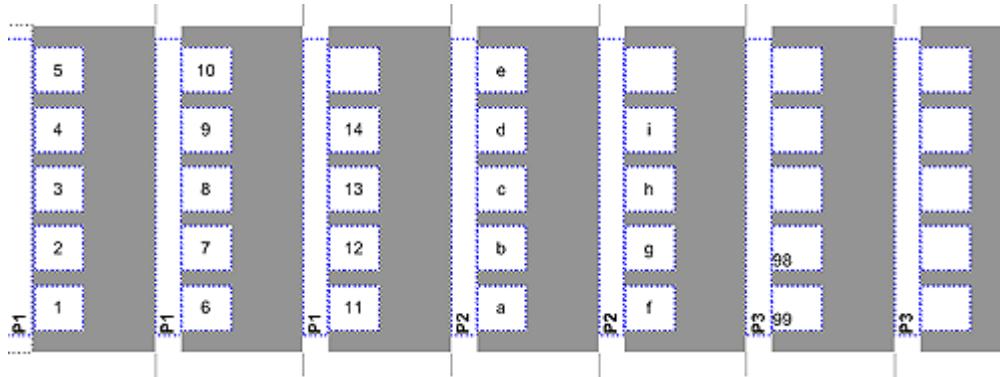

Project mode: **YES**

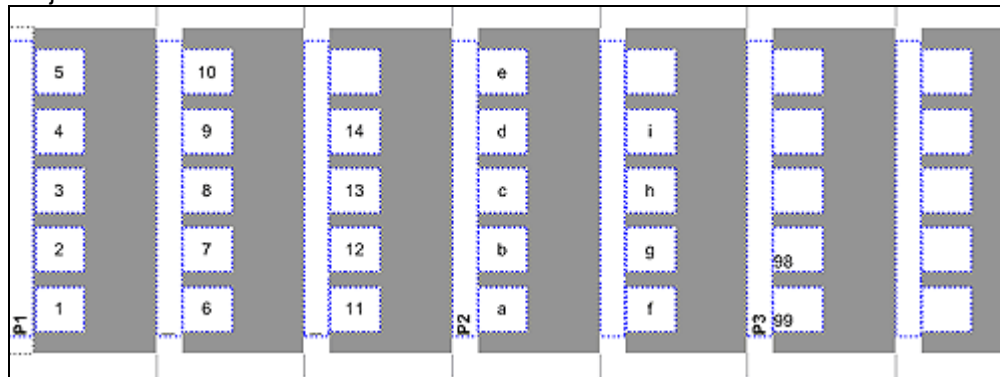

If you were to insert (e.g. via the data grid) a different project marker caption (e.g. "P1a"), a new project marker would be created from this marker on.

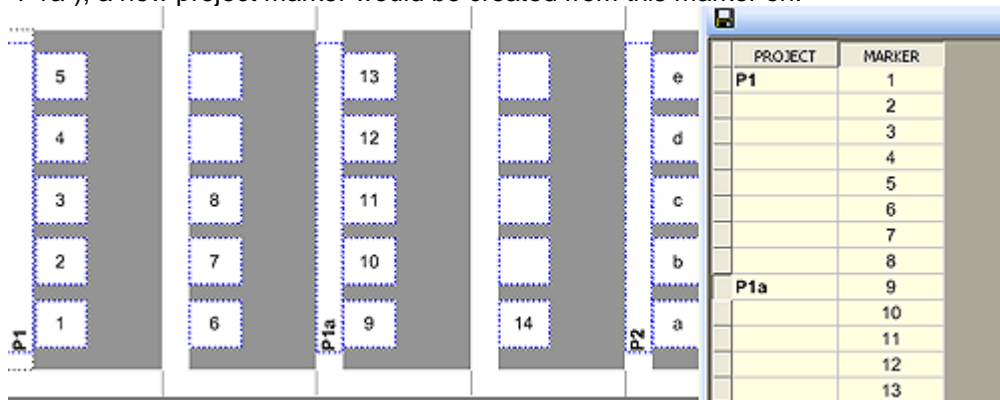

Display all hidden messages

Some dialogs can be hidden using a "Do not ask again" check box.

- Check here and click **Accept** if you want ALL dialogs to be displayed again.

Close project when the last marker type is closed


If the box is checked, the project is closed once the last tab (see "User interface") is closed.

Otherwise, you can reopen the tabs via the project tree.

Enable overflow detection (import, print)

If the box is checked, the program automatically checks whether all characters of a field are shown after an import or before printing.

If not, the fields are shown as follows (see also "Adjusting the font size"):



Enable canceling print job (command line)

If the box is checked, the print job can be canceled – when printing a file via the command line (see "Command line call") – via a dialog.

Enable info page

Besides the page numbers, an info page on the layout of the marker type is shown.

Use extended E-Plan Assistant

If the box is checked, the Import Wizard also shows the page with the delimiters when importing WEx files.

The delimiters are set as a default in the WEx files and should not be modified.

Show Import Wizard with XML

XML files can either be imported or be opened via the command line (see chapter "Command line call").

If you select this checkbox, the Import Wizard appears on opening via the command line; otherwise the import is controlled via the default settings or via a script file (see chapter "Importing files").

Import Project Text into Marker

If the box is checked, texts that are inserted in the project layer are inserted in the marker areas instead.

Automatically embed new images

When inserting a new image element, the image is automatically embedded and not linked via a path.

When program files are passed on, all source images are available automatically.

To remove embedded images from a file later, see chapter "Transferring an image from a file".

Separator page when printing on shrink tube type HSS

Automatically inserts a (blank) separator page when there are multiple print jobs for shrink tubes of type HSS.

View

Grid Options
Grid Size: mm
Grid Offset X: mm
Grid Offset Y: mm
Grid Color: ▼

Project / Layer
☒ Show the first Project Marker of a project only
☐ Show Data Grid on start
☐ Automatic selection of the layer at which an item was clicked on
☒ Show Overflow

Grid settings

The settings for the grid (see chapter "View menu").

Show the first project marker of a project only

If the project marker content is the same, only the first project marker is shown.

Show data grid on start

The data grid is always shown when the program is started.


Automatic selection of the layer at which an item was clicked on

If the box is checked, you can automatically switch between the project and the marker layer with a mouse click.

Otherwise it is necessary to switch via the "Standard" toolbar (see chapter "Toolbars").


Show overflow

If you select this checkbox, fields whose content cannot be shown completely are indicated as follows (see also "Adjusting the font size"):



Program startup


Here you control the behavior at program startup.

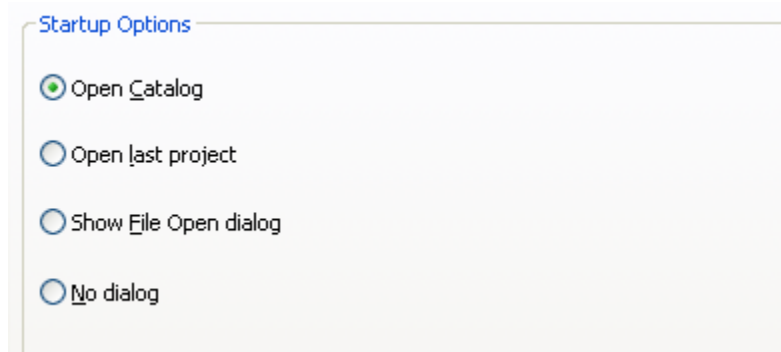

File extensions

Here you can link different file extensions to a script file.

When the program opens the file (e.g. via the command line), the script file is automatically run.

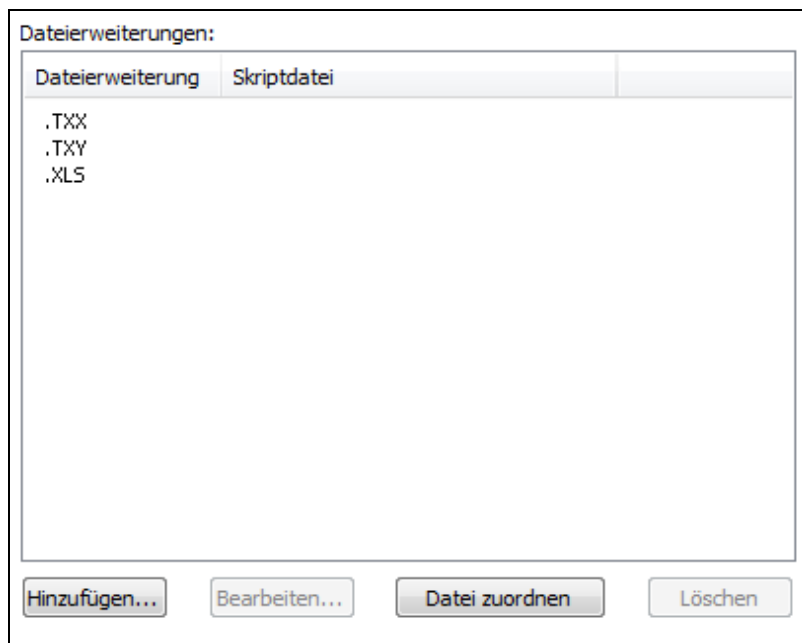


Associating files

Files can be opened automatically by the program if they are double-clicked. For this, it is necessary to add the file extension (for example ".xls") to the list and to click on the "Associate Files" button.

All file extensions in the list are now registered with the program.

Directory

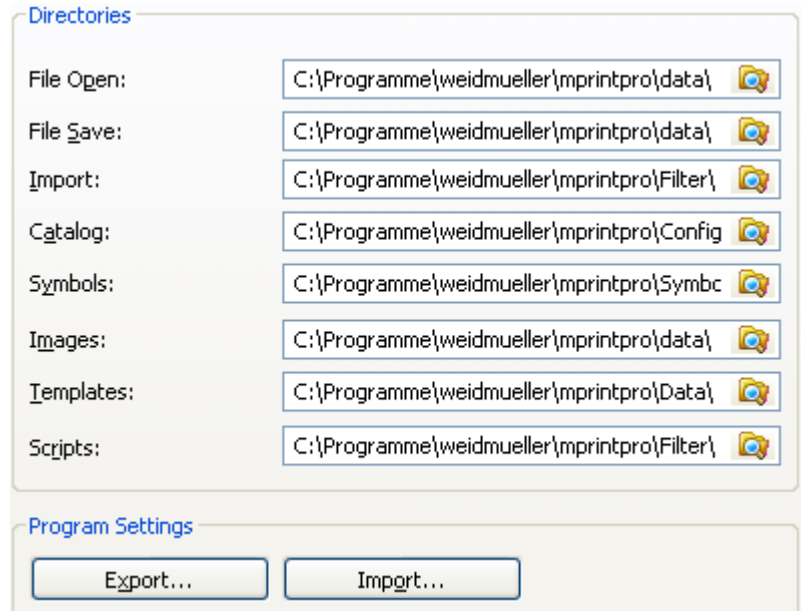

Directories

The displayed areas are preset and browsed through in the saved directories.

Program settings

Modified program settings can be saved (exported) and/or loaded (imported). Company-internal settings can, for example, be adjusted once and be loaded on other computers.

Program settings that can be stored are, for example:

- Update settings
- Grid offset for duplication (see "View")
- Consecutive numbering (last dialog values)
- File extensions
- Import Wizard (last dialog values)
- Mapped printers for marker types (see "Mapping a printer to a marker type")
- Adjusted default values for marker types
- Adjusted printer settings (e.g. printer correction, material slip, marker type settings)

Administration

The image shows two parts of a software interface. The top part is titled 'Share print settings' and contains the text: 'Click on 'Share Print Settings' to share your current print settings with other users of this computer:'. Below this is a list of settings: '- Set Printer Correction...', '- Set Material-dependent Slip...', '- Printer/Plotter Calibration', and '- ...'. A note states: 'However, the users can decide whether they want to accept them or not.' At the bottom of this section is a button labeled 'Share Print Settings'. The bottom part is titled 'Protect print settings' and contains three input fields: 'Old password:', 'New password:', and 'Confirm new password:'.

Share print settings

Click on 'Share Print Settings' to share your current print settings with other users of this computer:

- Set Printer Correction...
- Set Material-dependent Slip...
- Printer/Plotter Calibration
- ...

However, the users can decide whether they want to accept them or not.

Share Print Settings

Protect print settings

Old password:

New password:

Confirm new password:

Share print settings

See descriptive text in the dialog.


Protect print settings

You can store a password to protect the adjusted printer settings against modifications. This password is requested before any modification of the printer values.

After installation, there is NO password.

Administration menu

Individual menu items can be hidden or password-protected.

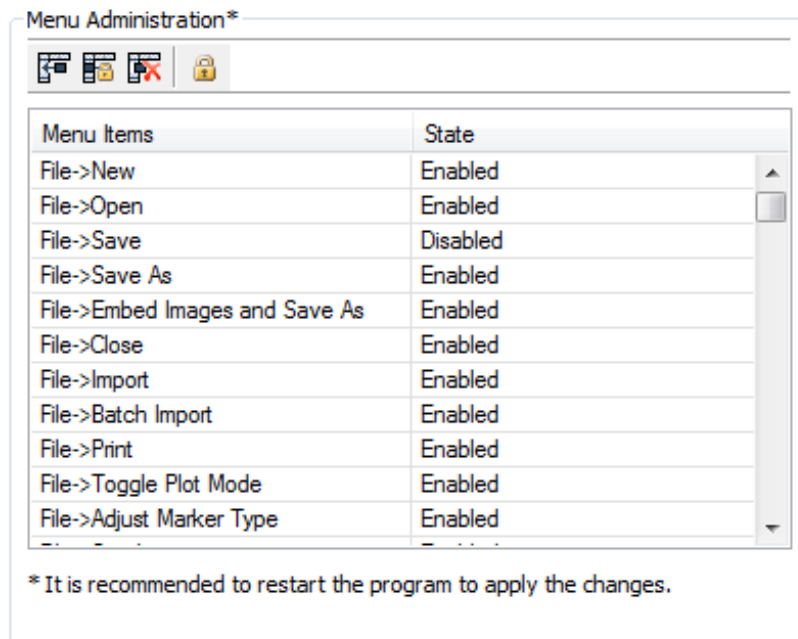

Set all enabled

All the menu items are displayed and can be opened.



Set all protected

All the menu items are displayed, but can only be opened after entering a password.



Set all disabled

Not all the menu items are displayed and not all the menu items can be opened.




Set password

Opens a dialog for setting or changing a password.
After installation, there is NO password.

Note: If you set password protection for individual menu items, you should also protect the menu item "Settings -> Options" to ensure that the password cannot be reset without permission.

Reset password


Click on  , enter the existing password and leave the fields for the new password empty. Click on OK to accept the entry.

State

Enabled: The menu item is displayed
Disabled: The menu item is not displayed
Protected: The menu item is displayed, but only opens after entering a password

Update


Defining update settings.

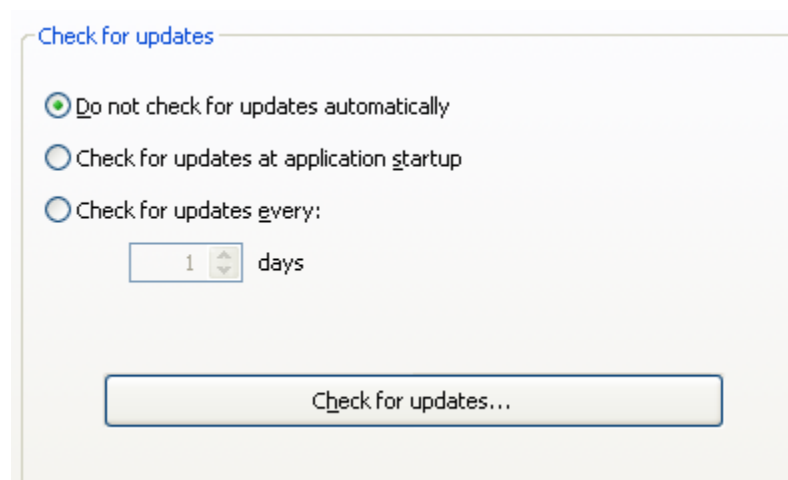

The 'Check for updates' dialog box contains three radio button options. The first option, 'Do not check for updates automatically', is selected. The second option is 'Check for updates at application startup'. The third option is 'Check for updates every:', followed by a spin box set to '1' and the text 'days'. At the bottom of the dialog is a button labeled 'Check for updates...'.

Color coding

Defining color codings for the numbers 0 to 9 (see also "Color coding").

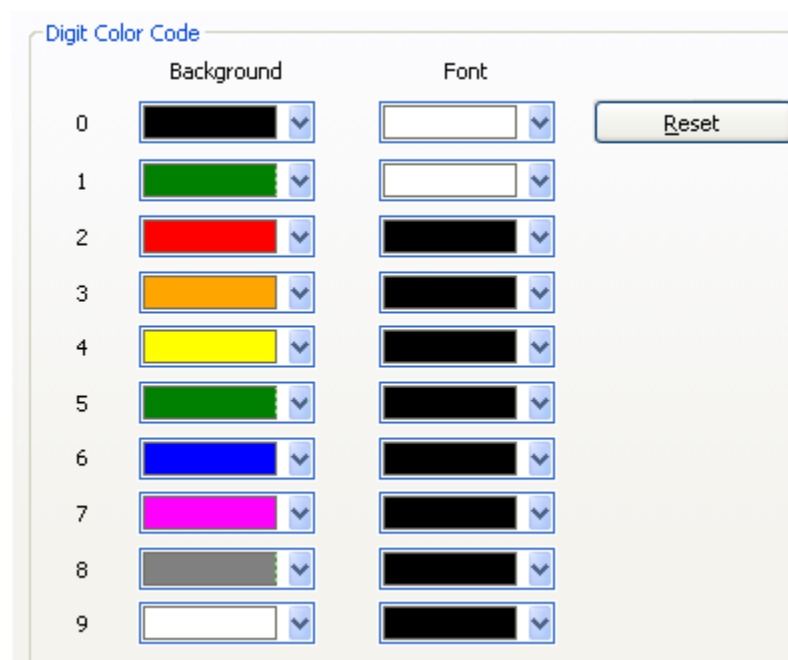

The 'Digit Color Code' dialog box is used to define color codings for the numbers 0 to 9. It features two columns: 'Background' and 'Font'. Each row corresponds to a digit from 0 to 9. The 'Background' column shows color swatches: 0 (black), 1 (green), 2 (red), 3 (orange), 4 (yellow), 5 (green), 6 (blue), 7 (magenta), 8 (gray), and 9 (white). The 'Font' column shows color swatches: 0 (white), 1 (white), 2 (black), 3 (black), 4 (black), 5 (black), 6 (black), 7 (black), 8 (black), and 9 (black). A 'Reset' button is located to the right of the 'Font' column.

Fields

Defining various field settings, e.g. calendar week.

Week Number Settings

First Week of Year:

1st January

Prefix:

Week Number format:

WW

/

YY

Suffix:

Basic settings

Defining various basic settings.

Duplicate

Offset X:

2

mm

Offset Y:

2

mm

Auto Increment/Decrement Values

Increment Value:

1

Decrement Value:

1

Duplicate

The offset dimensions of the duplicated object (see chapter "Edit menu").


Increment value / Decrement value

Sets the default values for incrementing or decrementing (see chapter "Incrementing and decrementing").

Element defaults

Certain properties for creating elements (e.g. text field, rectangle, image, barcode) can be defined via the element defaults. These settings are saved locally on the PC.

Font

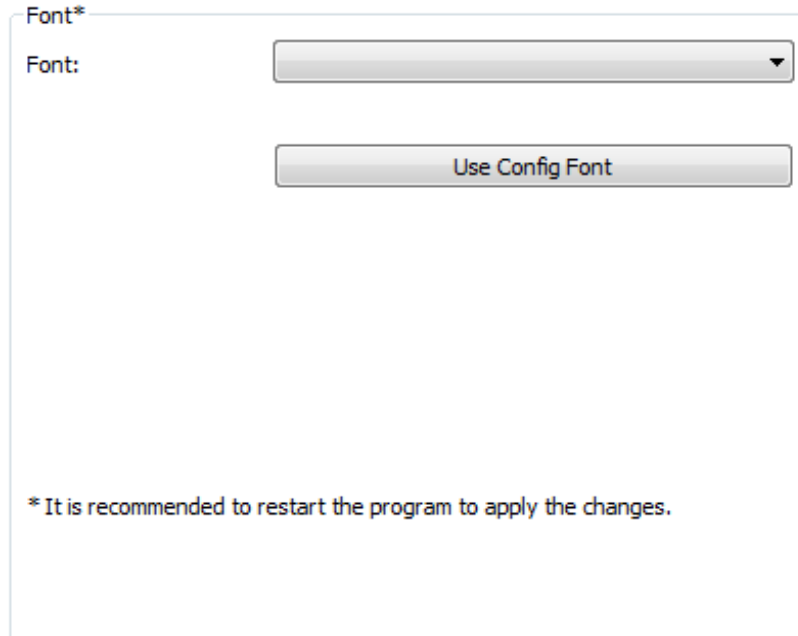

Font*

Font:

Use Config Font

* It is recommended to restart the program to apply the changes.

Font:

Here you select a font to be used as the preferred font when new marker types are inserted in a project. This means that the fonts stored in the configuration files are not used.

This setting is only applied when the program has been restarted.

Use config font

Resets the font that was selected via "Font".





Afterward the respective fonts of the added marker types are used.


This setting is only applied when the program has been restarted.

Elements

For the various elements (e.g. text field, rectangle, image, barcode) there are varying properties whose default properties can be changed.

These are usually properties such as the line thickness or line and fill properties.


Property	Value
Border and Fill	
Thickness	0,001
Line Color	 000000
Line Type	 None
Fill Color	 FFFFFFFF
Fill Pattern	 None
Behaviour	
Orientation	0
Line height	100
Content	
Color Coding	No



Once accepted, changes to the default properties are valid for any new elements. A reboot is not necessary.

Reset

Resets the default property of the selected element to the delivery state.

 The default properties of the elements as delivered are read from the product files of the product catalog. These product values may differ from those shown in this dialog.

Only when the values have been changed and saved via this options dialog do they take precedence in the presentation of the elements.

Plotter

Settings for connected plotters.

General

General settings for plot mode and the plotter speed.

In the list shown, the connected printers are mapped to the type the printer is handled as:

- As a printer
- As a plotter
- Ask user

General

☐ Start in Plot Mode

☒ Always

☐ If last mode was Plot Mode

Plotter Speed: default

Device	Mapping Mode
Acrobat Distiller	As Printer
Generic / Text Only	Ask User
HP LaserJet	As Printer

Ask user


Proceed as follows if you want to change a mapping (as printer/as plotter) selected in the print dialog:

- Change the mapping for the printer directly here

or


- Change the mapping for the printer to "Ask user".
- Open a marker type that you want to print.
- Select **File > Print....**
- Select **Assign** in the print dialog.

A dialog opens for mapping.

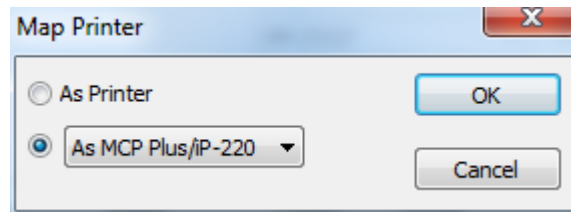

MultiCard fixture


Plotter settings for MultiCards.

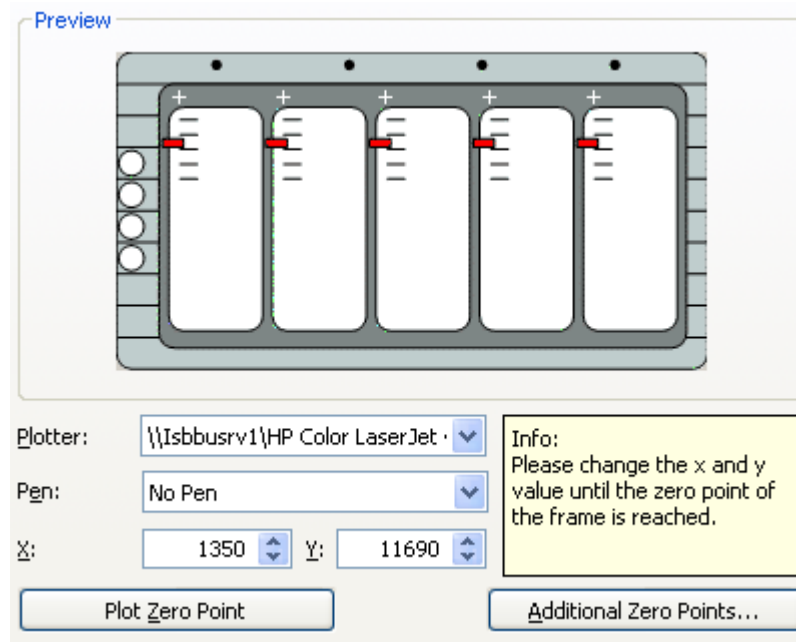

SF 4-6 fixture

Plotter settings for SlimFix fixtures to hold sizes 4 to 6.

Preview

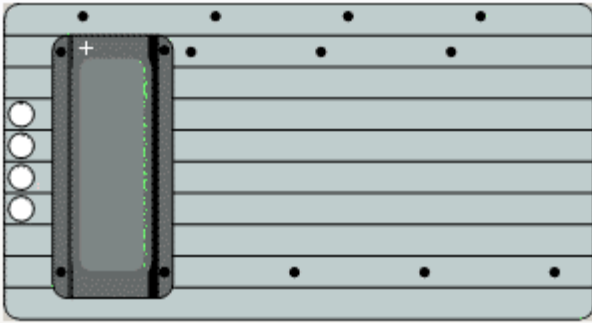

Plotter:

Pen:

X: Y:

Info:
Please change the x and y value until the zero point of the frame is reached.

Pen priming

Priming options for the plotter pen.

Set Prime Position

☒ Don't Prime Pen

☐ Plotter Default Position


☐ Individual Position (MultiCards only) / Plotter Default Position for Labels

Line 1	X1: <input type="text" value="0"/> mm	Y1: <input type="text" value="0"/> mm
	X2: <input type="text" value="0,001"/> mm	Y2: <input type="text" value="0,001"/> mm
Line 2	X1: <input type="text" value="0"/> mm	Y1: <input type="text" value="0"/> mm
	X2: <input type="text" value="0,001"/> mm	Y2: <input type="text" value="0,001"/> mm
Line 3	X1: <input type="text" value="0"/> mm	Y1: <input type="text" value="0"/> mm
	X2: <input type="text" value="0,001"/> mm	Y2: <input type="text" value="0,001"/> mm

PrintJet ADVANCED

General


Setting the print options for the PrintJet **ADVANCED**.

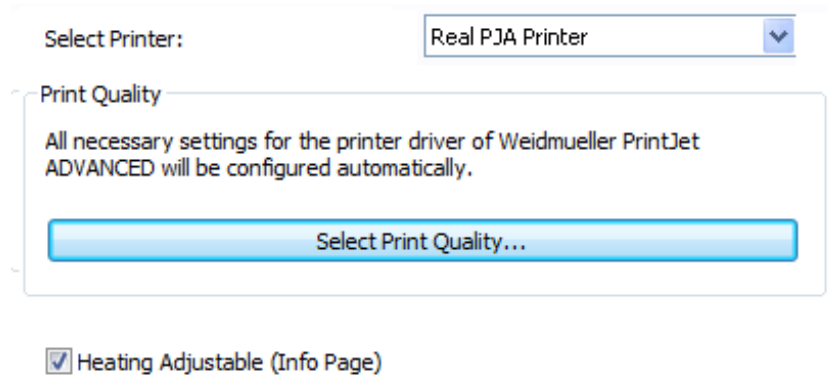

The screenshot shows the 'General' settings window for the PrintJet ADVANCED printer. At the top, there is a 'Select Printer:' label followed by a dropdown menu currently showing 'Real PJA Printer'. Below this is a section titled 'Print Quality' which contains the text: 'All necessary settings for the printer driver of Weidmueller PrintJet ADVANCED will be configured automatically.' Underneath this text is a large blue button labeled 'Select Print Quality...'. At the bottom of the window, there is a checked checkbox labeled 'Heating Adjustable (Info Page)'.

Select Print Quality

To adjust the print quality of the PrintJet **ADVANCED**, click in the options dialog on the **Select Print Quality...** button and select the required quality.

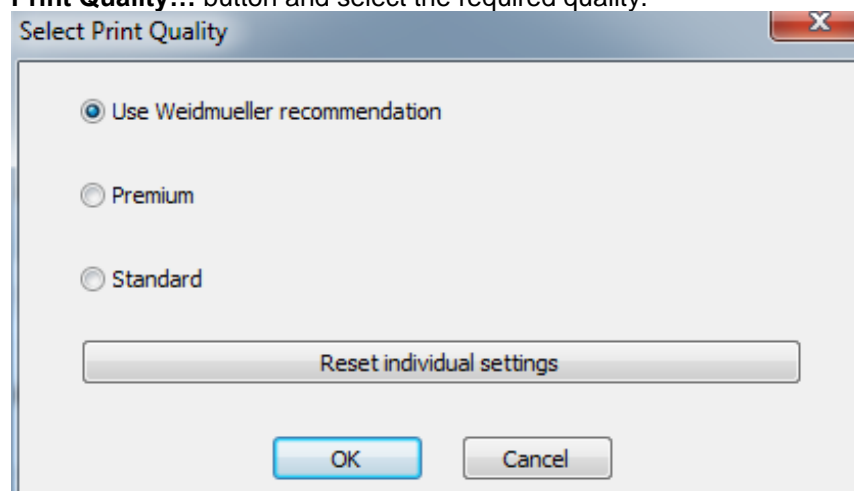

The screenshot shows the 'Select Print Quality' dialog box. It has a title bar with a close button (X). Inside the dialog, there are three radio button options: 'Use Weidmueller recommendation' (which is selected), 'Premium', and 'Standard'. Below these options is a button labeled 'Reset individual settings'. At the bottom of the dialog are two buttons: 'OK' and 'Cancel'.

General information:

The print quality of the PrintJet **ADVANCED** can be defined in the following ways:

1. Via the product file (see "Adding a product")
The basic settings are defined via the supplied product file (*.mcf).
2. Via the settings in the options dialog (see "PrintJet **ADVANCED**")
These settings apply in general to all products and override the settings from the product files.
3. Via the settings on the info page for the product (see chapter "User interface", section "Info page").
These settings apply to a product variant and override the settings both from the product file and from the options dialog.
4. Via the adjustable heating.
For this, set the check mark for "Heating adjustable (Info Page)" and apply the settings from the options dialog.
Open a product and assign it to a PrintJet **ADVANCED** printer (see chapter "Printing", section "Mapping a printer to a marker type").
Go to the info page (see chapter "User interface", section "Info page").

Service tools

Set the service tools for the **PrintJet ADVANCED**.

The image shows two sections of a settings dialog. The first section, titled "PrintJet ADVANCED Status Monitor", contains a checked checkbox labeled "Show status monitor on output to printer" and a button labeled "Open PrintJet ADVANCED Status Monitor...". The second section, titled "PrintJet ADVANCED Explorer", contains a button labeled "Open PrintJet ADVANCED Explorer...".

PrintJet ADVANCED Status Monitor

To start the **PrintJet ADVANCED** Status Monitor for every output on the **PrintJet ADVANCED**, set the check mark here.

Open PrintJet ADVANCED Status Monitor...

Opens the **PrintJet ADVANCED** Status Monitor if it has been installed (see also "**PrintJet ADVANCED**").

PrintJet ADVANCED Explorer

Opens the **PrintJet ADVANCED** Explorer if it has been installed (see also "**PrintJet ADVANCED Explorer**").

Administration

Administration of the PrintJet **ADVANCED**.

The screenshot displays the administration interface for the PrintJet **ADVANCED** printer. At the top, there is a 'Select Printer:' label followed by a dropdown menu currently showing 'Real PJA Printer'. Below this, the interface is divided into three main sections, each with a title and a button:

- Remote Access:** Contains a button labeled 'Open Remote Desktop Connection...'.
- Support File:** Contains a button labeled 'Create Support File...'.
- Update Printer Software:** Contains an 'Update File:' label, an empty text input field, a small button with three dots (indicating a file selection dialog), and a button labeled 'Start Printer Update'.

Remote access

Select a connected PrintJet **ADVANCED** printer and click on **Open Remote Desktop Connection...** to connect to the printer's computer.

Support file

The support file contains information about the installed version of the program. It helps the Support team in the event of problems.

Select a connected PrintJet **ADVANCED** printer and click on "Create Support File..." to create a support file.

Updating the printer software

To update the printer software, select an update file and click on the **Start Printer Update** button.

PrintJet PRO

General

Setting the print options for the PrintJet PRO (see also PrintJet PRO manual).

General

Select Printer: GelSprinter GX 3000/3050N

Properties Printerdriver

All necessary settings for the printer driver of Weidmueller PrintJet PRO will be configured automatically.

Execute Printerdriver configuration

All Printerdriver settings will be set to default.

Reset Printerdriver configuration

Cleaning

Launching the cleaning process for the PrintJet PRO.

Cleaning

Select Printer: GelSprinter GX 3000/3050N

Cleaningtype 1: Head-Cleaning
Cleans the Printhead when colors are blurred.

☐ Printhead 1 (M, Y) ☐ Printhead 2 (K, C)

Execute Head-Cleaning

Cleaningtype 2: Head-Flushing
Head-Flushing consumes more ink than Head-Cleaning.

☐ Printhead 1 (M, Y) ☐ Printhead 2 (K, C)

Execute Head-Flushing



Note that head-flushing consumes more ink than print-head cleaning.

Current configuration

Display of the current printer configuration.


Current Configuration

Select Printer:	GelSprinter GX 3000/3050N
Print mode:	Color print
Slot with black ink:	Slot K
Print quality:	Quality Print

PrintJet II

Cleaning

Launching the cleaning process for the PrintJet II.

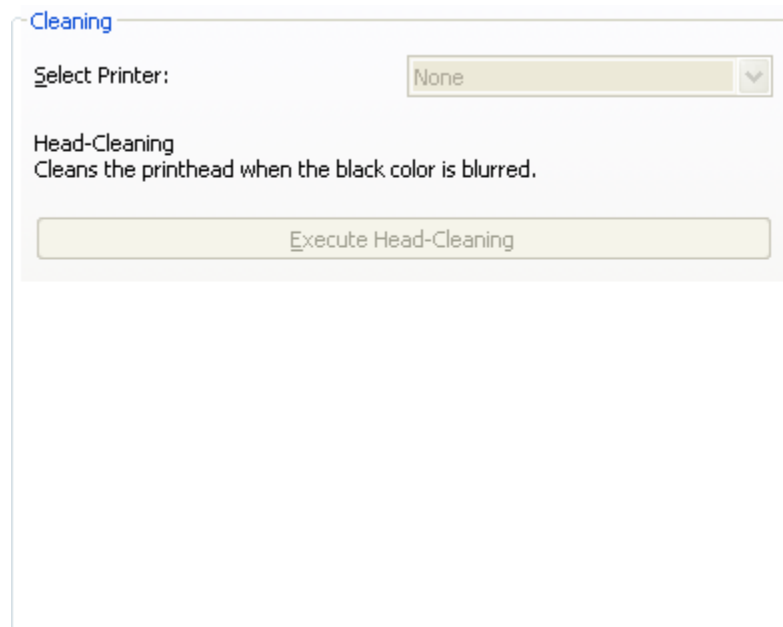


The screenshot shows a dialog box titled "Cleaning". It contains a "Select Printer:" label followed by a dropdown menu currently showing "None". Below this, the text "Head-Cleaning" is followed by a description: "Cleans the printhead when the black color is blurred." At the bottom of the dialog is a large button labeled "Execute Head-Cleaning".

THM Plus S

General

Setting the print options for the THM Plus S.

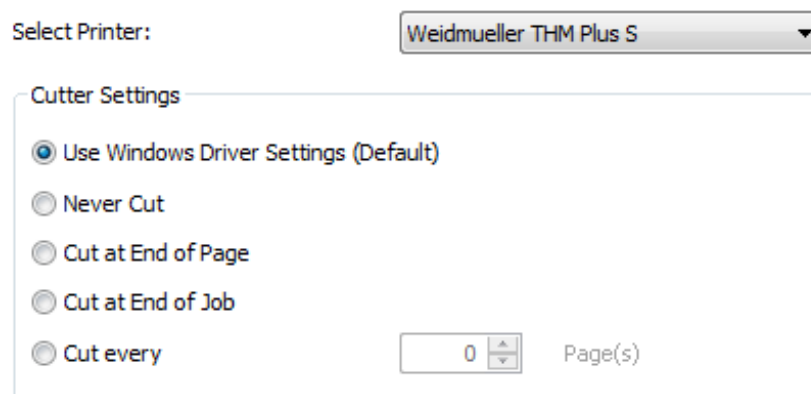

The screenshot shows a dialog box with a "Select Printer:" label and a dropdown menu showing "Weidmueller THM Plus S". Below this is a section titled "Cutter Settings" containing five radio button options: "Use Windows Driver Settings (Default)" (which is selected), "Never Cut", "Cut at End of Page", "Cut at End of Job", and "Cut every". The "Cut every" option is followed by a numeric input field containing the value "0" and a "Page(s)" label.


Opening other file types

Opening other file types

This chapter explains how to open a file that was not created using the program.

- Select **File > Open**.

The "Open" window appears, listing all existing files:

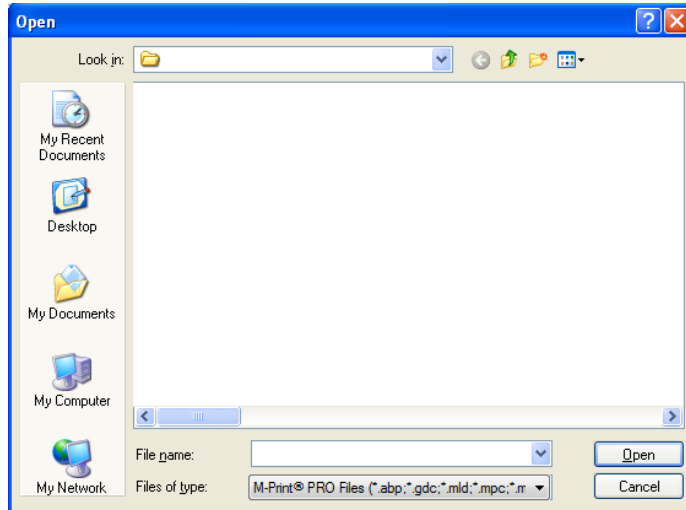

Select one of the following file types:

*.abp	M-Print document
*.gdc	M-Print document
*.mld	M-Label document
*.mpc	Content File
*.mpo	Order File
*.mpt	Template
*.rde	Raildesigner export file
*.tmf	M-Comm document
*.txx	
*.txy	
*.xls; *.xlsx	Microsoft® Excel® Worksheet
*.xmt	A multiple selection of files is possible.
*.txt	A multiple selection of files is possible.

All the available files of the selected file type are listed.

- Select the file you want to open, then click on the **Open** button.

If the marker type could not be found in the catalog, a message box appears:

The requested Marker Type is not available.
Please assign a product from the catalog.


- Select the marker type and confirm by clicking on **OK**.

The data is added to the markers.

- i** If a non-supported file type is used for a multiple selection, only the first file of the selection is opened.

Excel files

An additional dialog appears when Excel files are opened.

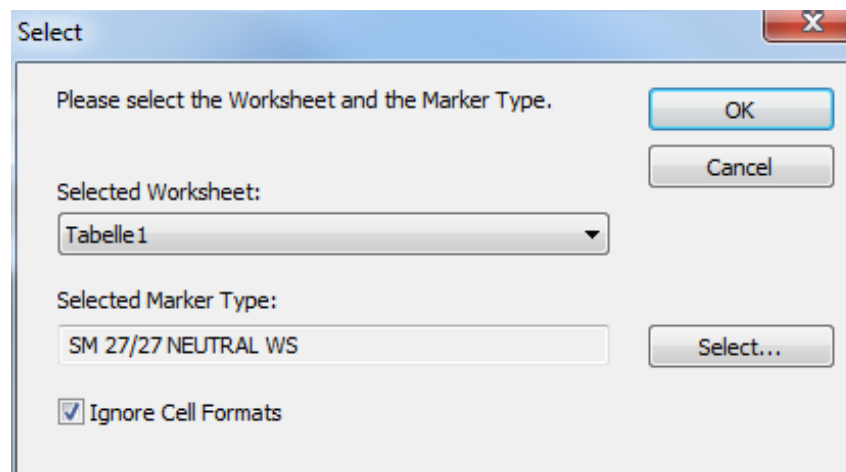

Here, you can choose the worksheet to be opened as well as the marker type and define whether to apply the cell formats (if supported).

- i** The data in the Excel file is only displayed from the second row on.
Another way to display data from an Excel file consists in an import (see chapter "Importing an Excel file").

Command line call

Introduction

The program can also be started via the command line (command prompt).

You can see the call parameters by entering the path to the program file, followed by the call parameter "/?".

Call parameters for exe

Opening or printing a file

```
MPrintPRO.exe [-p] "file (*.gdc|*.mld|*.mpc|*.mpo|*.mpt|*.rde|*.tmf|*.txx|*.txy|*.bis)"
```



When the print parameter "-p" is used, the print job can be canceled via a dialog after opening the program.
If you do not want to display the dialog, see the option "Display all hidden messages" in the options dialog.

Importing or printing a file

```
MPrintPRO.exe "file_name" [-p] [-ImportFilter:"script_file_name (*.mis)"]  
[-MatNo:material_number] [-Fallback:material_number]
```

```
MPrintPRO.exe "file_name" [-p] [-ImportFilter:CSV | WTXT | WE | VK | XML]  
[-MatNo:material_number] [-Fallback:material_number]
```



When the print parameter "-p" is used, the print job can be canceled via a dialog after opening the program.
If you do not want to display the dialog, see the option "Display all hidden messages" in the options dialog.

Call parameters for converters

The import converter can be controlled via the command line (see chapter "Import converter").

Parameters for the QLS converter

-input:<path_to_file>\<input_file>

This attribute is compulsory

-output:<path_to_file>\<output_file>

Optional.

If output_file = input_file, then the extension ".convert" is appended to output_file.

If nothing else was entered, the name of the input file is used with the extension ".convert" added to it.

-separator:<separator>

Optional, but only 1 character,
default is the semicolon,
no white spaces
Exception TAB

-start:<start>

Optional

First import line; default is 1

-end:<end>

Optional

Last import line;

default is 0 (means until the end)

-concat:<concat>

Optional

default is 2

cannot become less than 2

-ignore

Option

if entered, blank lines are ignored

-?

Attention: If this parameter is entered, all other parameters are ignored, and only the "usage" is displayed.

Example:

1 "C:\qlsconverter.exe" -? -> Lists all parameters

2 "C:\qlsconverter.exe" -input:"C:\qls\testbasis_cmd.csv"

Generates the file "C:\qls\testbasis _cmd.csv.convert"

Parameters for the TNV converter

-input:"<path_to_file>\<input_file>"

This attribute is compulsory

-output:"<path_to_file>\<output_file>"

Optional.

If output_file = input_file, then the extension ".convert" is appended to output_file.

If nothing else was entered, the name of the input file is used with the extension ".convert" added to it.

-separator:<separator>

Optional, but only 1 character,

default is a semicolon

no white space (blanks)

-start:<startlineno>

Optional

First import line; default is 1

-end:<endlineno>

Optional

Last import line;

default is 0 (means until the end)

-pair1:<colno1><delimiter><colno2>

Optional

First linked column pair

Default: Column 0 and column 1 are linked with a colon

If delimiter = '|', the columns are combined WITHOUT delimiters.

-pair2:<colno1><delimiter><colno2>

Optional

Second linked column pair

Default: Column 3 and column 4 are linked with a colon

The delimiter is extracted from the "pair1" parameter; if "pair1" is not present, a colon is used as the delimiter.

To get a list of all parameters, double-click on the file "TNVConverter.exe".

Example:

```
1 "C:\tnvconverter.exe" -input:"C:\tnv\testbasis_cmd.csv" -separator:"," -pair1:"2:5" -pair2:"3:4"
```

The import is based on the following parameters:

- Delimiter for source file: Comma
- Delimiter for output file: Colon
- Linked column pairs: Column 2 with column 5 and column 3 with column 4
- Creates the output file "C:\tnv\testbasis_cmd.csv.convert"

Importing files

Introduction

This chapter explains how you can import files in other formats (e.g. Microsoft® Excel®) into the program and insert the data into the marker areas.

The data can be imported into the catalog's marker types or into self-created template files (*.mpt) (see chapter "Templates").

There are various ways to import a file:

1. Manual import with the option of creating an import script file (see chapter "Manual import")
2. Automated import via a script file (see chapter "Automated import").
3. Automated import with one or more script files (batch import) (see chapter "Batch import").
4. Import controlled via the command line (command prompt) (see chapter "Command line call").

The following file formats can be imported at the moment:

- *.asc
- *.csv
- *.mpx
- *.txt
- *.wbe
- *.we?
- *.xml
- *.xls; *.xlsx

Manual import


For a manual import, the Import Wizard supports you when selecting the import parameters.

You can save them at the end of the Import Wizard to carry out automated imports with these settings (see chapter "Automated import").

Starting the import

Start the import via **File > Import...**
Follow the steps of the Import Wizard.

Step 1: Start page

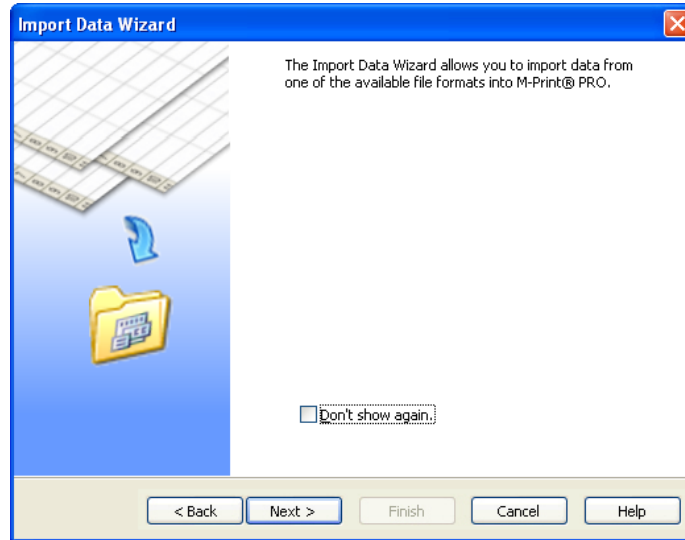


The start page of the Import Wizard can be hidden.
Select "Don't show again" to start directly with step 2 when you call up the wizard the next time.

You can show the start page again via the options dialog (see chapter "Options").

Step 2: Filter and import type

In step 2, you select the source file you want to import.
The filter type, the saved import routine or a converter can also be selected.

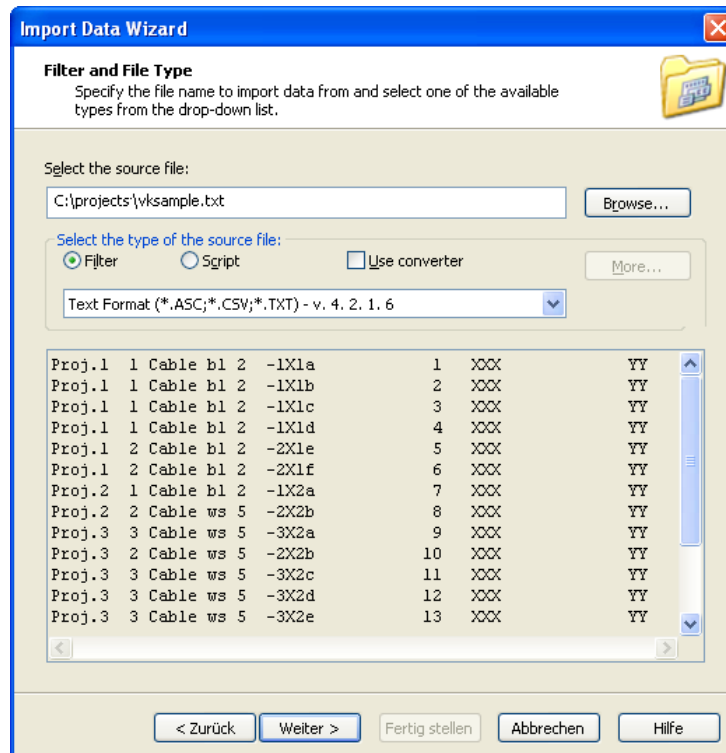

Selecting the source file

- Click on the **Find...** button. A window appears where you can select the file you want to import.
- Select the file you want to import and click on the **Open** button.

The path and name of the file you want to import are now shown in the "Select the source file:" field.

Source file type


The next step is to select the import type:

- Filter: The import is effected manually via a filter file.
Select the filter type in the drop-down field (e. g. *.txt, *.WEI).
The filter that matches the source file is usually shown automatically.
- Script: The import is automatic via a stored script (see chapter "Automated import")
- Use converter: A converter is used to prefilter the source file (see chapter "Converter").

Step 3: Selecting the project and variant

This step serves to select the project or the marker type used to effect the import. There is a choice of options, depending on the initial situation:

- Selected element
- Existing marker type in current project
- New marker type in current project
- New Project

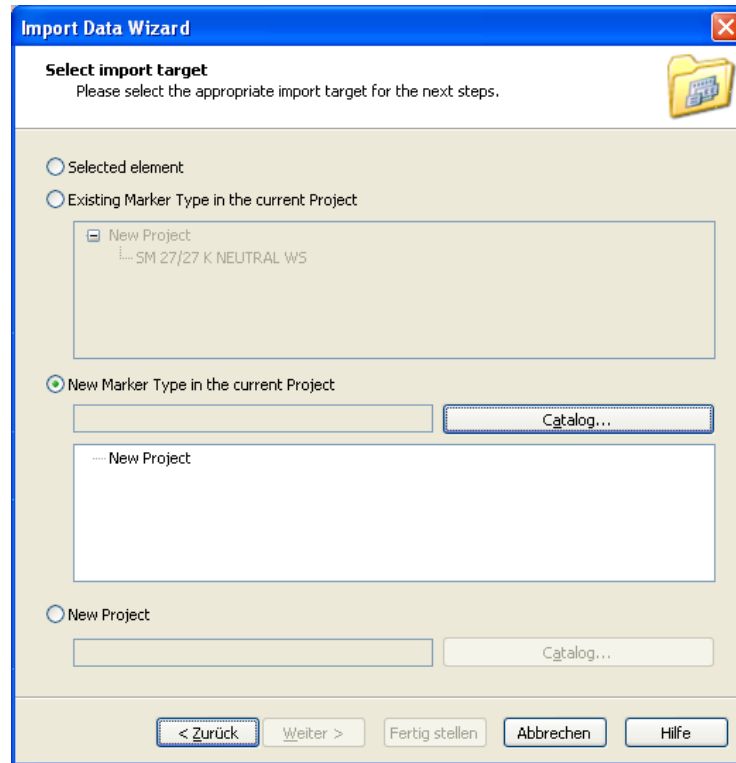

Selected element

For this option, a marker type must be opened and a marker must be selected. The import is inserted from the selected marker on. If no marker is selected, the data is inserted from the first marker on.

Existing marker type in current project

For this option, a marker type must be opened. The import is effected starting with the first marker of the selected marker type.

New marker type in current project


- Click on "Catalog..." to select a marker type from the catalog or from the saved templates (*.mpt).

A new marker type is added to the current project during the import.

New Project

- Click on "Catalog..." to select a marker type from the catalog or from the saved templates (*.mpt).

The import is effected into a new project with the selected marker type.


-  If a non-saved other project/marker type is still open, a confirmation prompt is displayed before the import starts.

Steps 4/5: Selecting the data format and field delimiter

Specify whether the columns in the source file have been defined with a delimiter (such as a semicolon or tab character) or with a fixed column width (see section "Source file with delimiter" or "Source file with fixed column width").

In addition, you can select:

- File origin
Specify the operating system used to create the file.
- Fields enclosed by
Text characters enclosed by the character specified here are interpreted as text. Delimiters are thus ignored (masked).

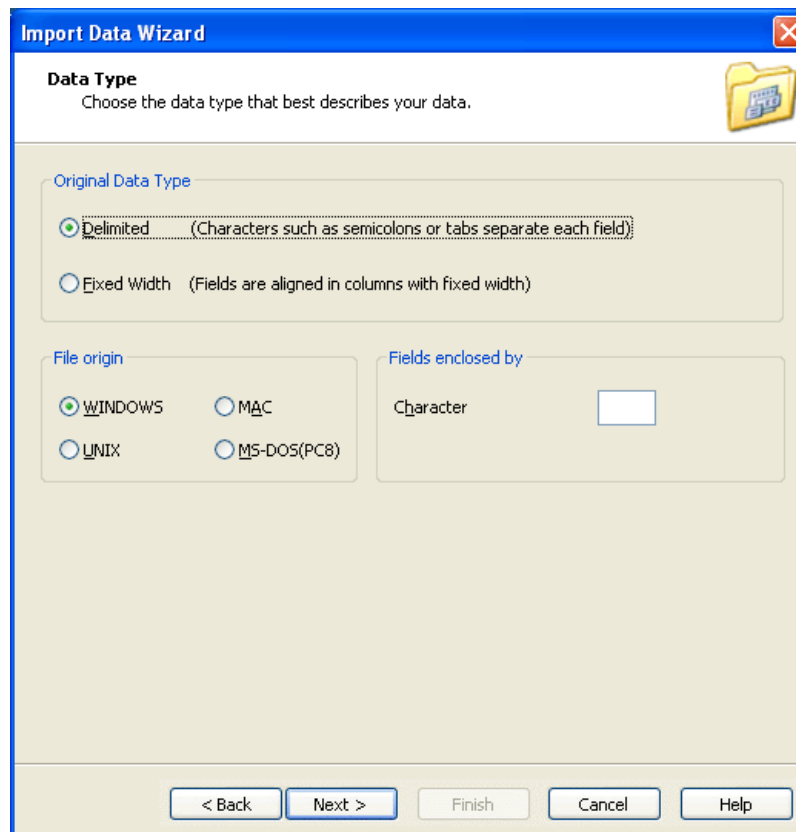

Import Data Wizard

Data Type
Choose the data type that best describes your data.

Original Data Type

☒ Delimited (Characters such as semicolons or tabs separate each field)

☐ Fixed Width (Fields are aligned in columns with fixed width)

File origin

☒ WINDOWS ☐ MAC

☐ UNIX ☐ MS-DOS(PC8)

Fields enclosed by

Character

< Back Next > Finish Cancel Help

Source file with delimiter

- Select the option "Delimited..." if the source file is a file with columns that are delimited by a character, such as semicolon, tab, etc.

Example of a file with delimiter

Opened in Microsoft® Excel®:

	A	B
1	=X1	1
2		2
3		3
4		4
5		5
6		6
7		7
8	=A1+1	L1
9		L1
10		L2
11		L2
12	=A1+2	M1:L1
13		M1:L2
14		M1:L3
15		I 1.0
16		I 1.1
17		I 1.2
18		I 1.3
19		I 1.4
20		I 1.5
21		I 1.6
22		I 1.7
23		I 2.0
24		I 2.1
25		I 2.2
26		I 2.3
27		I 2.4
28		I 2.5
29		I 2.7
30		I 3.0
31		I 3.1
32		I 3.2
33		I 3.3

Opened in a text editor:

```
=-X1;1
;2
;3
;4
;5
;6
;7
=A1+01;L1
;L1
;L2
;L2
=A1+2;M1:L1
;M1:L2
;M1:L3
;I 1.0
;I 1.1
;I 1.2
;I 1.3
;I 1.4
;I 1.5
;I 1.6
;I 1.7
;I 2.0
;I 2.1
;I 2.2
;I 2.3
;I 2.4
;I 2.5
;I 2.7
;I 3.0
;I 3.1
;I 3.2
;I 3.3
```

The examples shown above are a two-column file in Excel® with the semicolon defined as the delimiter as shown on the right. Because there is no data before the semicolon in the second row, for example, the first column is empty.

The file on the right was saved from within Excel® in CSV format (character-separated values).

- Click on **Next** to go to the next step.

Delimiters

☐ Semicolon
 ☒ Tab

☐ Space
 ☐ Comma

☐ Other


Ignore Lines

First Import Line:

Last Import Line:

☐ Keep 'Other' Delimiters

- The program suggests the characters to delimit the columns. If a different delimiter has been used, you can select it by clicking the appropriate radio button.
- If you click the **Other** radio button, you can select another delimiter in the field next to this.
- To use different delimiters on an additive basis, enter them in the **Other** field and enable the **"Keep 'other' delimiters"** option.
This option is only available if the csv, VK, or WES filter was selected in step 2.
- A new column starts at the points at which there is a delimiter.
- Define the first and last import lines.

-  Unfortunately, the semicolon, tab, space and comma cannot be retained as the delimiter with the option "**Keep 'other' Delimiters**" !


Source file with fixed column width

- Select the option "Fixed width..." if the source file contains fixed-width columns, for example column 1 = 10 characters, column 2 = 2 characters.

Example of a fixed-width file opened in a text editor

```
Projekt A  A1 A11
Projekt A  A1 A12
Projekt A  A3 A13
Projekt A  A4 A14
Projekt A  A5 A15
Projekt A  A6 A16
Projekt A  A7 A16
Projekt A  A8 A18
Projekt B1 B1 B11
Projekt B1 B2 B12
Projekt B1 B3 B13
Projekt B1 B4 B14
Projekt B1 B5 B15
Projekt B1 B6 B16
Projekt B1 B7 B17
Projekt B1 B8 B18
```


- Click on **Next** to go to the next step.

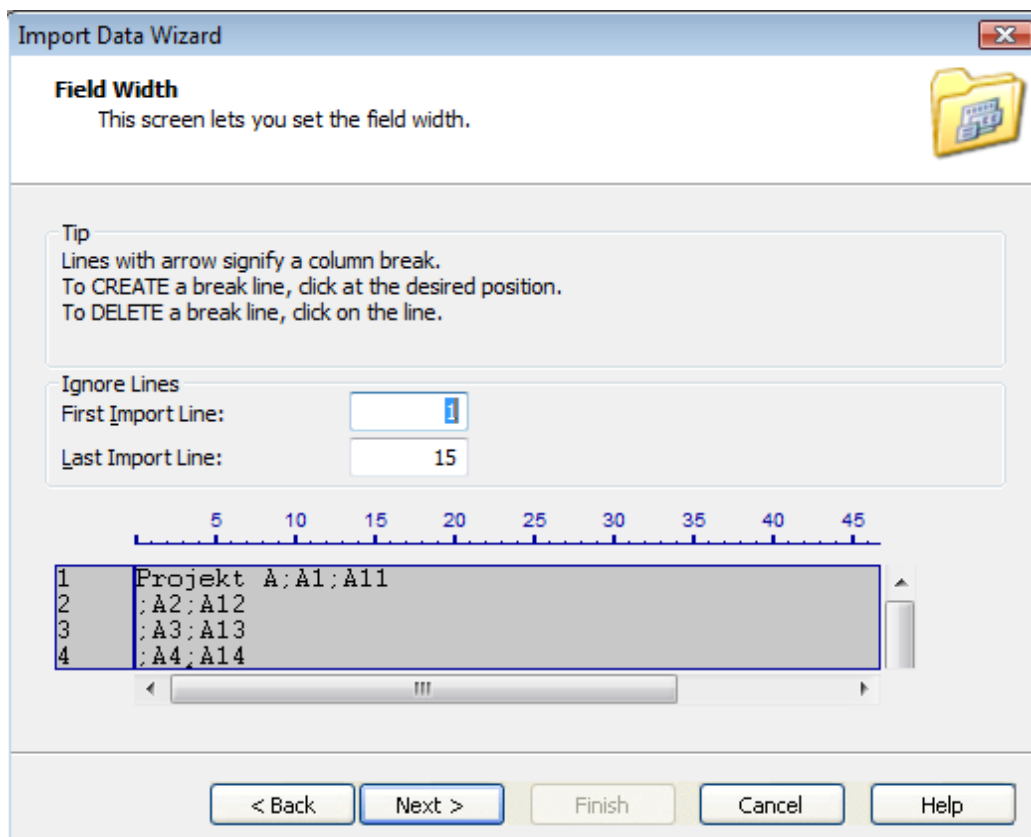

The screenshot shows the 'Import Data Wizard' window, specifically the 'Field Width' step. The window has a title bar with a close button. Below the title bar, the text 'Field Width' is displayed, followed by the instruction 'This screen lets you set the field width.' A yellow folder icon is visible in the top right corner. A 'Tip' box contains the following text: 'Lines with arrow signify a column break. To CREATE a break line, click at the desired position. To DELETE a break line, click on the line.' Below the tip box, there are two input fields: 'First Import Line:' with a value of 1, and 'Last Import Line:' with a value of 15. A horizontal ruler with markings from 5 to 45 is positioned above a text area. The text area contains the following lines: '1 Projekt A;A1;A11', '2 ;A2;A12', '3 ;A3;A13', and '4 ;A4;A14'. The first line is highlighted. At the bottom of the window, there are five buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'.

Define the column widths.


- To do this, click on the ruler at the position where you want a new column to start. The columns are separated by an arrow.

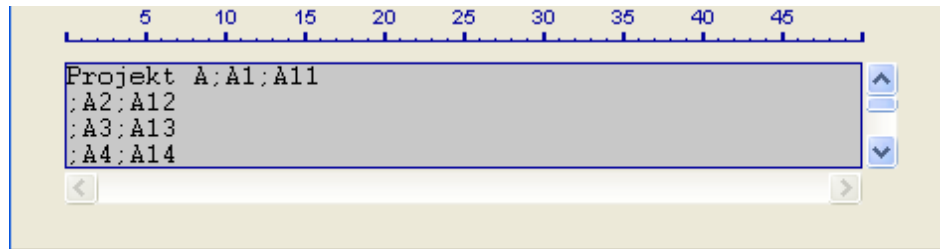

- You can remove the column break by clicking on the arrow again.

Excel file: Importing

When importing an Excel® file (*.xls) you can select the worksheet and import range in this step.

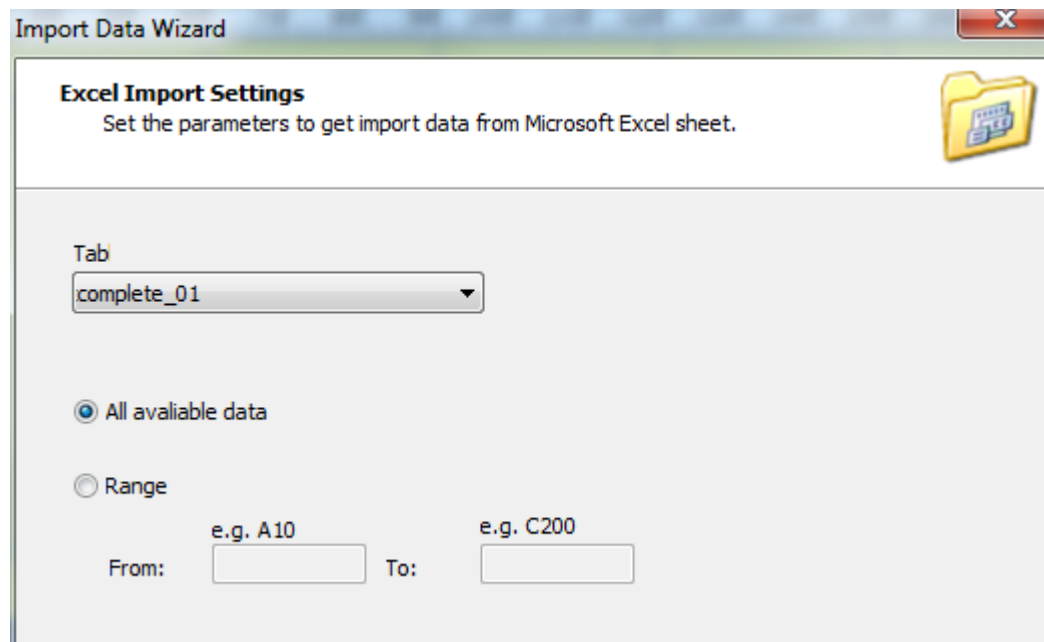

- i** Data is only imported from one worksheet
Only content is imported – no formats

Step 6: Options

Set further import options:

- Filter: Simple filter rule
The selected column is imported filtered using the selected criteria
- Repetitions: The content of the selected column is repeated several times.
- Extended filter
Further filter rules that can be applied to several columns.

Import Data Wizard

Options

Choose the phrase, the repetition and the sort order of a column.

Filter

Column:

Column 1

Criteria:

Starts with

0

Repetitions

Column:

Column 2

x

1

Extended Filter ...

Click the column heading to sort the fields in ascending or descending order.

Pos	Column 1	Column 2	Column 3	Column 4	Column
1	A	B	C	D	E
2	G	H	I	J	K
3	1	2	3	4	5
4	7	8	9	10	11

< Back

Next >

Finish

Cancel

Help

Step 7: Field mappings

Use this step to determine the field mappings.

- Mapping type
- Field mapping
- Field format

Import Data Wizard

Field mappings
This step allows you to map the source columns to the target fields.

Mapping Type: ☒ column by column ☐ line by line

PROJECT =

MARKER =

Column 1	Column 2	Column 3	Column 4	Column 5	Column 6
A	B	C	D	E	F
G	H	I	J	K	L
1	2	3	4	5	6
7	8	9	10	11	12

< Back Next > Finish Cancel Help

Mapping type

Column by column

Column by column refers to the columns of the data grid.

Select **Column by column** if you want to assign the content to special columns (markers/elements).

Line by line

Line by line refers to the lines of the data grid.

	PROJECT	MARKER	TEXTBOX1
1	→	2	→ 3
		→ 4	→ 5
6	→	7	→ 8

Select **Line by line** if you want to add the imported content line by line (as shown in the data grid).

Field mappings

You can import data into existing elements (into the marker type) via the field mappings. The field names – such as PROJECT, MARKER or TEXTBOX1 – are defined via the properties of the elements (see chapter "Adjusting element names")

The columns to be imported can be linked as you wish.


PROJECT	=	Column 1		
MARKER	=	Column 2	Tab	Column 3
TEXTBOX1	=	Column 5	Plus	Column 6

Combination options are, for example:



- Return
- Space
- Tab
- Without delimiter (plus)
- Texts

Field formats

The content of the columns to be imported can be formatted via the Import Wizard (font, color, size).

- Select a drop-down field with selected column.
- Click on the icon  to open the format dialog.
- Select the data format.



Data already formatted is color-shaded:

Mapping Type:		<input checked="" type="radio"/> column by column	<input type="radio"/> line by line		
PROJECT	=	Column 1			
MARKER	=	Column 2	Line	Column 3	

- To delete ALL formats, click on .

Import Project Text into Marker




The texts of the project layer (project markers) can automatically be inserted in the marker areas (markers) during the import process.

- Click on the  button to import the project texts into the markers.
- The appearance of the button changes to .

Example:

The following text file is due to be imported using the indicated field mappings:


```
1  → -X0
2  S1 → A1 → -X1
3  S1 → A1 → -X2
4  S1 → A1 → -X3
5  S1 → A2 → -X4
6  S1 → A2 → -X5
7  S2 → A1 → -X6
8  S2 → A1 → -X7
9  S2 → A2 → -X8
10 S2 → A2 → -X9
11 S3 → A3 → -X10
12  → -X11
13 S3 → A3 → -X12
14  →
15 S3 → A3 → -X14
16 S3 → A4 → -X15
17 S3 → A4 →
18 S3 → A4 → -X17
19
20
```

Mapping Type: ☒ column by column ☐ line by line   


PROJECT =

MARKER =

Import **WITHOUT** the function results in the following:

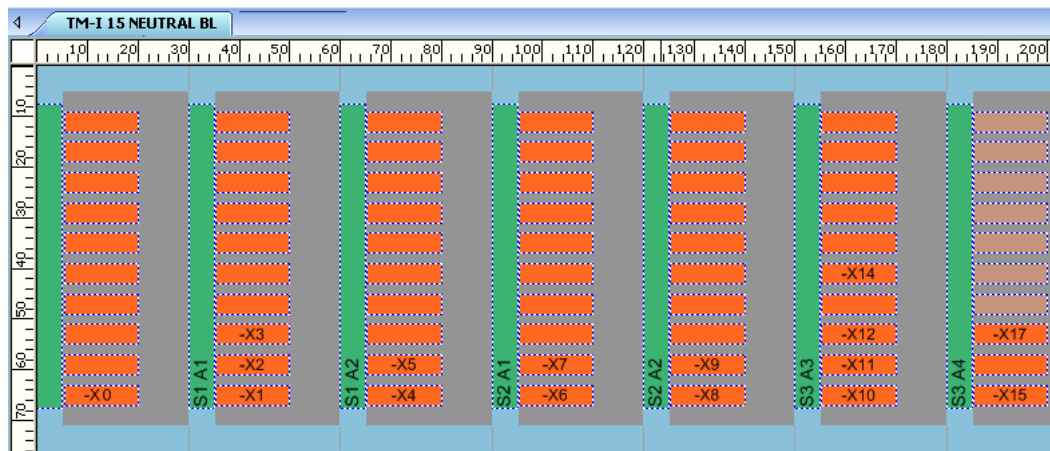


Import **WITH** the function results in the following:

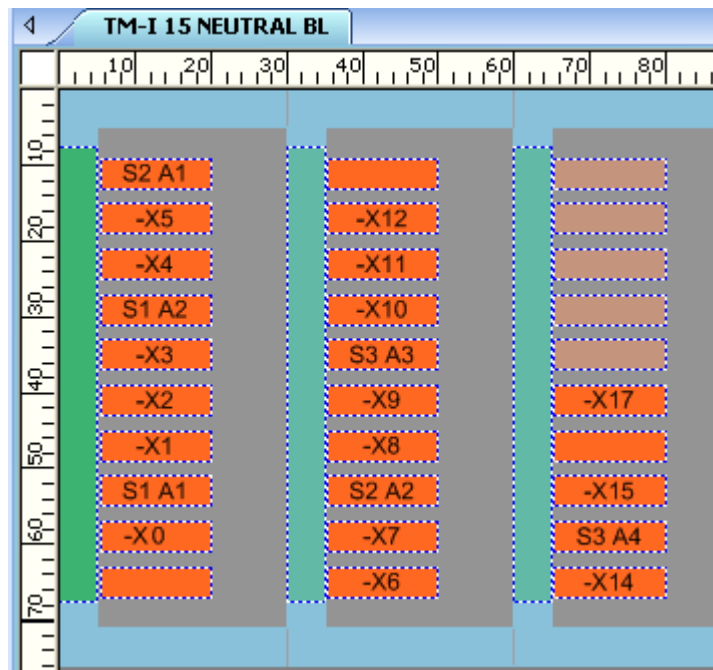

Step 8: Saving and finishing

The last step serves to complete the import. You have the following options to complete the import:

- Set the number of iterations of data import
- Save
The defined import steps are saved as a script file (see chapter "Automated import" or "Batch import").
- Finish
Imports the source file with the settings made.

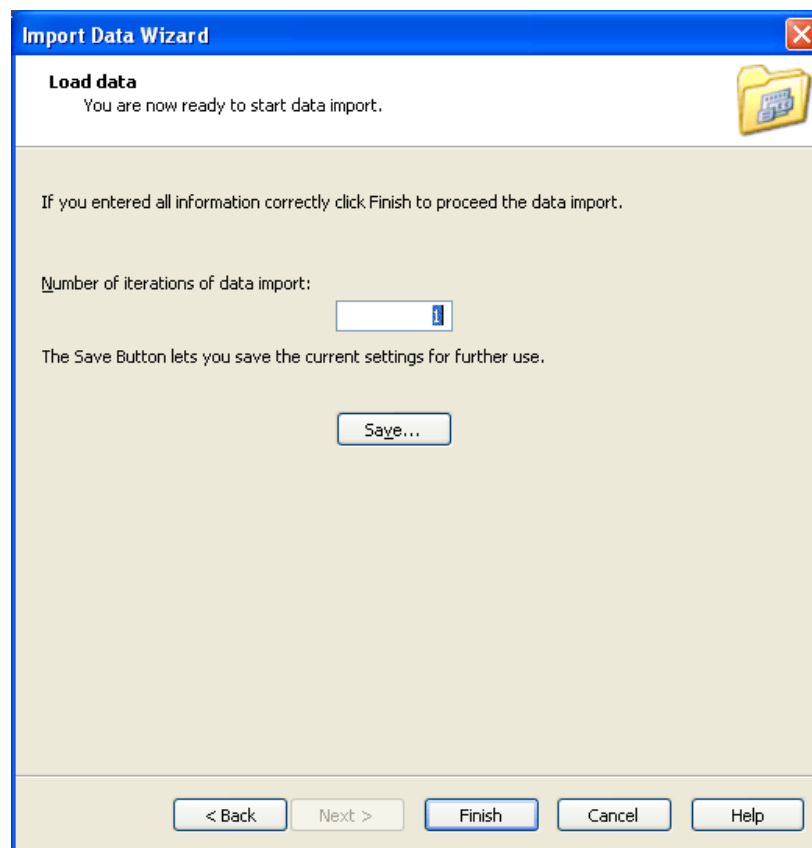

If the data is imported successfully, the following message box appears, showing how many records were imported:

- i** If you can see a red triangle in text fields on the workspace, the imported data does not fit into the field.
Not all of the text is displayed or printed.
You will need to shorten the text or reduce the font size! (See also "Adjusting the font size")

Automated import

If you have previously imported a file and saved the import routine (see section "Step 8: Saving and finishing"), you can reuse this routine.

- Start the import process as described in chapter "Starting the import".

Import Data Wizard

Filter and File Type
Specify the file name to import data from and select one of the available types from the drop-down list.

Select the source file:
C:\projects\yksample.txt Browse...

Select the type of the source file:
☐ Filter
 ☒ **Script**
☐ Use converter More...
 C:\projects\importscript.mis Browse...

Proj.1	1	Cable	bl	2	-1X1a	1	XXX	YY
Proj.1	1	Cable	bl	2	-1X1b	2	XXX	YY
Proj.1	1	Cable	bl	2	-1X1c	3	XXX	YY
Proj.1	1	Cable	bl	2	-1X1d	4	XXX	YY
Proj.1	2	Cable	bl	2	-2X1e	5	XXX	YY
Proj.1	2	Cable	bl	2	-2X1f	6	XXX	YY
Proj.2	1	Cable	bl	2	-1X2a	7	XXX	YY
Proj.2	2	Cable	ws	5	-2X2b	8	XXX	YY
Proj.3	3	Cable	ws	5	-3X2a	9	XXX	YY
Proj.3	2	Cable	ws	5	-2X2b	10	XXX	YY
Proj.3	3	Cable	ws	5	-3X2c	11	XXX	YY
Proj.3	3	Cable	ws	5	-3X2d	12	XXX	YY
Proj.3	3	Cable	ws	5	-3X2e	13	XXX	YY

< Back Next > Finish Cancel Help

Selecting the source file

- Click on the **Find...** button. A window appears where you can select the file you want to import.
- Select the file you want to import and click on the **Open** button.

The path and name of the file you want to import are now shown in the "Select the source file:" field.

Selecting the import script

- Select **Script** as the source file type and click on **Find....**
- **Open** the script file (*.mis).
- Click on the **Finish** button or if you want to make changes, click on the **Next >** button.

The import routine is started and the data is inserted in the marker type.

Batch import

A batch import is an automated import.

You have the following options:

- Import of one or several different source files.
- Each source file can be imported with its own script (see "Saving an import script")
- You can import into marker types from the catalog or templates (*.mpt).
- You can import into marker types of the open project.
- The batch that you compiled can be saved and reloaded at any time.
- A saved batch import file "*.bis" can also be opened via a command line call.

Start the batch import via **File > Batch Import...**

Batch Import

Files

Source File: C:\ProgramData\Weidmueller\M-Print PRO\data\Typelabel.txt ...

Script File: C:\ProgramData\Weidmueller\M-Print PRO\data\Typelabel_Weidmueller.mis ...

Target:

☐ New Marker Type

☒ Marker Type in Project

☒ At the beginning ☐ At the end

SubProject\SM 27/27 NEUTRAL WS ...

Add Change

File List

Source File	Script File	Marker Type
C:\ISB\Weidmueller\Testcomplete\...	C:\ProgramData\Weidmueller\M-Pr...	*ELS 7/40 MC NEUTRAL WS
C:\ProgramData\Weidmueller\M-Pri...	C:\ProgramData\Weidmueller\M-Pr...	THM MT 30X Pica 101/74 SI
C:\ProgramData\Weidmueller\M-Pri...	C:\ProgramData\Weidmueller\M-Pr...	CC 15/17 K MC NEUTRAL GE

Load Settings... Save Settings... Import Cancel

i An asterisk in list entries in the "Marker type" column indicates that the target for import is a template (*.mpt) (see chapter "Templates").

Creating/adding a batch


- If you want to add a new import process to the batch, the fields "Source file", "Script file" and "Marker type" must be completed.

Select the  button in each case.

- In the target you can also choose whether you want to import the data into a new marker type or into a marker type from the project that is open. In the latter case you can also define whether the data should be inserted at the beginning or at the end of the respective marker type.
- Click on the **Add** button to add the selected import combination to the batch.

Changing a batch

Changing the import combination

- Click on the batch entry in the list that you want to change.
- Change the import combination via the  button or the selection option under **Target**.
- Change the batch entry by clicking on **Change**.
- Move the batch entry
- Use the arrow buttons to adjust the order of batch processing.
- Delete batch entries



Deletes the selected list entry.



Deletes ALL list entries.



The entries are deleted without a confirmation prompt.

Converter

The converter supports prefiltering of the source file. It can be executed either via the Import Wizard (see "Settings in the Import Wizard" or via the command line (see chapter "Call parameters for converters").

QLS converter

When the QLS converter is used, a certain number of lines are combined into one line. When you select "QLSConverter.exe" in the import dialog (see chapter "Manual import"), the source file is prefiltered automatically (see "Example of QLS import").

The default settings of the "QLSConverter.exe" file are:

Delimiter:	Semicolon
Number of linked lines:	2


The parameters that can be set are given in chapter "Call parameters for converters".

Example of QLS import:

The customer wants to import 2 lines of the source file data as 1 line in the program.

Source file:


This file is due to be converted before the import.

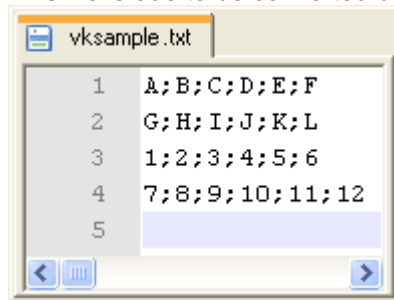

Output file:

This file is imported.

The lines linked together are separated by a semicolon by default (see illustration).

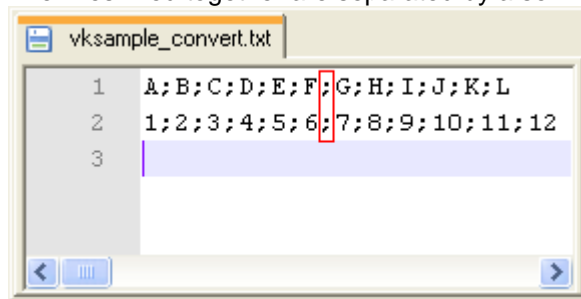

TNV converter

When the TNV converter is used, two column pairs in a line are split into two lines and separated from each other with a new delimiter.

When you select "TNVConverter.exe" in the import dialog (see chapter „Manual import"), the source file is prefiltered automatically (see "Example of TNV import").

The default settings for the "TNVConverter.exe" file are:

Delimiter for source file:	Semicolon
Delimiter for output file:	Colon
Linked column pairs:	Column 0 with column 1 and column 3 with column 4

The parameters that can be set are given in chapter "Call parameters for converters".

The delimiters for the output file are extracted automatically from the "pair1" parameter.

If a pipe character ("|") is used as the delimiter for the output file, then the columns are combined WITHOUT a delimiter. The pipe character stands for "no delimiter".



The columns can only have numeric names; the first column in the source file is column 0.



Blank lines or column pairs with no content are not imported.


Example 1 of TNV import:

From each line in a source file you want to combine two columns and import them into the program as a new line.

No additional parameters are selected.

Source file:

This file is due to be converted before the import.

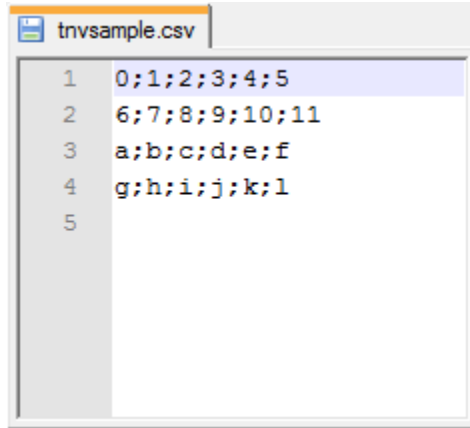


Output file:

This file is the result of conversion by the TNV converter and can then be imported. (See illustration.)

The import is based on the default parameters:

- Delimiter for source file: Semicolon
- Delimiter for output file: Colon
- Linked column pairs: Column 0 with column 1 and column 3 with column 4

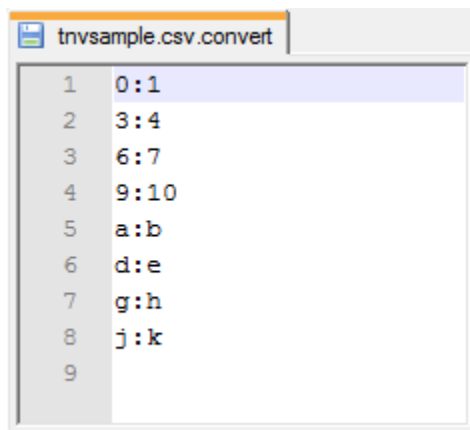


Example 2 of TNV import:

The import is based on the following parameters: -separator:"," -pair1:"2|5" -pair2:"3|4"

- Delimiter for source file: Comma
- Delimiter for output file: No delimiter
- Linked column pairs: Column 2 with column 5 and column 3 with column 4

Source file:


This file is due to be converted before the import.

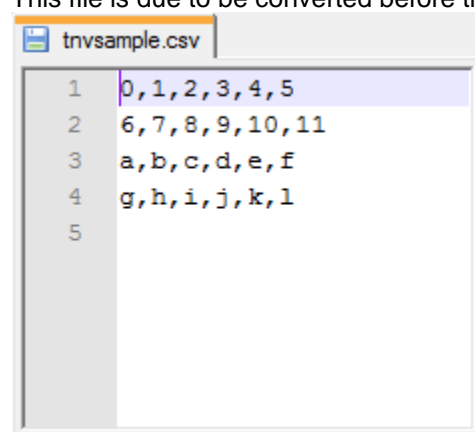

1	0,1,2,3,4,5
2	6,7,8,9,10,11
3	a,b,c,d,e,f
4	g,h,i,j,k,l
5	

Output file:


This file is the result of conversion by the TNV converter and can then be imported.
(See illustration.)

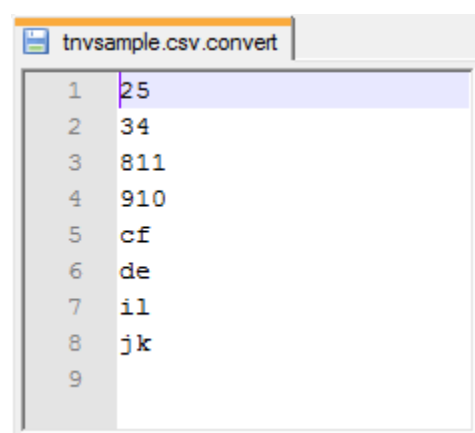


1	25
2	34
3	811
4	910
5	cf
6	de
7	il
8	jk
9	

Settings in the Import Wizard

- Select the source file "vksample.txt".
- Check "Use converter" and click on "More..."

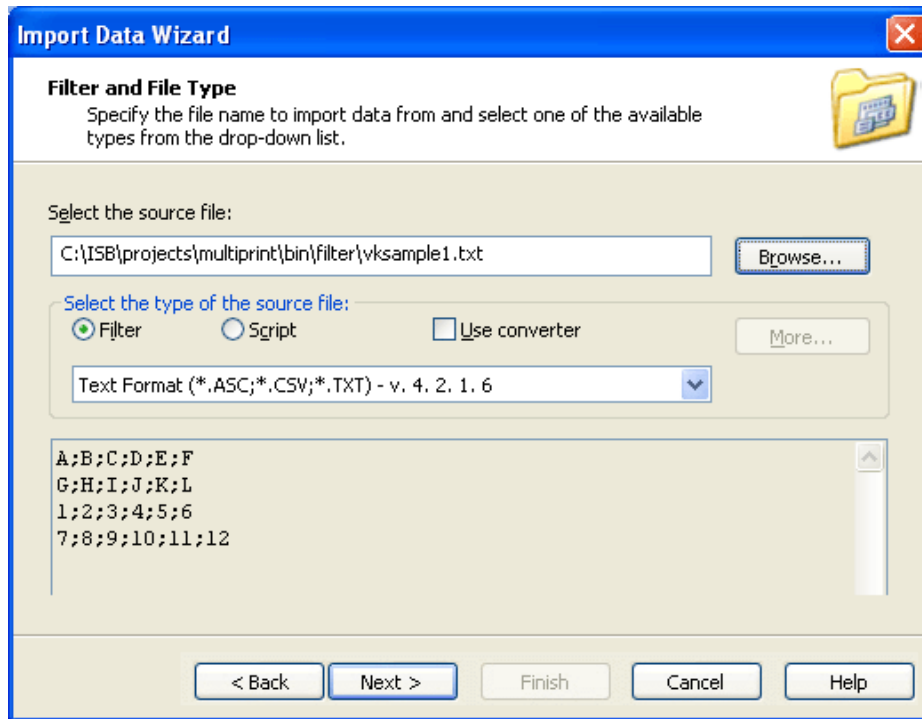

The dialog for setting the converter details opens.

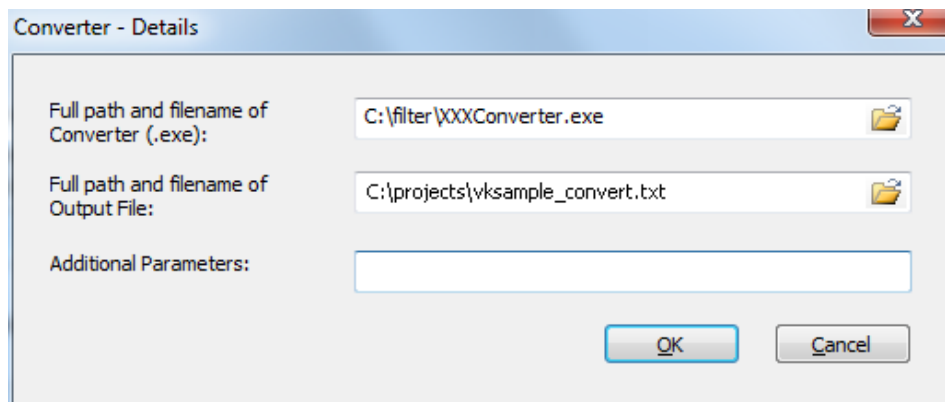

- Click on the selection buttons to select the converter file "XXXConverter.exe" and the output file.
- If the field for the output file remains empty, the path of the source file is used and the extension "convert" is appended to the source file name
- The delimiters and column pairs can be defined in the "Additional parameters" field.
- Select "OK" to return to the Import Wizard.

The rest of the import process is carried out with the output file.

- **i** To execute the converter file "XXXConverter.exe" with other parameters, it must be controlled via the command line (see chapter "Call parameters for converters").

Printing

Introduction


This chapter describes how to set up and calibrate printers and how to assign them to captioned MultiCard mats, labels etc., as well as the two printing options:

5. Via the standard print dialog (see section "Calling up the print dialog").
6. Via the fast printing mode (see section "Fast printing").

Calling up the print dialog

- Select **File > Print...**

This opens the print dialog where you can print and define all printer settings.

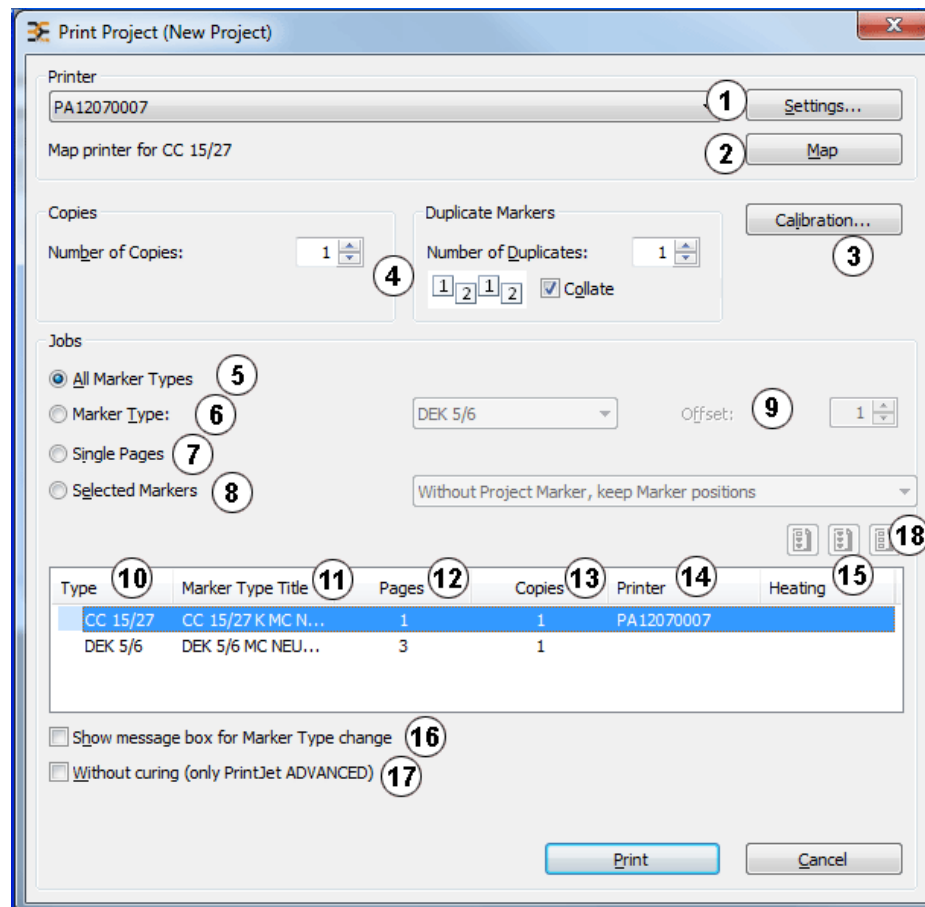

1 Settings

Show the printer settings dialog, if available.

The PrintJet PRO can only be set via the options dialog (see chapter "Options – PrintJet PRO").

- 2 **Map**
Map (assign) a printer to the selected marker type. The mapping is saved. To make changes, see chapter "Mapping a printer to a marker type".
- 3 **Calibration**
Adjust printers to the selected marker type (see chapter "Adjusting the printer offset").
- 4 **Number of copies**
The number times the print job has to be printed.
Printing can also be separated by markers (duplicates) (see chapter "Setting up print jobs").
- 5 **All marker types**
All marker types in the list are printed.
- 6 **Marker type**
Only the selected marker type is printed.
- 7 **Single pages**
Selection of specific pages of different marker types to be printed.
- 8 **Selected markers**
Select whether the project markers are also printed or whether the markers remain at their position or are combined.
- 9 **Offset**
The print dialog shows an "Offset" field if only one marker type has been selected for printing.
The offset shifts the start position for printing from the first marker to a different one.
For example, if you set the offset to 8, the first seven markers remain blank and printing starts at the eighth marker. The default setting is 1.
- 10 **Type**
All printable marker types in the current project.
- 11 **Marker type title / Variant name**
The marker type title. Clicking on the column header switches the display to the variant name (see chapter "Renaming a product").
- 12 **Pages**
Number of printable pages for the marker type
- 13 **Number**
The number of times the marker type in the list is printed.
Click into the field and enter the number of copies.
Note that the **number** is multiplied by the **number of copies**.
- 14 **Printer**
The printer mapped to the marker type. To make changes, see chapter "Mapping a printer to a marker type".
- 15 **Heating**
The required heating for the marker type (depends on the selected printer).
- 16 **Show marker type change**
If there are several marker types in the print process, a dialog is shown before a change to another marker type so that, for example, the printer magazine / plotter fixture can be changed.
- 17 **Without curing (only PrintJet ADVANCED)**
Heating is not switched on when printing on the PrintJet **ADVANCED**. The ink is not cured and can be removed again, for example, with cold water.

18 User-defined page selection

If you select "Single pages" (see item 7), you can make the following choice via three buttons:

- User-defined page selection (manual)
- Select all pages
- Deselect all (no page selection)

Mapping a printer to a marker type

By default, no printer is mapped to a marker type.

If no printer has been mapped to any or all of the marker types to be printed, confirming the message that appears sends the data to the default printer.

- Open the print dialog via **File > Print...**
- In the lower selection box, select the marker type that you want to map to a printer.
- Then select a printer from the "Printer" field and click the **Map** button..
- In the selection dialog that follows, define whether the selected printer is a printer or a plotter.
- In the dialog that follows, you can define whether you want to map the output device to all variants of the product. Select "No" to assign just the selected variant.

The selected printer is automatically assigned to this marker type whenever it is printed.



To map a different printer to the marker type, select the required printer from those that are installed and open the mapping dialog (see section "Options dialog").



Mapping is only necessary for marker types which can be output on the printer or the plotter. Endless labels can only be output on the printer.

Printer correction

The printer may vary from its standard calibration in both the horizontal and vertical directions due to the environment or manufacturing.

- To correct the printer, select **Tools > Printer Settings > Set Printer Correction....**

The following window appears:

Set Printer Correction

Step 1: Select Printer

Select printer for this Marker Type.

Settings...

Page Margin...

Map printer for SF 0/21 Map

Step 2: Print Test Page

In order to determine the printer feed rate you have to print a rectangle with a specified size first.

Specified Width (X): mm

Specified Height (Y): mm

Step 3: Measure Actual Size

Please measure the actual height and width of the rectangle and insert this values into the fields below.

Actual Width (X): mm 100 %

Actual Height (Y): mm 100 %

Print a test page with a rectangle whose size you have to specify.

- In the **Specified width (X)** and **Specified height (Y)** fields enter the size of the rectangle and click the **Print Rectangle** button. .
- Measure the width and height of the printed rectangle, and enter these figures in the **Actual width (X)** and **Actual height (Y)** fields if they vary from the specified values.
- Close the window with **OK**.



Printer correction is not allowed for plotters!

All printers that have been declared as plotters (see "Options – Plotter") are not shown in the printer selection box.



Printer correction only has to be done once for every printer. It does not depend on the markers.



This function runs on the PrintJet **ADVANCED** without curing and at the "fast" print quality.

Setting material-dependent slip

To adjust the MultiCard side margin and feed, select **Tools > Printer Settings > Set Material-dependent Slip...**

Set Material-dependent Slip

Step 1: Select Printer

Select printer for this Marker Type.

Settings...

Page Margin...

Map printer for SF 0/21 Map

Step 2: Print Test Page

In order to determine the printer feed rate you have to print a rectangle with a specified size first.

Specified Width (X): mm

Specified Height (Y): mm Print Rectangle

Step 3: Measure Actual Size

Please measure the actual height and width of the rectangle and insert this values into the fields below.

Actual Width (X): mm 100 %

Actual Height (Y): mm 100 %

Print Adjusted Rectangle

OK Cancel

Print a test page with a rectangle whose size you have to specify.

- In the **Specified width (X)** and **Specified height (Y)** fields enter the size of the rectangle and click the **Print Rectangle** button.
- Measure the width and height of the printed rectangle, and enter these figures in the **Actual width (X)** and **Actual height (Y)** fields if they vary from the specified values.
- Close the window with **OK**.

 This function runs on the PrintJet **ADVANCED** without curing and at the "fast" print quality.

Adjusting the printer to the marker type

If printing is at the wrong position on the print medium (MultiCard mat, label, etc.), then you can adjust the printer to the medium in question.

The settings are made on the printer side by selecting the print medium (see section "Setting the printer to a print medium") or on the program side by setting the margins, feed etc. (see section "Adjusting the printer offset").


Setting the printer to a print medium

When printing labels, the printer has to be set to the right print medium.

- Open the print dialog via **File > Print...**

This opens the print dialog.

- Select the printer to be adjusted and click on the **Settings...** button.

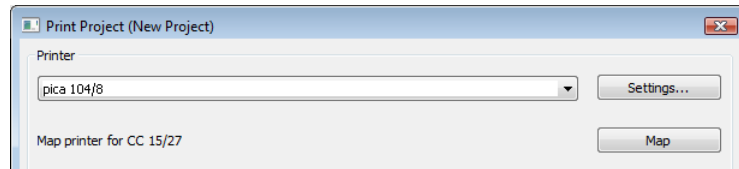

The window for setting up the printer opens.



- In the "Paper" field, select the appropriate print medium and click on OK.


If the right paper is not available, you can click on the **Properties** button to define the settings for the printer.

To make sure that these settings are also available when the program is launched again, you should set these properties directly in the printer driver (see also the printer's manual/short guide).

- Click on the Windows **Start** button, then select **Control Panel > Printers**.
- Right-click on the required printer and select **Properties** from the shortcut menu.
- Set the right paper.


Adjusting the printer offset

- To calibrate a mapped printer, click on the **Calibration...** button.

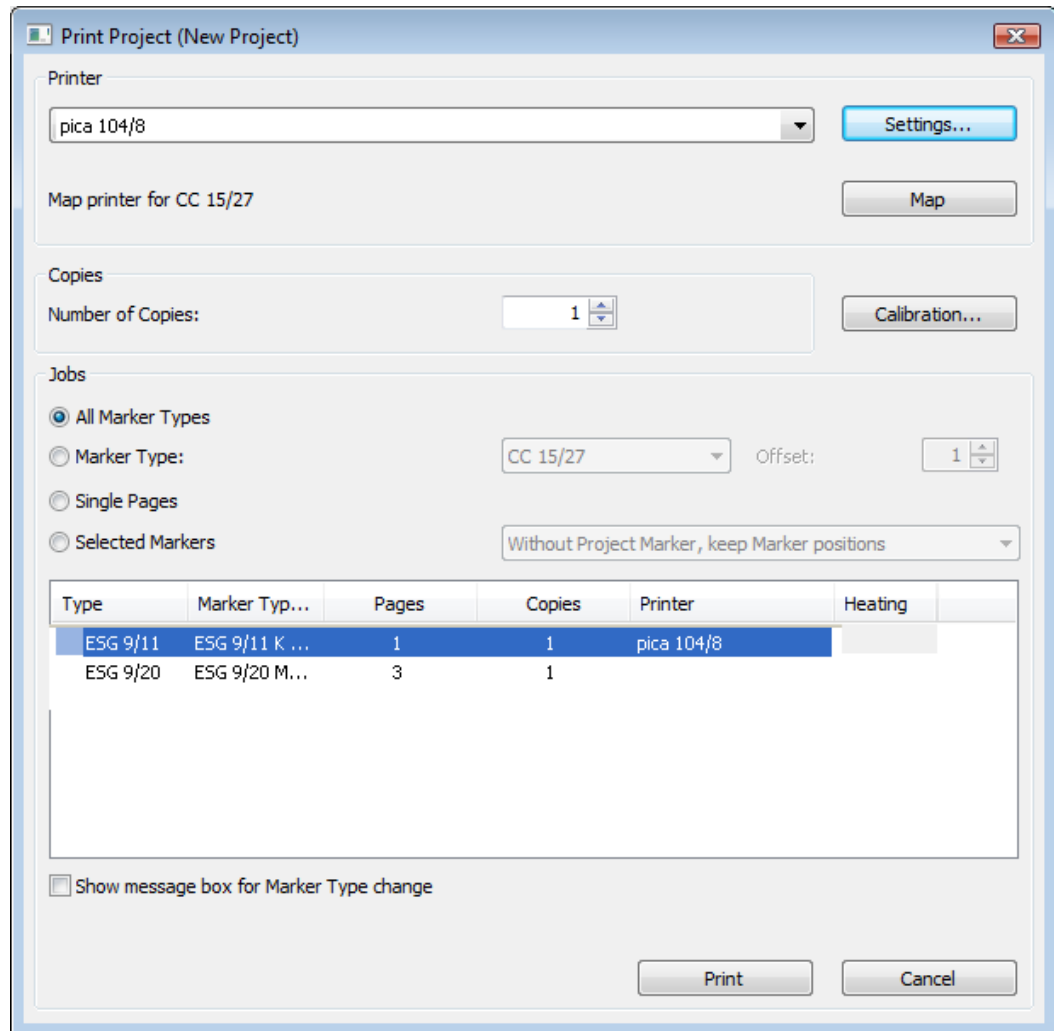

i Calibration is **not possible** if "PJA File Output" is selected. A message to this effect is displayed.

The following window appears.
(The appearance of the image depends on the marker type.)

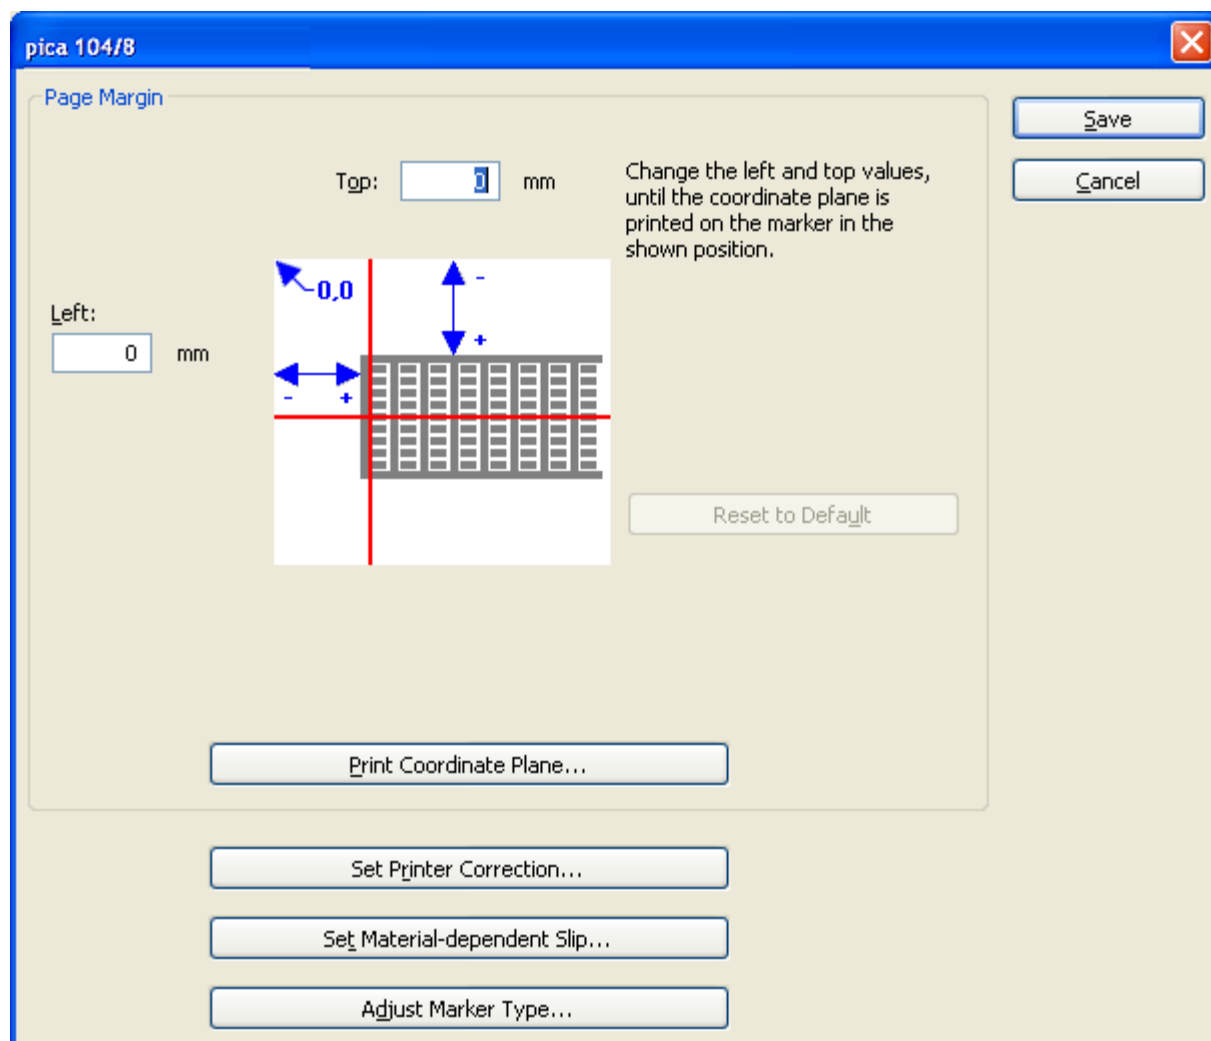


Adjusting the left and top margins

Settings for markers

To adjust the left and top margins of a MultiCard mat, you must print a coordinate plane on a MultiCard mat and measure its position.


The coordinate plane should be in the following position:

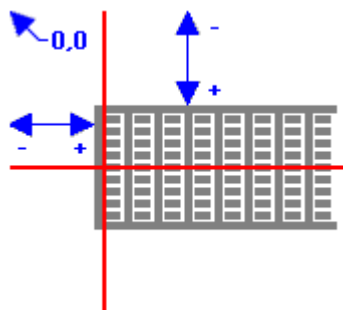

i This function runs on the PrintJet **ADVANCED** without curing and at the "fast" print quality.

- To print a test coordinate plane, click on the **Print Coordinate Plane...** button.

The "Print Coordinate Plane" window opens during printing.

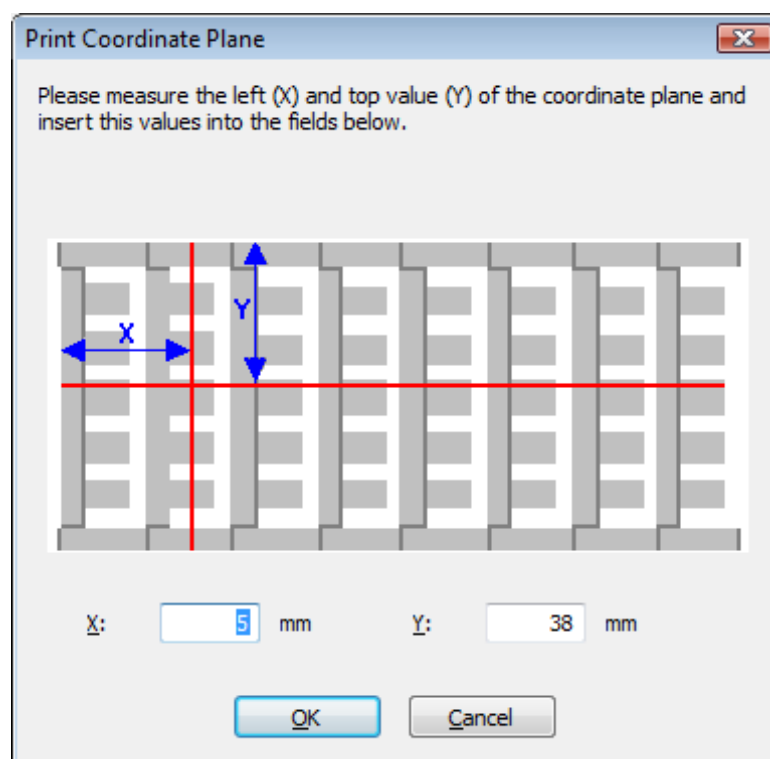

- Measure the left and top margins of the printed coordinate plane as shown, enter the figures in the corresponding fields and close the window with **OK**.


If necessary, repeat these steps to check the position of the coordinate plane.

Settings for labels


To adjust the left and top margins of a label you should print a label (a filled rectangle the size of the label is advantageous) and measure the position.

It is important that the right paper is set in the printer (see section "Setting the printer to a print medium").


The label should be in the following position:

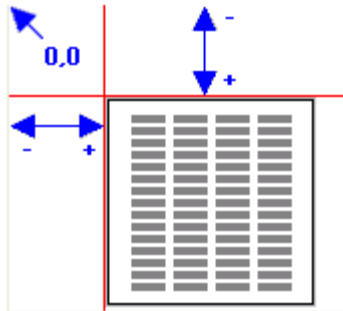

- Measure the left and top margins of the label as shown, enter the figures in the corresponding fields and close the window with **Save**.

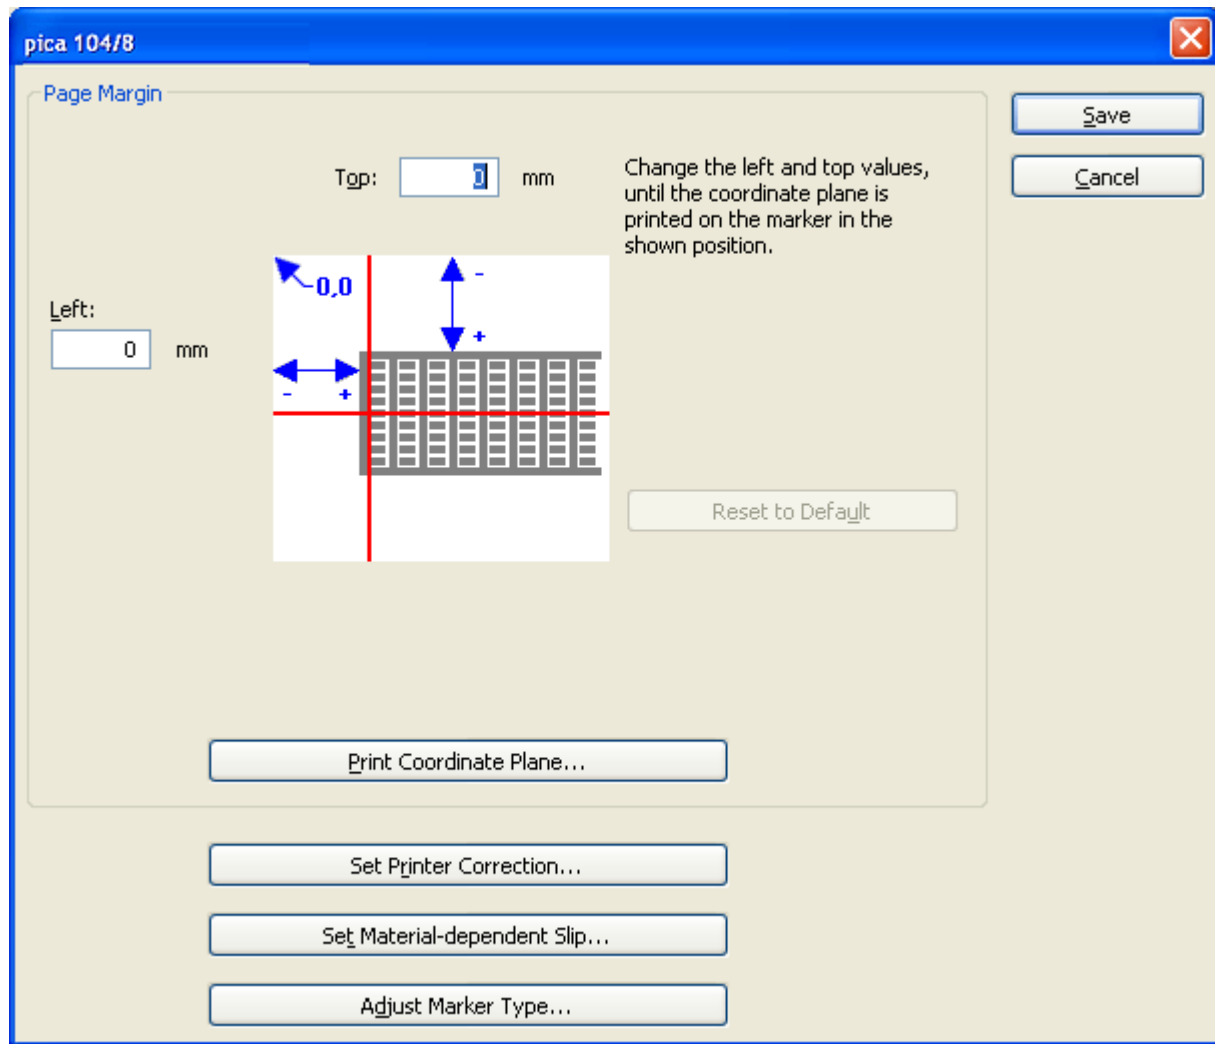

If necessary, repeat these steps to check the position of the label.


-  The margin only has to be adjusted once for every printer. Printer offsets do not depend on the markers.

Adjusting the size of the marker type

Marker types may not be their normal size, for example as a result of the ambient temperature.

- Click on the **Adjust Marker Type...** button, or select **File > Adjust Marker Type...** from the File menu.


The following window appears.

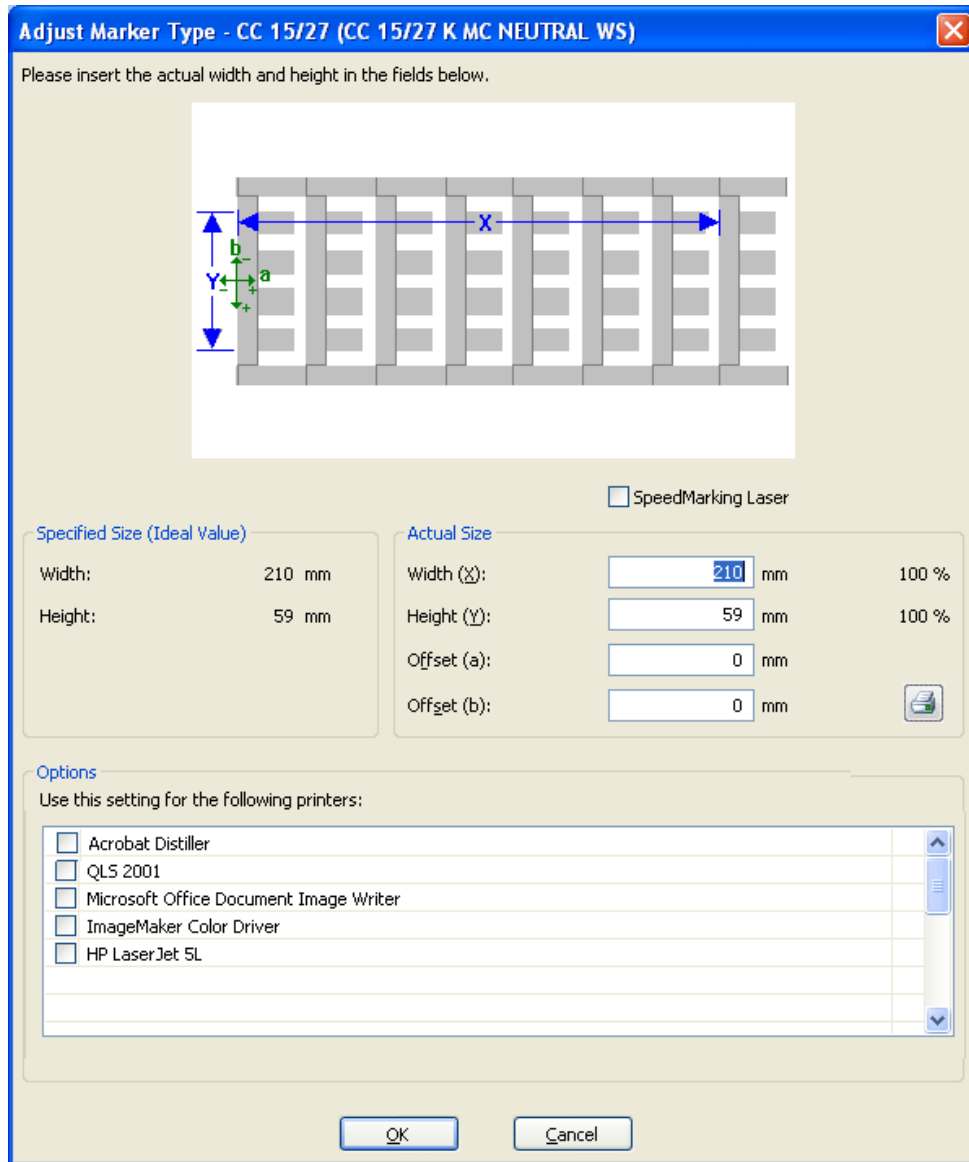


- Under "Options", select the printers for which these settings are due to be saved.
- Measure the width and height of the marker type as shown, and enter the figures in the **Width (X)** and **Height (Y)** fields.
- Close the window with **OK**.



Adjustment aid

You can do a trial print with an adjustment aid.
The adjustment aid consists in printing rectangles in marker size and centered dots.

- Under "Options", select the printer on which you want to output the adjustment aid.
- Click on the  button.
- The adjustment aid is output on the printer.

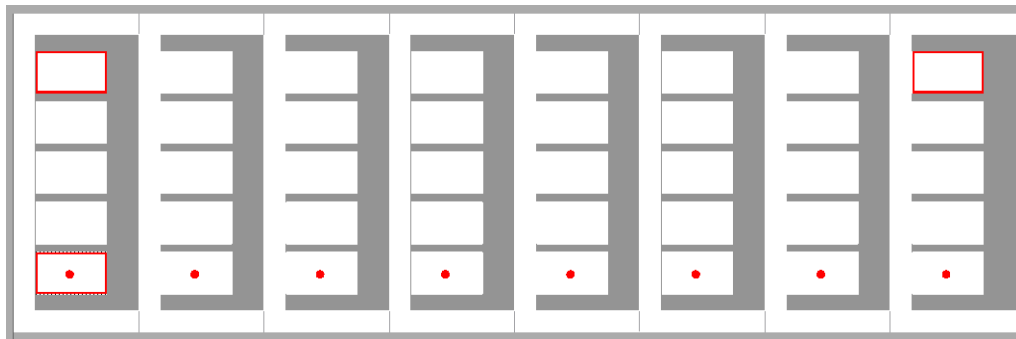Example:




-  The adjustment aid is not available for the plotter.
-  This function runs on the PrintJet **ADVANCED** without curing and at the "fast" print quality.

Setting up print jobs


- Select **File > Print....** on the menu bar.

The print dialog opens and you can select the jobs.

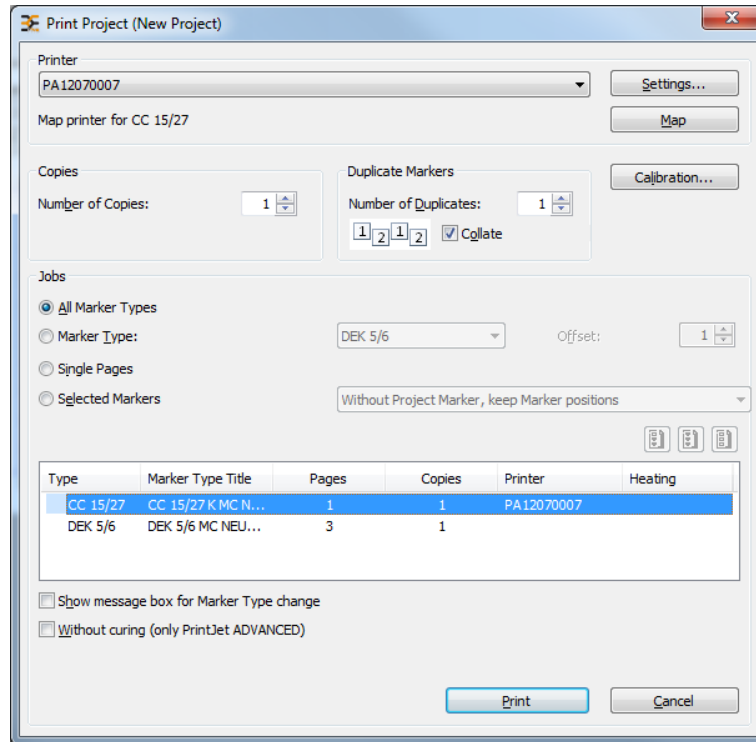


If no printer has been mapped to any or all of the marker types to be printed, confirming the message that appears sends the data to the default printer.

During printing, the individual markers can be reproduced any number of times. Select the settings as follows:



Printing is in the order of markers as arranged in the marker type.




Printing is separated according to the individual markers on the basis of the number of duplicates defined.



Existing projects are retained in the course of duplication.

Example:

Populated marker type:

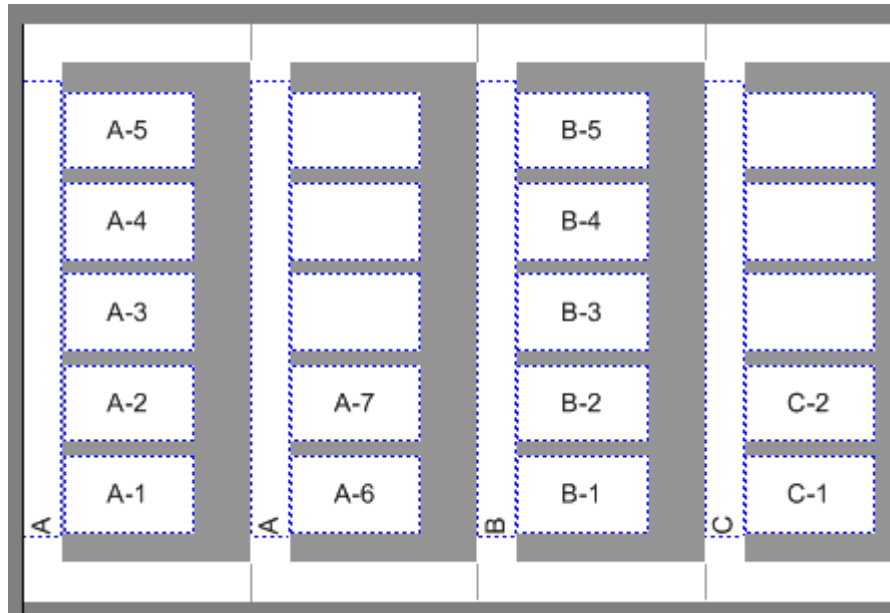


Printing sorted with 2 duplicates:

Duplicate Markers

Number of Duplicates:

☐ ☐ ☐ ☐ ☒ Collate

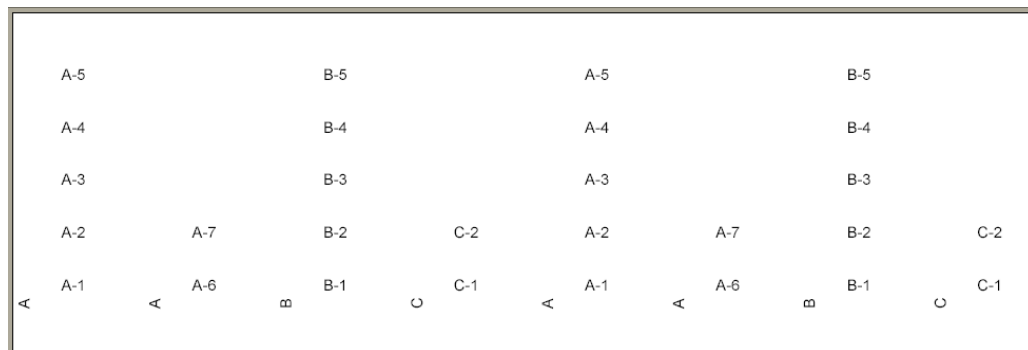

Printing separated with 2 duplicates:

Duplicate Markers

Number of Duplicates:

☒ ☒ ☐ ☐ ☐ Collate


A-3	A-5		B-3	B-5	
A-2	A-5	A-7	B-2	B-5	C-2
A-2	A-4	A-7	B-2	B-4	C-2
A-1	A-4	A-6	B-1	B-4	C-1
A-1	A-3	A-6	B-1	B-3	C-1

Fast printing

- To print just the current page, click on the following icon in the toolbar.



A message is output if the marker type to be printed has not been mapped to a printer.

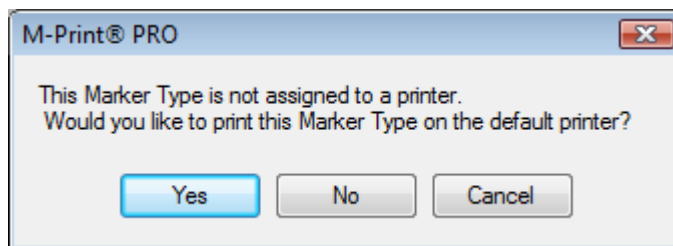

If you specify **Yes**, the page is output on the default printer. If you specify **No**, the print dialog opens so that you can map a printer (see section "Mapping a printer to a marker type").


Printing directly

You can print all supported file formats directly via the command line.

Syntax: `"c:\programMPrintPRO.exe" -p "myprint.rde"`

PrintJet ADVANCED Status Monitor

During output to the PrintJet **ADVANCED**, the PrintJet **ADVANCED** Status Monitor reports the status of the connected printer(s).

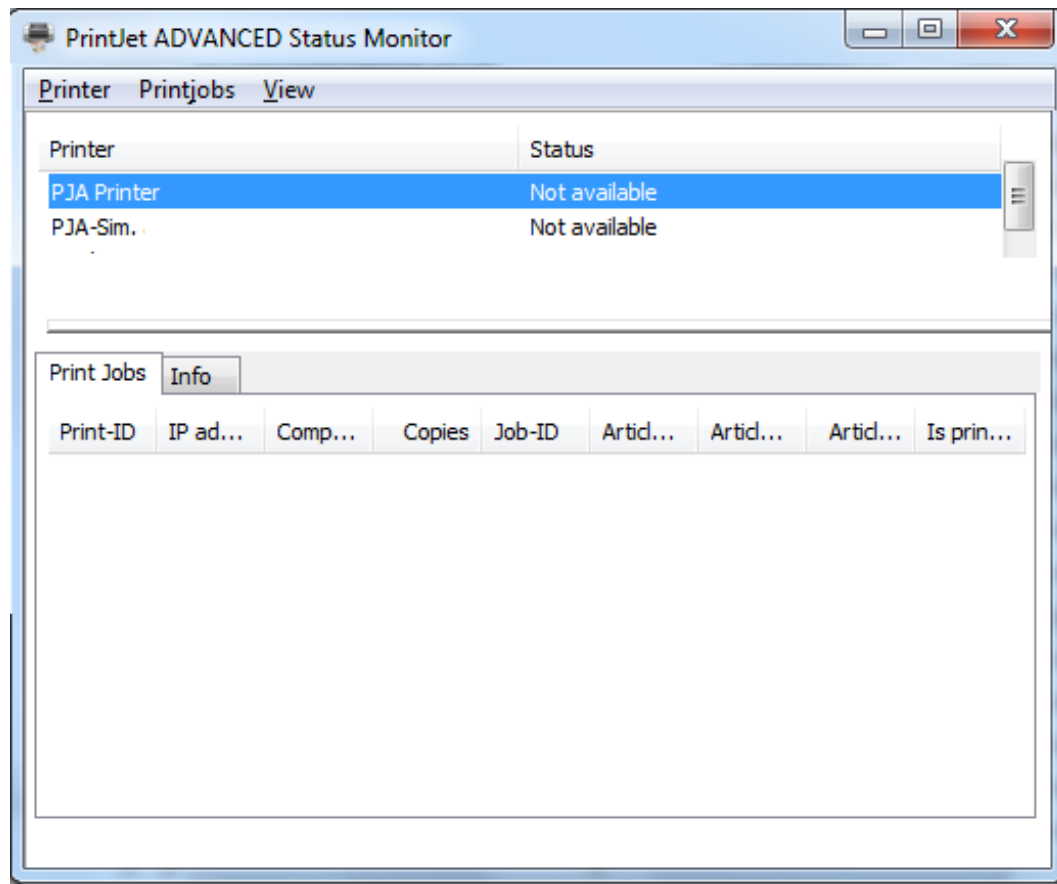


In the options you can define that the **PrintJet ADVANCED** Status Monitor is opened whenever printing starts on the **PrintJet ADVANCED** (see "**PrintJet ADVANCED**").



If a connected **PrintJet ADVANCED** is not shown in the list of printers, check the settings for the print (see "**PrintJet ADVANCED** Explorer").

Settings for the PrintJet ADVANCED Status Monitor

The following settings, among others, can be defined in the **PrintJet ADVANCED** status monitor via "Printer -> Options":

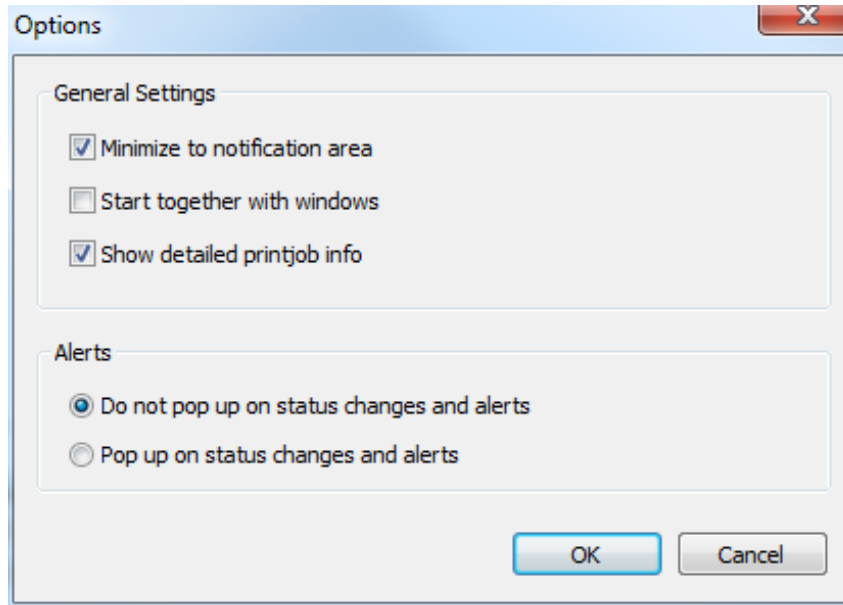**Minimize to notification area**

When the window is minimized, the PrintJet **ADVANCED** Status Monitor is not shown on the taskbar but in the notification area.

Start together with Windows


The PrintJet **ADVANCED** Status Monitor is started when Windows starts.

Show print jobs in detail

If you select this, more information columns are shown on the "Print Jobs" tab (see "Print jobs for the PrintJet **ADVANCED**").

Print jobs for the PrintJet **ADVANCED**

You can see the list of print jobs via the "Print jobs" tab.

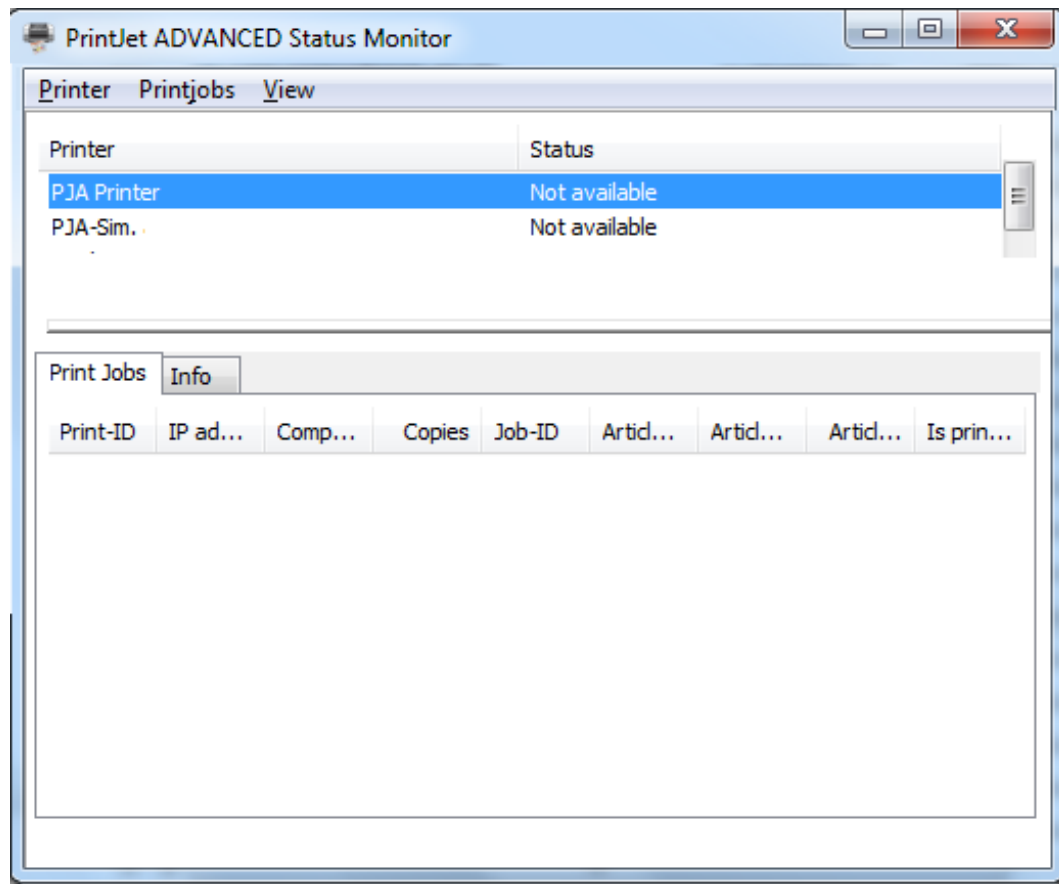


To delete existing print jobs, select the option on the PrintJet **ADVANCED** Status Monitor's "Print jobs" menu.

To change the number of information columns shown, see section "Settings for the PrintJet **ADVANCED** Status Monitor".

Information about the PrintJet **ADVANCED**

You can see information about the printer via the "Info" tab.

The information shown includes, for example, the fill level and expiration date of the individual ink cartridges.

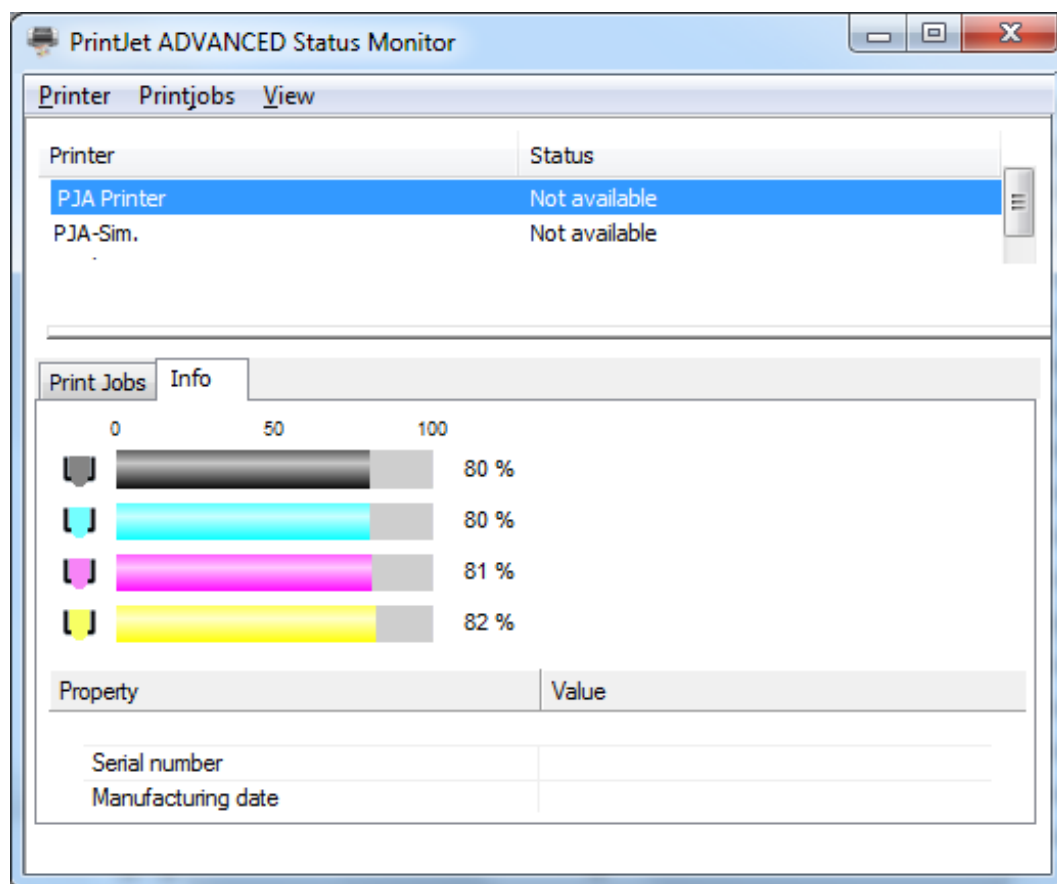


PrintJet ADVANCED Explorer

You can add or remove PrintJet ADVANCED printers via the PrintJet **ADVANCED** Explorer.

Unlike conventional printers, there is no need to install a driver for the PrintJet **ADVANCED** because it is not a network printer.

The PrintJet **ADVANCED** contains its own internal computer which needs to be added to the network via an IP address.


Start the PrintJet **ADVANCED** Explorer via the Windows start menu (folder "Weidmueller").

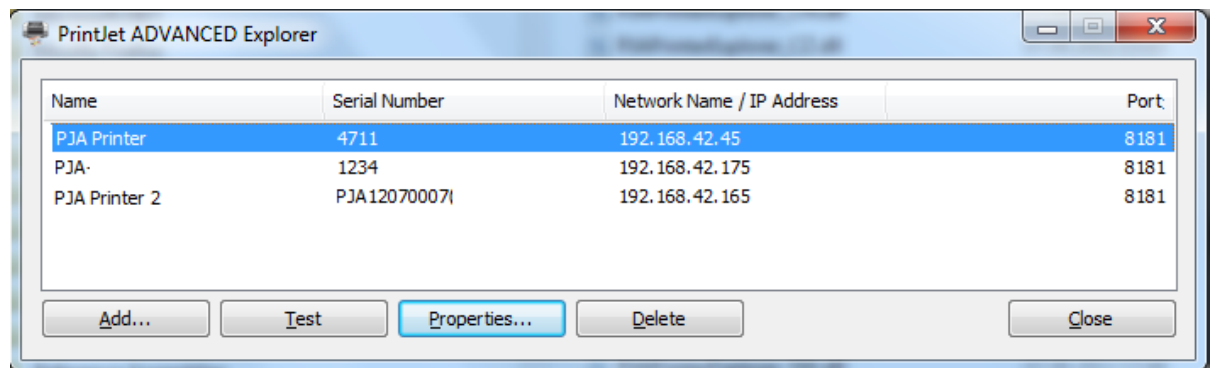

Adding a PrintJet Advanced printer


To add a PrintJet **ADVANCED** printer, start the PrintJet **ADVANCED** Explorer and click on the **Add...** button.

- Choose how you want to connect your printer.

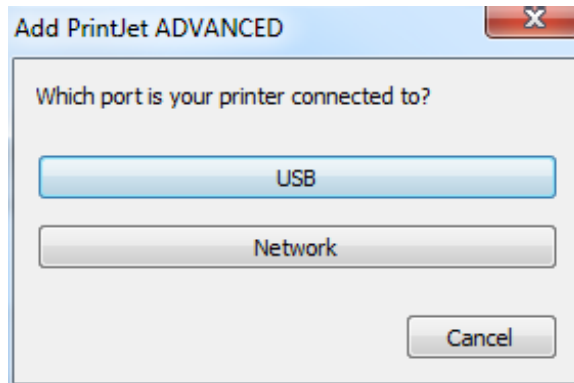

USB port


- Click on the **USB** button.
- The program automatically searches for connected printers

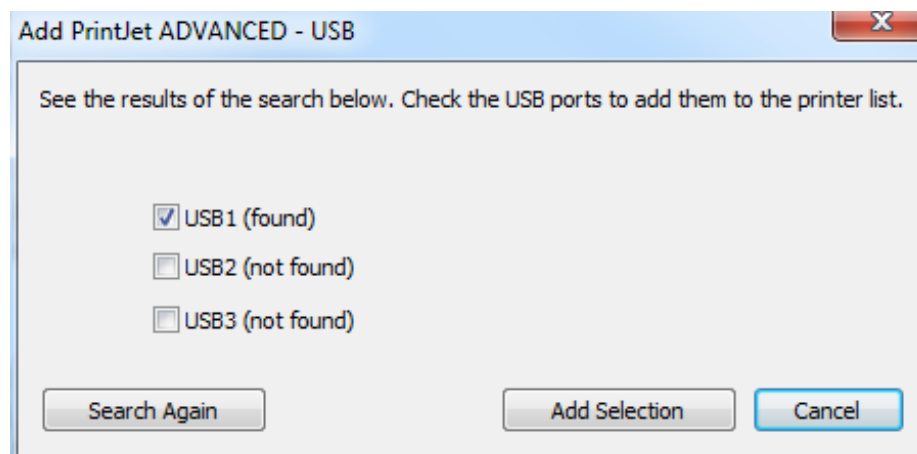

- Select the required USB port.
- Click on the **Add Selection** button.

Network interface

- Click on the **Network** button.
- In the dialog, enter the settings for the printer on the network and click on the "Add" button or
- Click on the **Search Network...** button and, in the search dialog, click on **Add Selected Printers**.

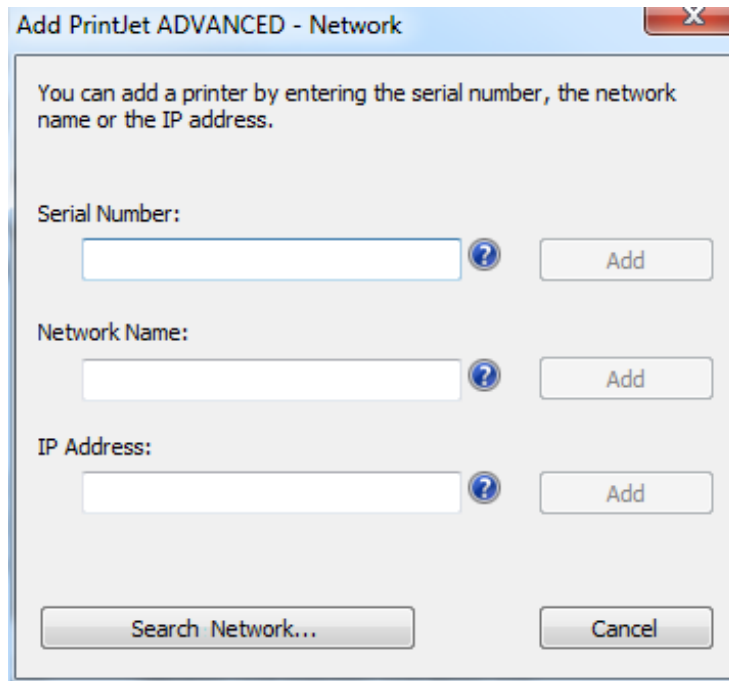

To test the settings, select the test function (see "Testing a PrintJet **ADVANCED** printer").

Testing a PrintJet Advanced printer

To test the accessibility of a connected PrintJet **ADVANCED** printer, start the PrintJet **ADVANCED** Explorer, select the required printer from the list and click on the **Test** button.

If the connection test fails, check the settings for the printer (see "Properties of a PrintJet **ADVANCED** printer").

Properties of a PrintJet ADVANCED printer

To display and adjust the properties of a connected PrintJet **ADVANCED** printer, start the PrintJet **ADVANCED** Explorer, select the required printer from the list and click on the **Properties** button.

A dialog opens in which you can set the name of the printer and, if applicable, the port.

Printer properties

Display Name:	PJA Printer
Serial Number:	PA12070006
Network Name:	
IP Address:	192.168.42.45
Port:	8181

OK Cancel

Activating the plotter

Introduction

This chapter describes how to set up and activate the plotter and how to assign it to captioned MultiCard mats, labels etc., as well as the plotting options.

The plotter can be connected via the Centronics or USB port.

For details of general printing functions, please refer to chapter "Printing".

Plot mode

In plot mode, only the functions and elements relevant to the plotter are shown on the user interface.

The following elements are permitted in plot mode:

7. Graphics, provided they are plotter symbols (*.mps files)
8. Text fields containing plotter font characters
9. Lines

All elements are shown in black-and-white.

On entering plot mode, all layers are checked for unplottable elements. If unplottable elements are found, a message appears. Such elements (e.g. barcodes) are no longer shown, but stay present internally. All elements are shown again on quitting plot mode.

- To switch to plot mode, select **File > Toggle Plot Mode**, or click on the following icon in the toolbar:



-


Plot mode is active when "Plot mode" is written next to the version number or when the following icon in the toolbar appears depressed:



On entering plot mode, all elements in the lock layer remain visible so that gaps that could possibly damage the plotter pen remain visible. However, the lock layer is not evaluated in plot mode.

Startup options for plot mode

The display in plot mode can be set up via the options dialog (select **Tools > Options**).

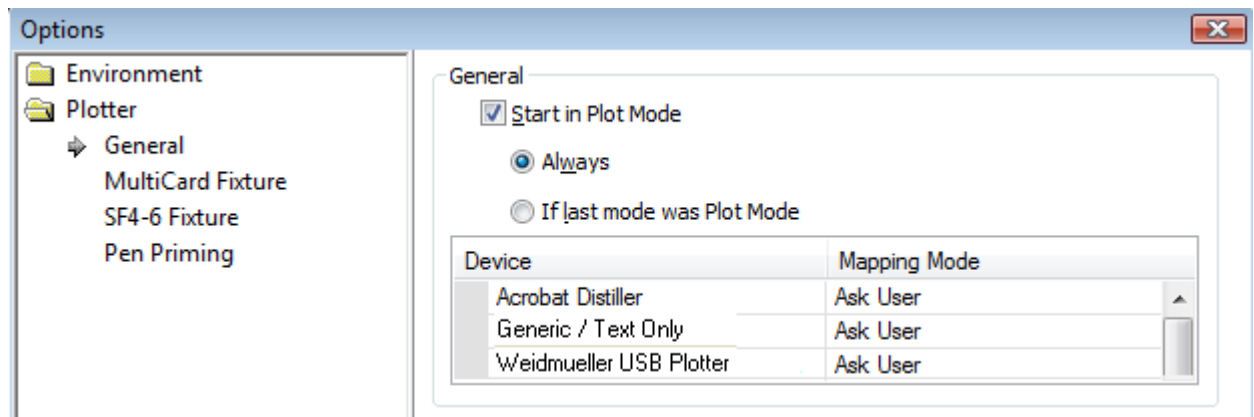

Check "Start in plot mode" if you want plot mode to run when M-Print® Pro restarts or opens a saved M-Print® file or creates a new project.

Printing/plotting


Plotting is carried out in the same way as printing (see "Printing").

A plotter must be mapped to the marker type beforehand (see "Mapping a plotter to a marker type").

Afterwards, the marker type can be adjusted (see "Adjusting the marker type to the printer") and the plotter can be calibrated (see "Adjusting the marker type to the plotter").

Selecting the pen and inlay

Before plotting begins, a dialog appears with the settings for the selected marker type.

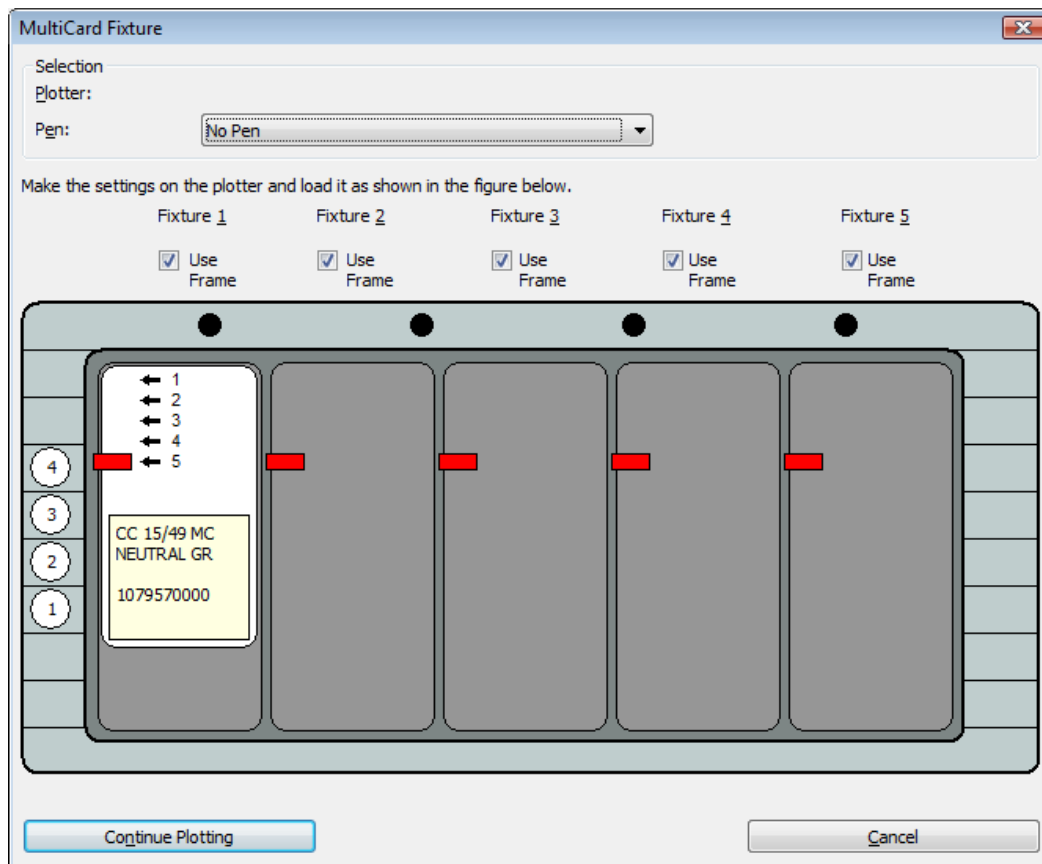

Selecting the pen

Select the pen that is to be used in the plotter. The default setting for the pen is defined in the calibration dialog (see section "Calibration dialog").

If "No pen" is selected, an external pen can be used that is not returned to the pen holder.


Step settings for the inlay

The step settings for the inlay are shown when printing on a MultiCard.

Place the inlay on the step shown (1 to 5). Note that an inlay is not required with some MultiCards.

Changing the marker type

When printing several pages or marker types in a project, a dialog shows which fixture will be printed next and with which marker type.

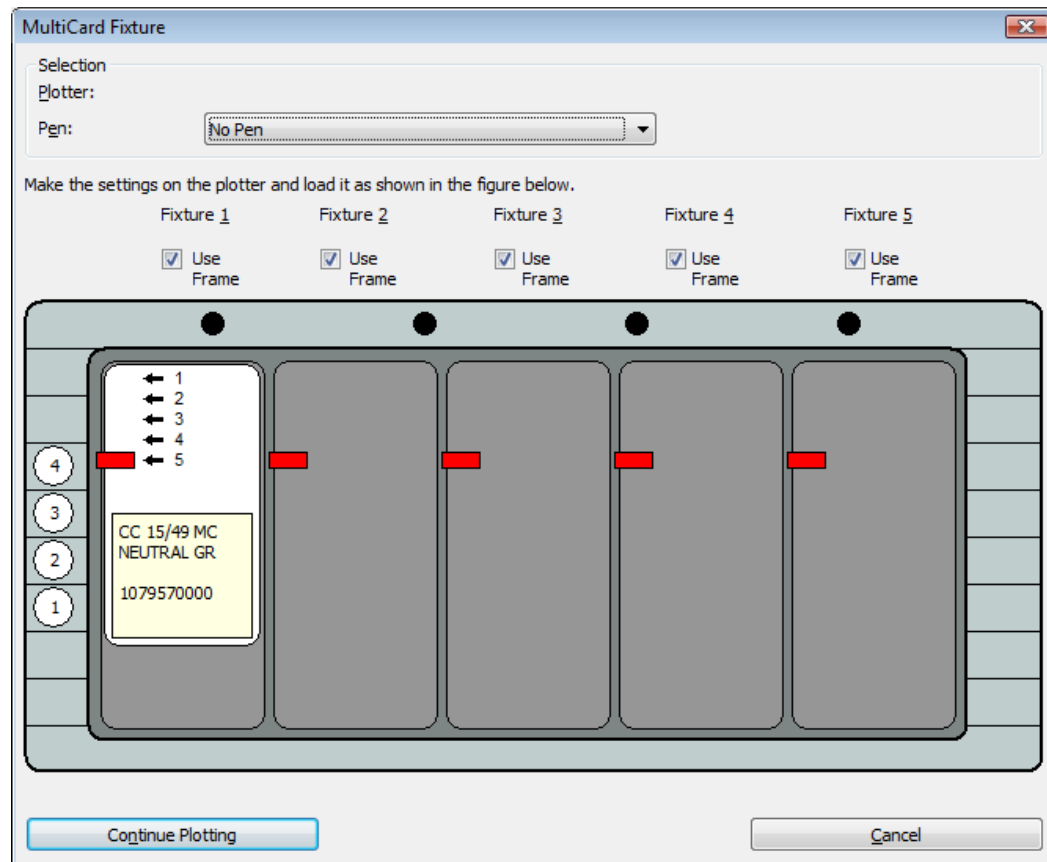


- Click on the "Continue Plotting" button to send the configuration as shown to the plotter. If several pages or marker types are present, the next configuration is shown. After plotting, the plotter waits until you click on the button again.
- Click on "Skip" if the configuration shown is not to be printed. If the project contains further pages or marker types, the next configuration is shown; otherwise the printing process is terminated.
- Click on "Cancel" to terminate the entire printing process.

Adjusting the pen priming position

The default pen priming position of the plotter is set to two blocks next to the pen holder, which, accordingly, become dirty quickly.

To adjust the pen priming position, select **Tools > Options...**

The pen priming position of the plotter can be set on the "Test pen" page.

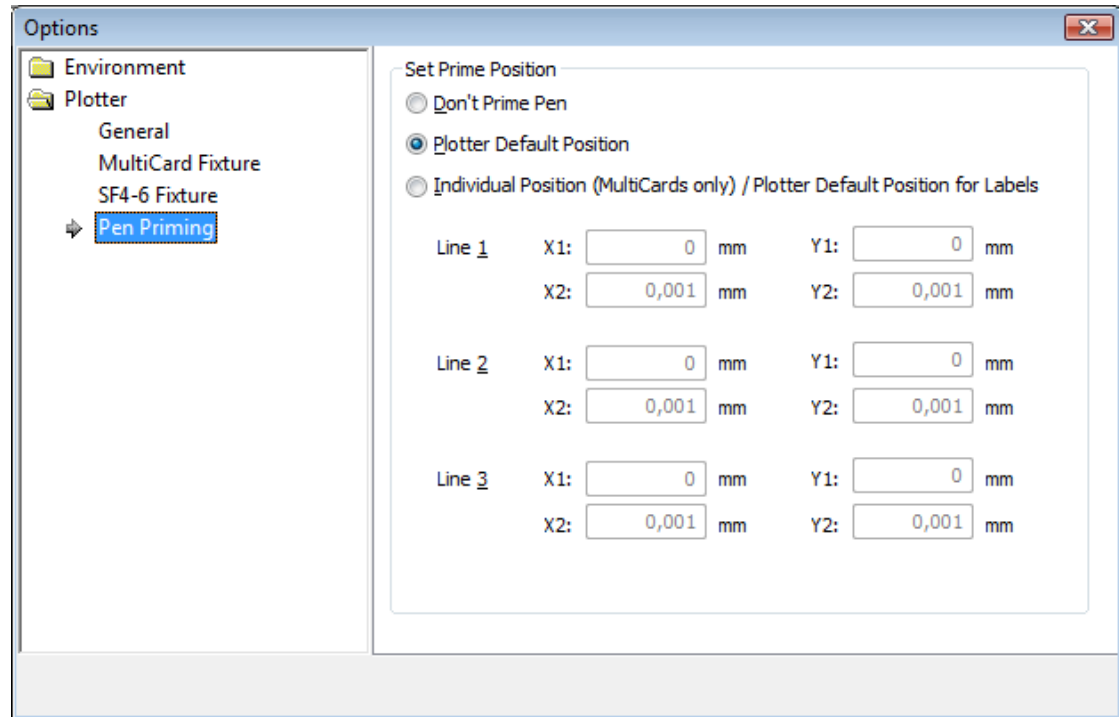

The adjusted pen test position is only valid for MultiCards. The default plotter position is still used for labels.

The adjusted pen priming position takes into account the "Offset X" and "Offset Y" parameters of the MultiCard.

⚠ Please note that an incorrectly selected pen priming position may result in damage to the pen. Always test your settings without a pen first!

Mapping a plotter to a marker type


A printer or a plotter must be mapped to every marker type.

If no printer has been mapped to any or all of the marker types to be printed, confirming the message that appears sends the data to the default printer.

- Open the print dialog by selecting **File > Print...**
- In the lower selection box, select the marker type to which you want to map a printer, select a printer under "Printer" and click on **Map** to confirm your input.

The selected printer is automatically assigned to this marker type whenever it is printed.


- In the window that now opens, choose whether you want to assign the selected printer/plotter as a printer or as a plotter.

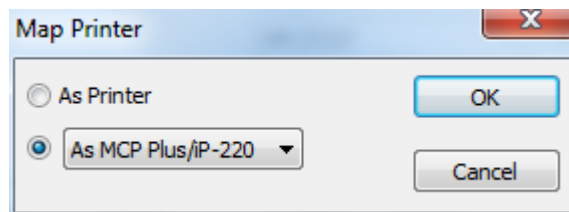

If you select "as plotter", printing is subjected to the limitations of plot mode.


You can revoke this definition at any time via the options dialog (see section "Adjusting mapped printers").

If you select a marker type to which a plotter cannot be assigned (e.g. endless labels), a warning appears.

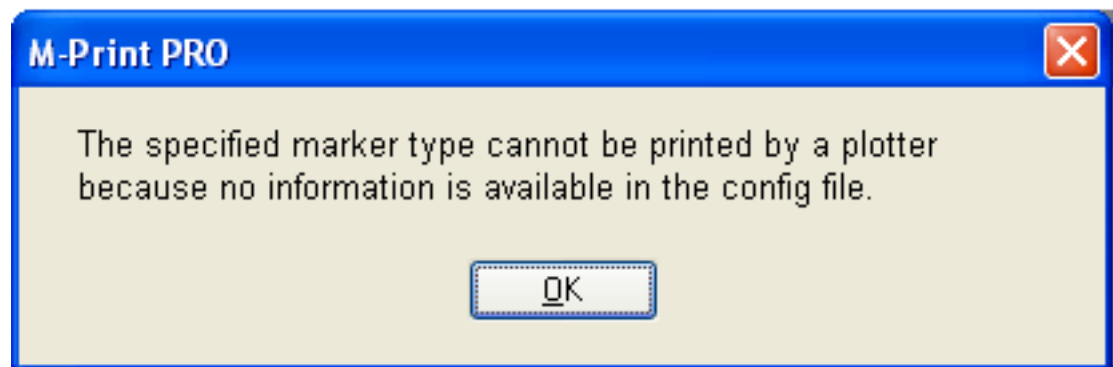


Adjusting the marker type to the plotter

- In order to adjust a mapped plotter to the marker type, click on the **Calibration...** button.

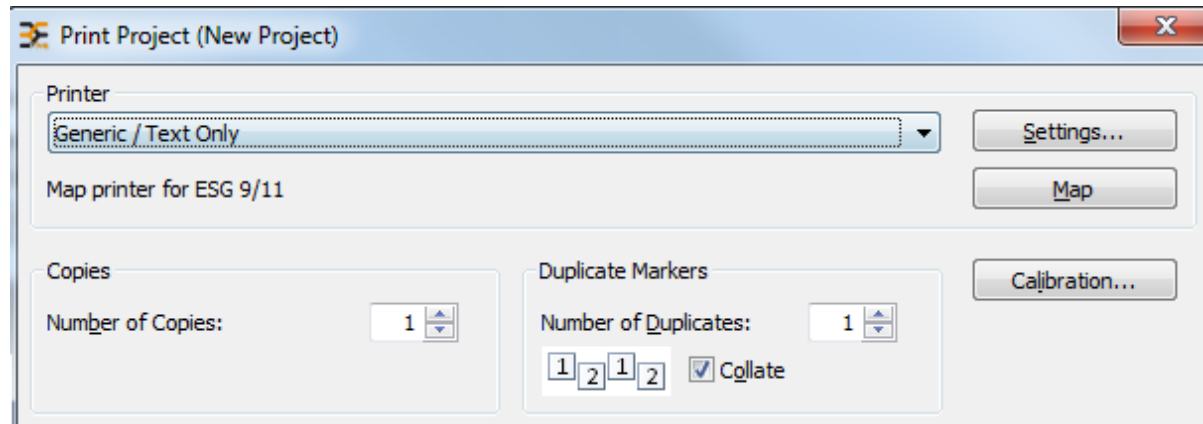




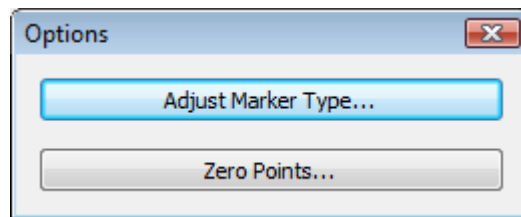

In the window that appears you can choose whether you want to adjust the marker type (see "Adjusting the marker type to the printer") or calibrate the zero points of the plotter.

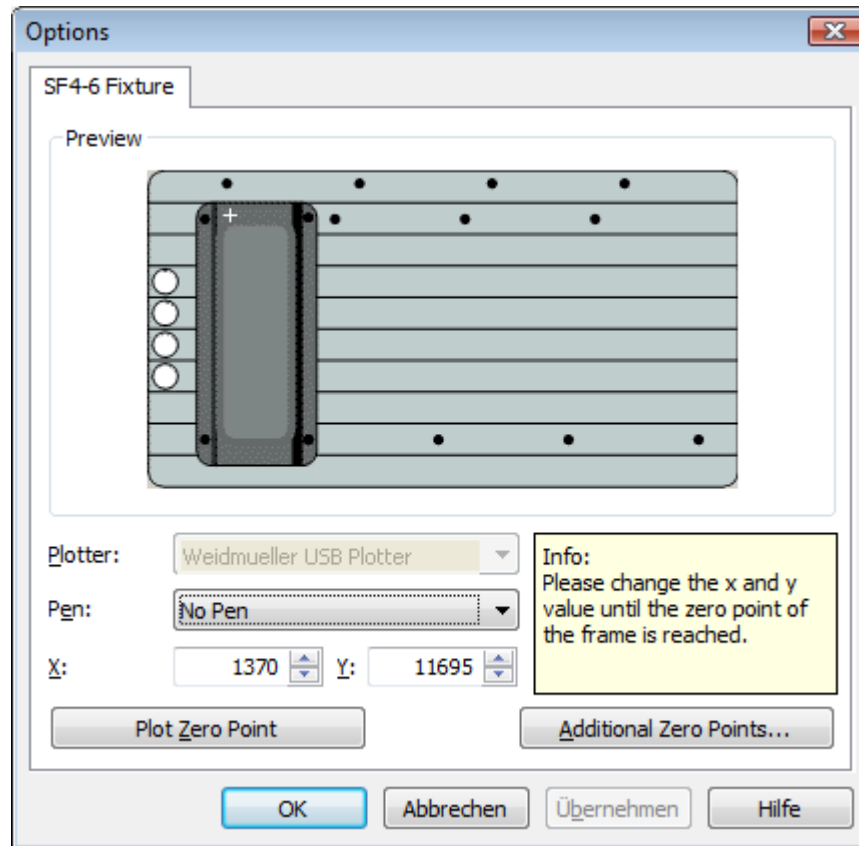

Setting the zero points

The following window appears.
(The appearance of the image depends on the marker type.)




- Select the pen you want to use for plotting (see "Selecting the pen and inlay").
- To calibrate the zero point, enter the coordinates in the X and/or Y fields and then click on "Print zero point".
- For a fine adjustment, click in the X and/or Y boxes and move the zero point using the  and  keys (for X coordinates) and/or the  and  keys (for Y coordinates).
- Click on "Additional zero points..." in order to adjust other existing zero points.

These settings can also be preset in the options dialog (see "Calibration dialog").

Adjusting mapped printers

Select **Tools > Options...**

You will find the current mapping of printers on the "General" page of the plotter.

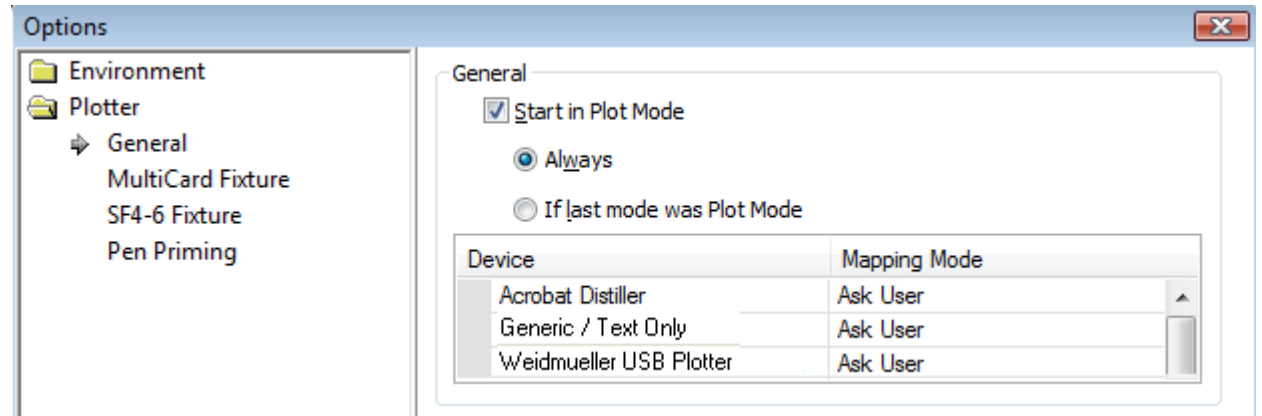


You can choose from three mapping modes:

1. As printer
The device is always assigned as a printer when "Map" is selected in the print dialog.
2. As plotter
The device is always assigned as a plotter when "Map" is selected in the printer dialog.
3. Ask user
The "Map printer" dialog appears whenever this device is assigned.

Symbol Explorer/Plotter Symbol Editor

Plotter symbols (*.mps) and a selection box for symbol subdirectories have been added to the Symbol Explorer.

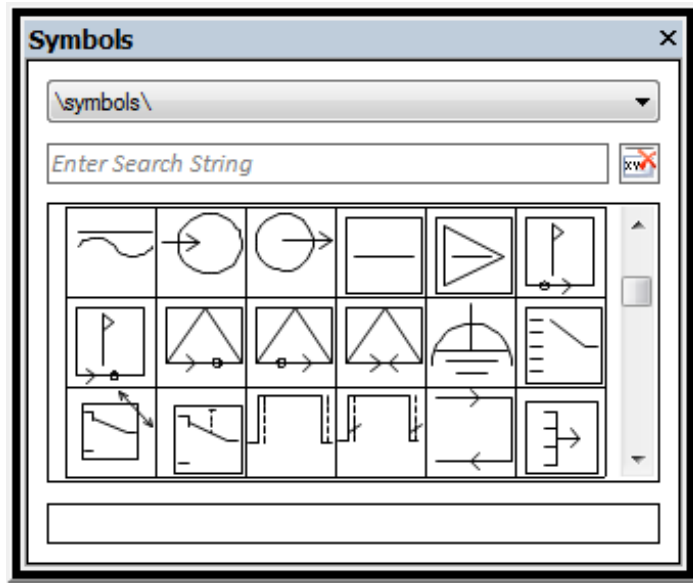

You can find more information about the Symbol Explorer in the chapter "General operation", section "Inserting symbols".

Editing/creating plotter symbols

Creating a new plotter symbol

- In the Symbol Explorer, right-click on an empty symbol field and then select **Plotter Symbol Editor...**

Editing a plotter symbol

- Right-click on a plotter symbol and then select **Edit with Plotter Symbol Editor...**

Calibration dialog

There are three different fixtures that can be used with the plotter, depending on the marker type selected.


The settings for these fixtures can be made in the calibration dialog (zero point, pen, etc.).

- Select **Tools > Options...**
The options dialog opens.

The calibration instructions can be found in the "printersetup.pdf" file included.


MultiCard fixture

- In the options dialog, select "MultiCard Fixture".

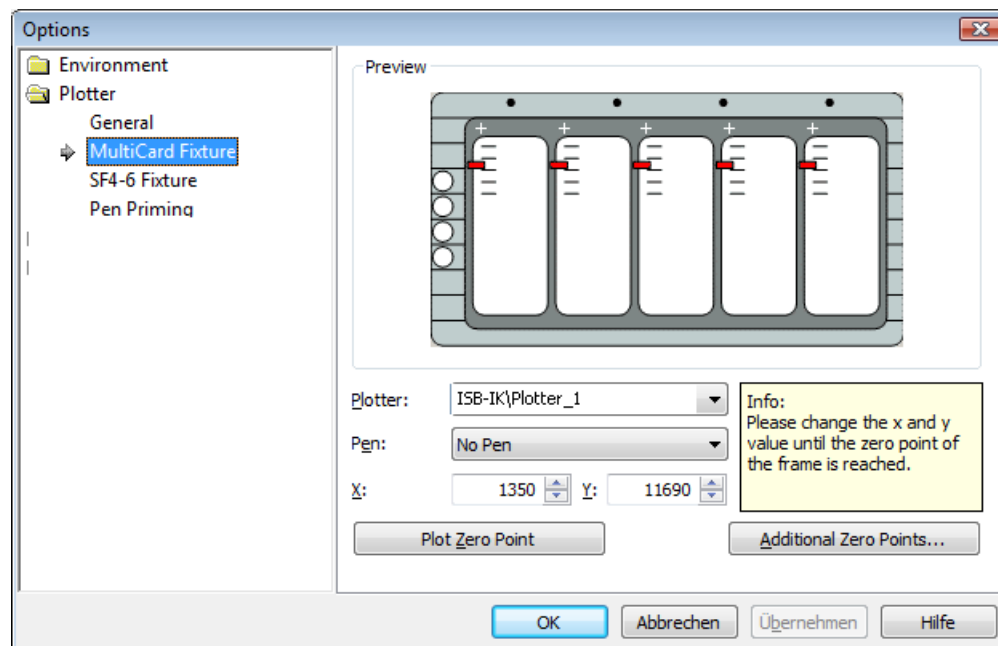


SF4-6 fixture

- In the options dialog, select "SF4-6 Fixture".

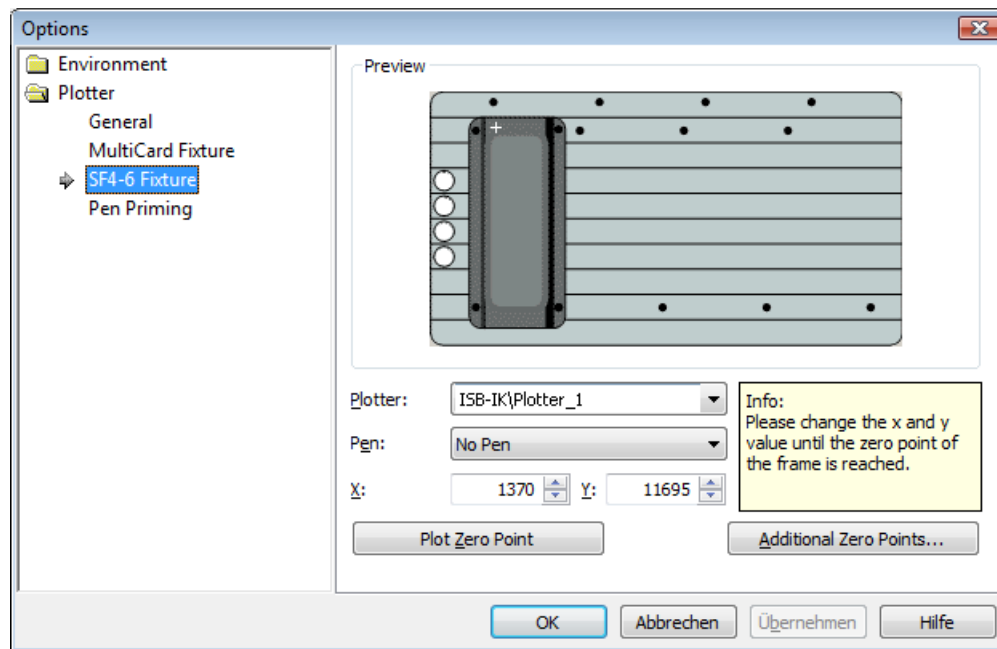

Network version

Introduction

 Installation should be carried out by a specialist. Administrator rights are required for this process.

The network version of M-Print® PRO is used when multiple users need to work with the software in a network. Instead of installing M-Print® PRO on each of their computers, here it is only necessary to install the software centrally (Setup.exe on a server or central PC). The client PCs (or users) access M-Print® PRO via shared network paths.

Example scenario:

Must have access
to central computer

Call up start.exe

No setup necessary

User PC 1

Must have access
to central computer

Call up start.exe

No setup necessary

User PC 2

Central computer
(server)

Network

Copy setup to central
computer (server)


Perform M-Print® PRO
setup


Select 'network'
option

Add
PrintJet ADVANCED

PrintJet ADVANCED

Printer must
be accessible

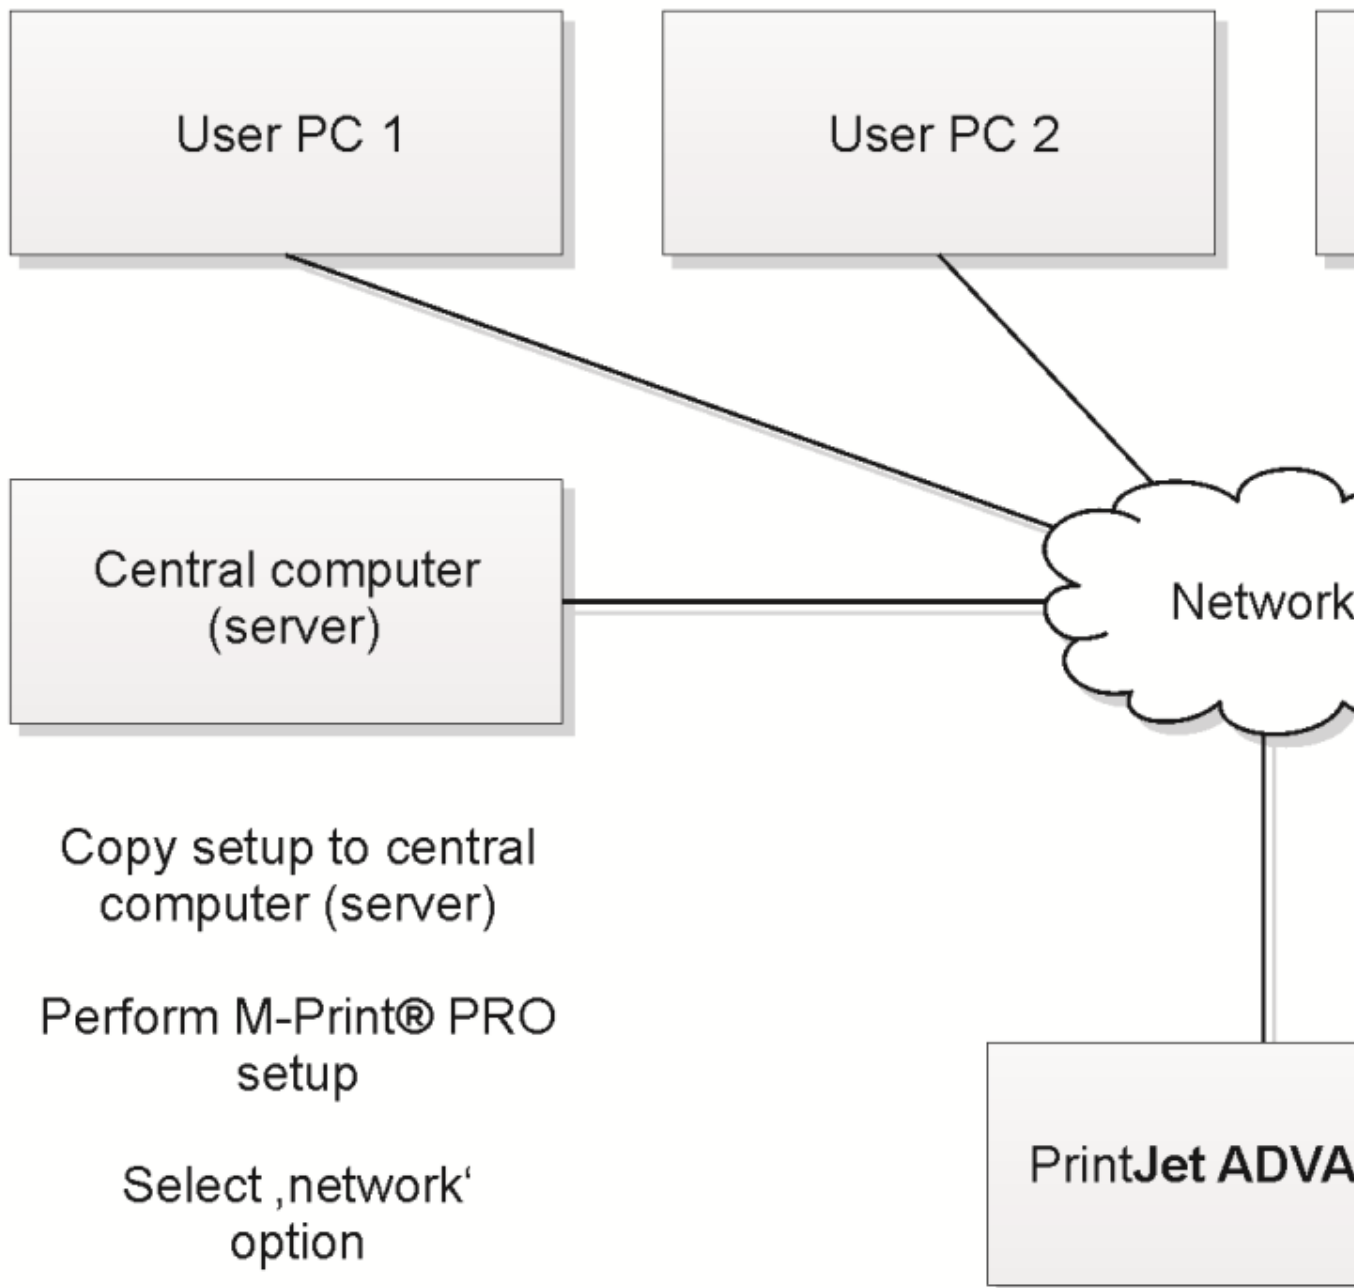


-  Printing is only possible via the network version when the printers to be used are connected to the network via a network cable (not via USB).

Setup

- Run the Setup program.
The installation process starts automatically and the setup wizard appears.




- Click the **Next** button.

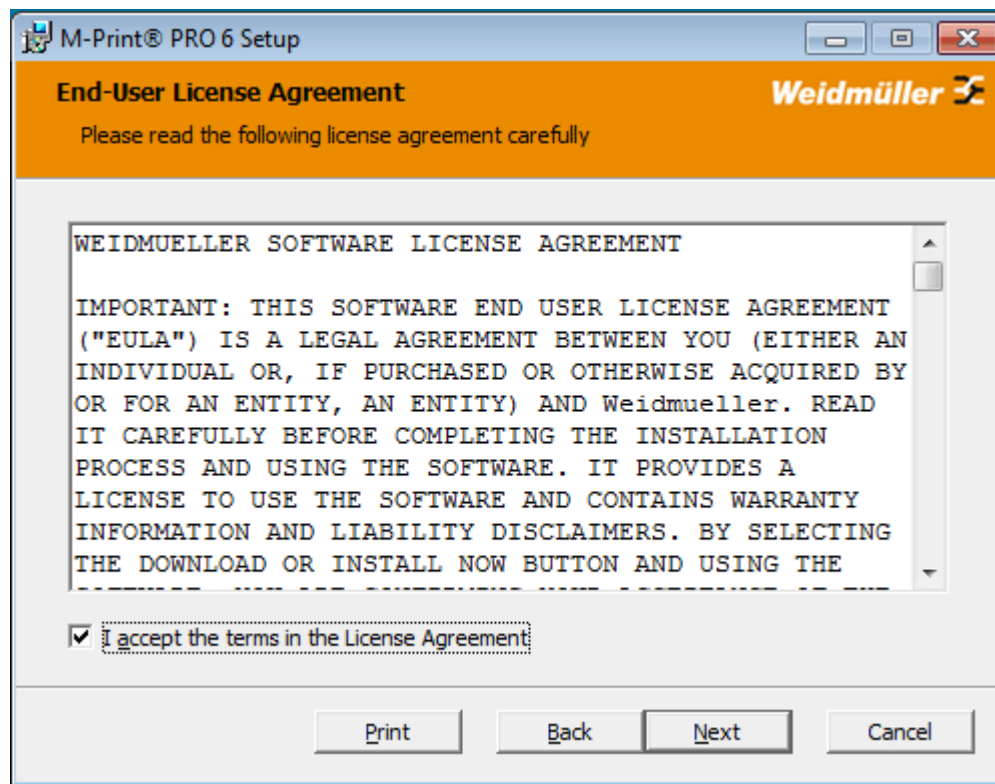


- Accept the terms in the license agreement and press the **Next** button.


- Choose the setup type in the next window:

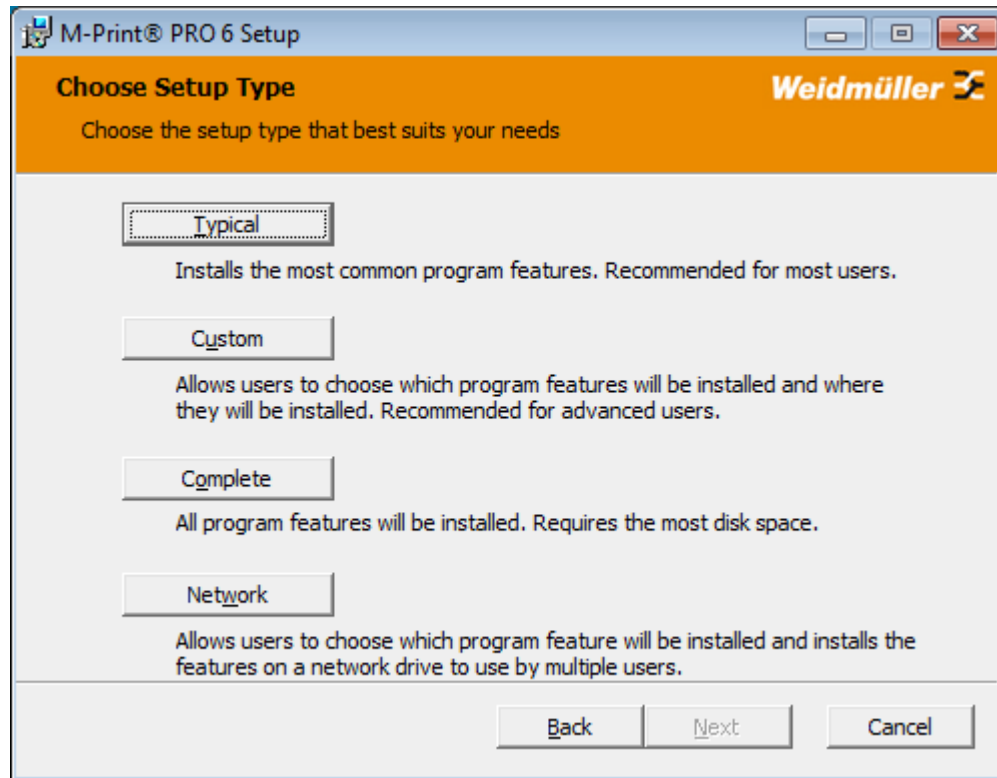


- Press the **Network** button.

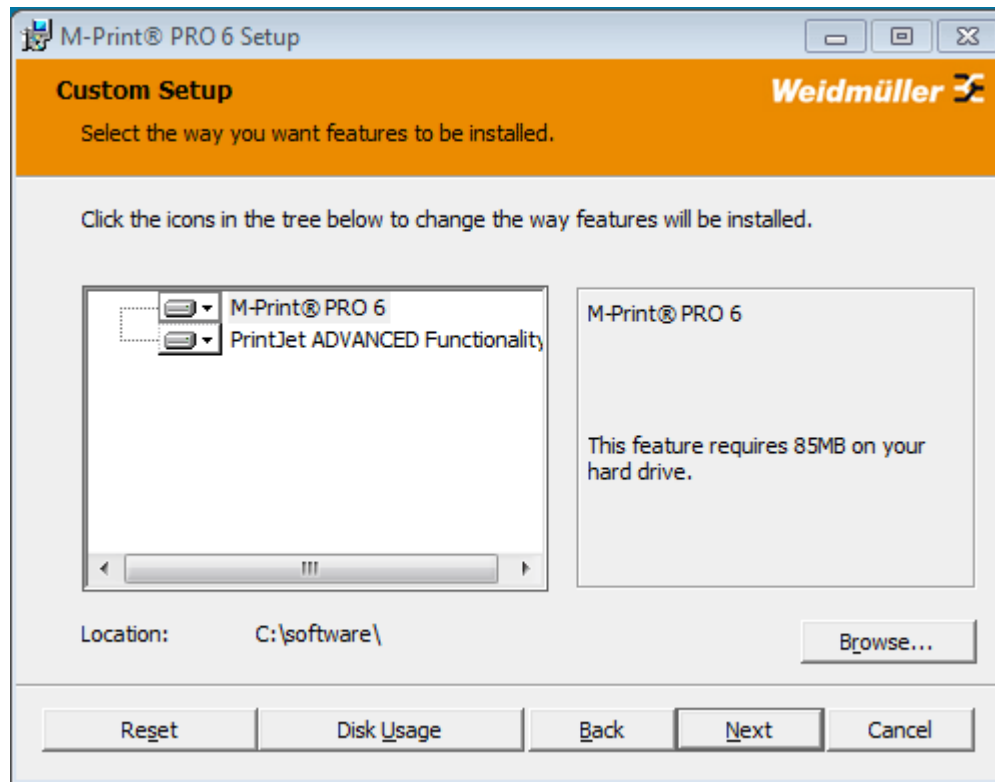

You can check how much storage space is free on the available drives with the **Disk Usage** button.

- Click the **Browse...** button.
- Select the target directory, for example C:\software\.
-  The users of the client computers must be able to access the target directory in both read and write mode.
- Click the **Next** button.

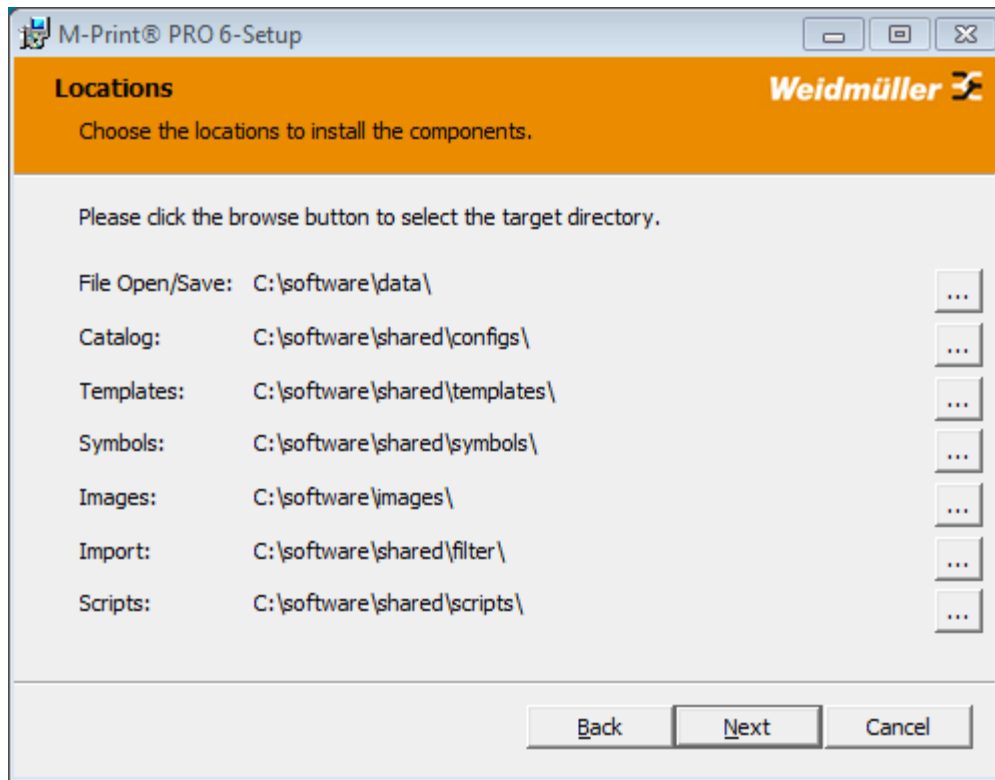


- For individual components such as the catalog you can use the [...] button to choose other directories (for example the catalog in C:\data\catalog).

i The target directories must be on a local drive of the server (network drives and UNC paths such as \\ServerName\ShareName\Path are not allowed).

All folders listed above must be accessible to users of the client computers over the network. Write rights are essential for some of the folders (see section "Sharing folders").

- Click the **Next** button.

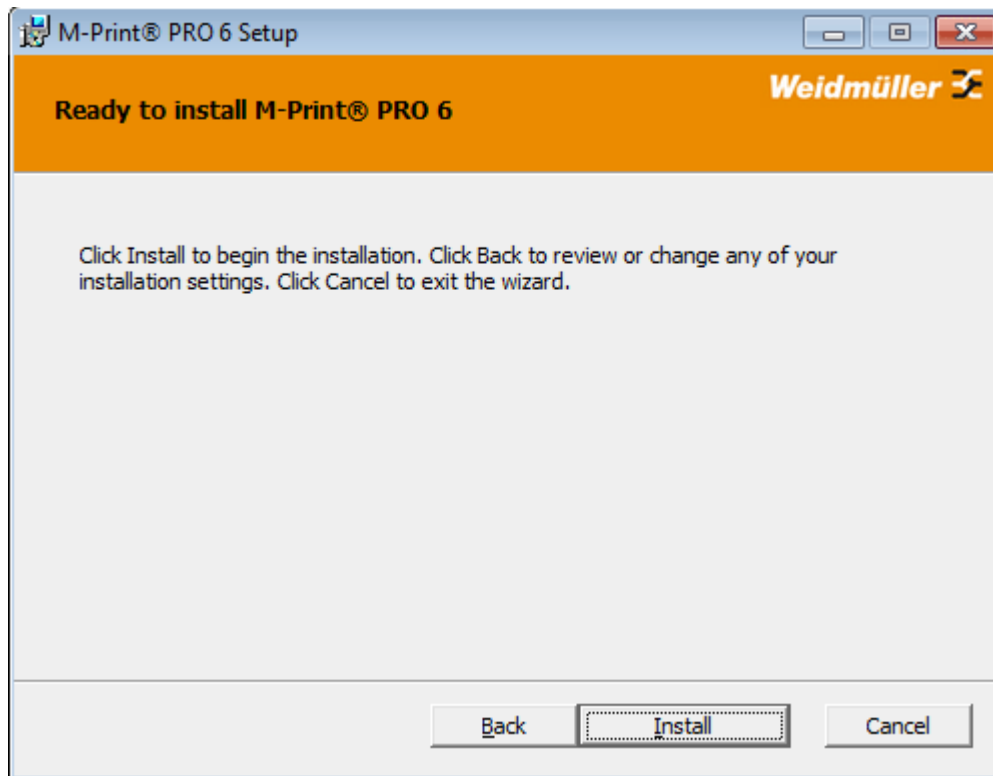


- Click the **Install** button.


Microsoft Windows® User Account Control (UAC) might appear.

- If so, confirm here that changes are allowed to be made to Windows.

After your confirmation, the target directories are created and the files are copied to or created in them.

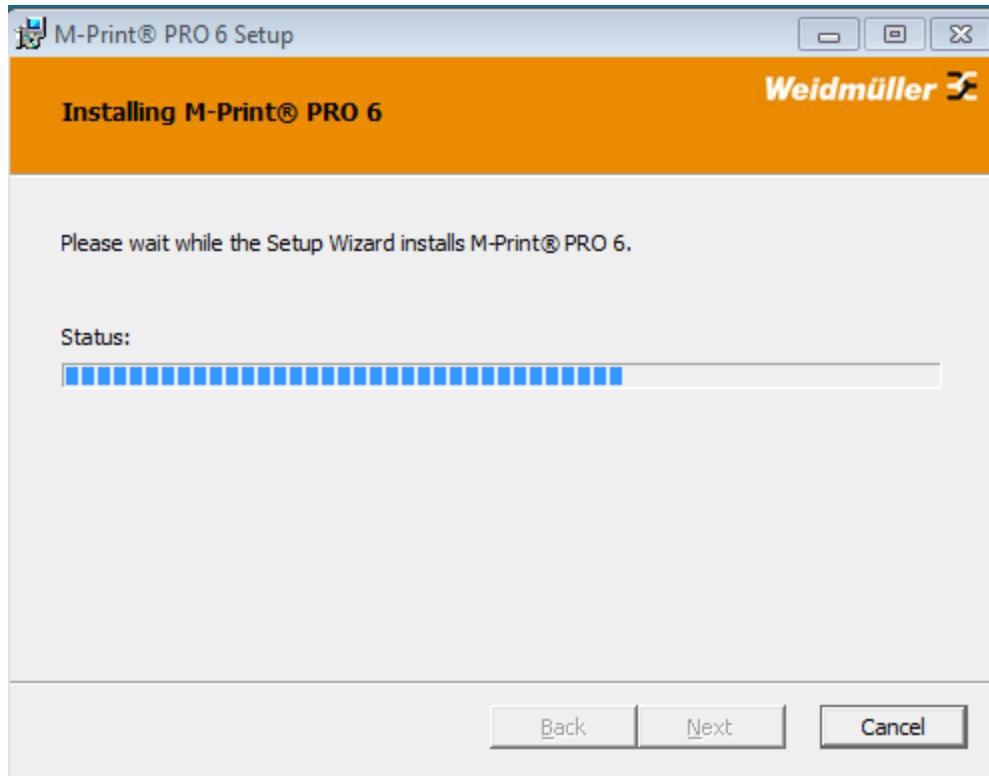


The progress is indicated by a bar.

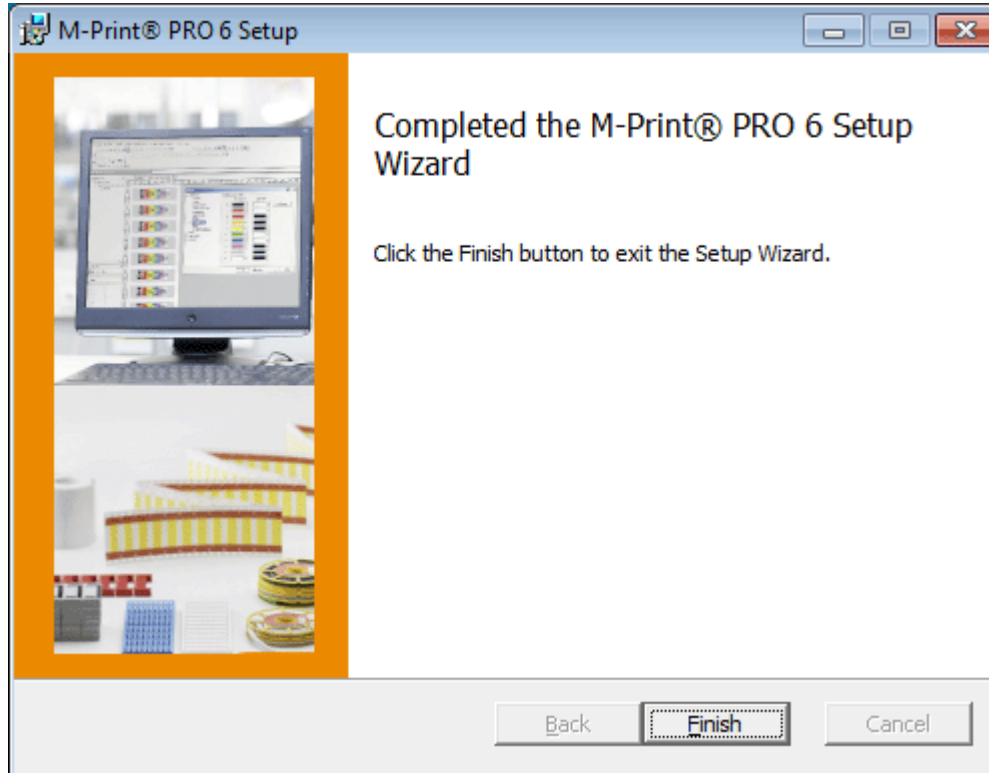

- When installation has been completed, press the **Finish** button.

Sharing folders

M-Print® PRO uses the following folders; the folder structure depends on what was specified in the setup process:

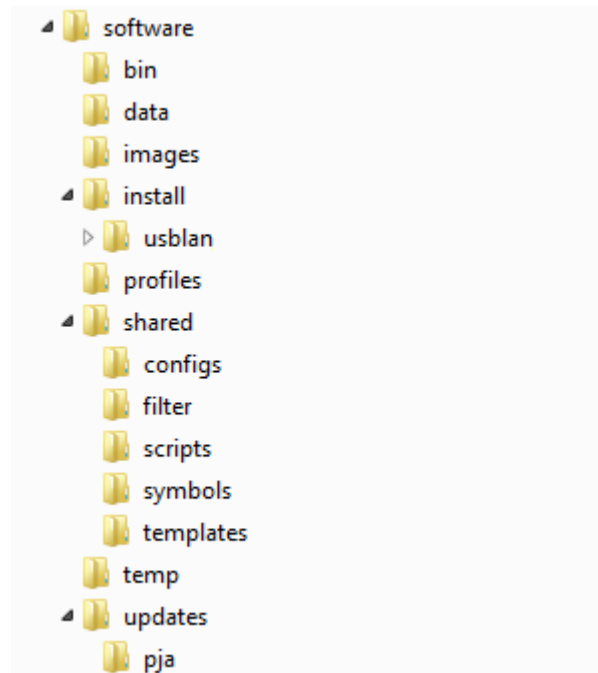

The meaning of the folders is as follows:

Folder	Content	Write rights required
bin	This folder contains executable files.	-
data	Standard directory in which users should store their M-Print® PRO files.	X
images	This folder contains M-Print® PRO images. This folder is accessed when users choose images in M-Print® PRO via Insert > Image.	
install	The printer control software is stored in this folder during installation.	
usblan	This folder contains the printer control software to support USB communication.	
profiles	This folder contains user profiles (for example user-specific settings defined via Tools > Options, printer mappings etc.). M-Print® PRO reads settings in this folder and writes them here.	X
shared	This folder and its subfolders contain the M-Print® PRO program files.	X
configs	This folder contains the product catalog.	X
filter	This folder contains filter files that are needed for the import function (File > Import).	X
scripts	This folder contains import scripts.	X
symbols	This folder contains program symbols (for example for protective grounding) that can be inserted in M-Print® PRO.	X
templates	Templates must be stored in this folder.	X
temp	M-Print® PRO stores temporary files in this folder.	X
updates	The update routine stores data in this folder.	X
pja	Printer updates can be stored in this folder.	X


Tasks to be done on the clients

Setting up client computers

No further setup is required on the clients.

By default users must launch the "start.exe" file from the 'bin' folder. The actual storage location of the "start.exe" file depends on what was specified during setup (directories). The dialog provides the necessary functions:

No Windows administrator rights are needed for these functions.

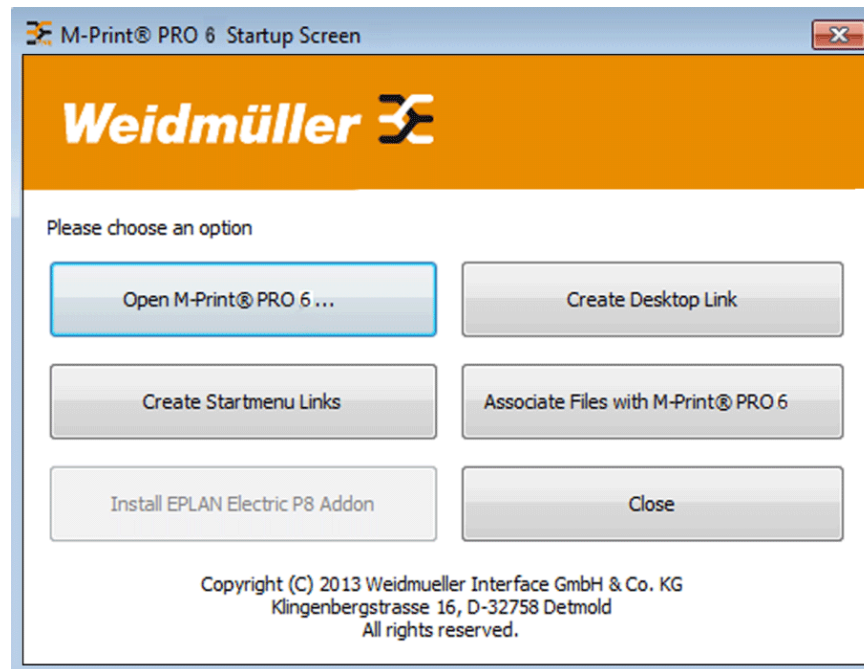

The window has the following buttons:

Open M-Print® PRO 6...

Clicking this button starts the M-Print® PRO program.

Create Desktop Link

By clicking this button you can create a link to M-Print® PRO on the desktop.

Create Start Menu Link

By clicking this button you can add M-Print® PRO to the Start menu.

Associate Files with M-Print® PRO 6

By clicking this button you can associate files with M-Print® PRO so that they are opened directly with M-Print® PRO when they are double-clicked.

Install EPLAN Electric P8 Addon

This function is not required for the PrintJet **ADVANCED**.

Close

You close the start screen with the [Close] button.


Transferring settings to clients

Current print settings for the network version can be provided to other users of the network version.

With the following function you can share these settings with the other client PCs automatically.

- Start the M-Print® PRO program.
- In M-Print® PRO choose Tools and then Options.

The following window appears:

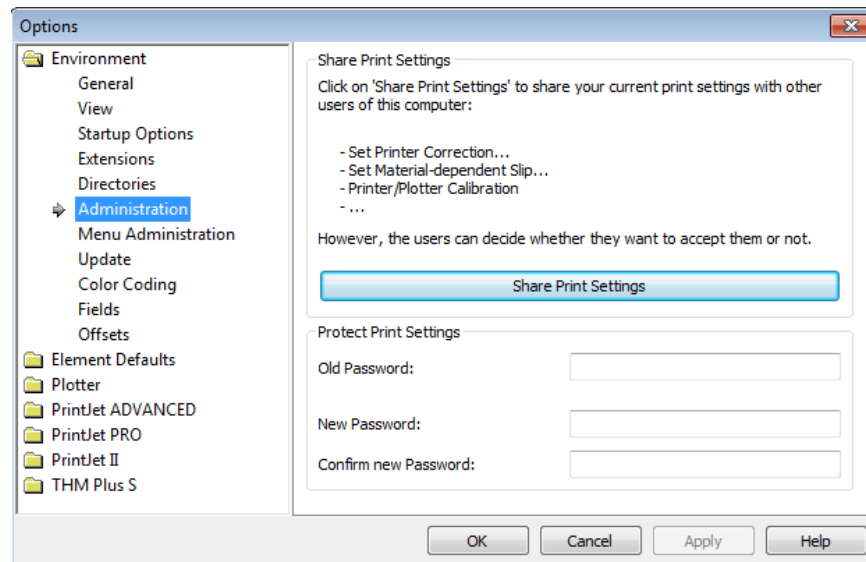

- Click the **Share Print Settings** button.

The next time the users start up their PCs they are notified of the settings that have been made and can decide whether they want to adopt them or not.

A

- Adding a free layer 27
- Adding a layer 27
- Adding a subproject 121
- Adjust fontsize in case of overflow 77
- Adjusting the marker type to the plotter 221
- Aligning
 - Text 23

B

- Background layer* 105
- Barcode 75
 - Changing the type 24
 - Inserting 8
- Batch import 182
- Behavior 97
- Block 33
- Block step 33
- Border 96

C

- Calibration 195
- Calibration dialog 225
 - MultiCard fixture 225
 - SF4-6 fixture 225
- Changing the project name 119
- Character string 32
- Closing 116
- Color coding 40, 77
- Command line call
 - Converter 164
 - exe 163
- Command line call 163
- Command prompt 163
- Connector 75
- Consecutive numbering 31
 - Window 31
- Content 101

D

- Data grid 66, 72
- Data source 41
- Decrement Value 38
- Delimiter 171
- Document protection 62
 - Disabling 63
 - Enabling 63
 - Removing 64
 - Settings 62
- Duplicating a sequence 34

E

- Element
 - Changing the order 21
 - Copying 17
 - Cutting 17
 - Deleting 18
 - Duplicating 18
 - Grouping 23
 - Locking 19
 - Moving 15
 - Name 94
 - Pasting 6, 17
 - Resizing 21
 - Rotating 16
 - Same height 22
 - Same width 22
 - Selecting 6
- Elements** 66
 - Selecting 103
- End value 33
- Endless strips 56
 - Connector 57
- Excel file
 - Importing 174
- Exiting the program 3

F

- FAQs 6
- Fast printing 205
- Field 99
- Field mappings 174, 176
- File
 - Closing 90, 116
 - Opening 5
 - Saving 114
- File import 167
- File types 5
- Fill 96
- Filter 43
- Filtering in fields 43
- Fine adjustment of heating 111, 154
- Fixed column width 173
- Formatting
 - Text 23
- Free layer* 105

G

- Grid 73
 - Snapping to 14

H

Header Line 72

Heating 111

I

Identical document field 99

Image

Inserting 8

Saving 22

Transferring 22

Import 167

Converter 183

Creating a script file 180

Manual 167

Saving 180

Selecting the import script 181

Starting 167

Import routine 180

Increment Value 38

Individual document field 99

Info page 110, 140

Inlay 216

Inserting

Barcode 8

Ellipse 7

Image 8

Line 7

Marker 104

New page 104

Rectangle 7

Rounded rectangle 7

Scale 11

Shape 7

Special characters 9

Symbols 10

Text 6

Inserting a line break 46

Installation note 2

L

Layer

Adding a free layer 27

Changing the color 26

Changing the name 25

Editing options 25

Hidden 26

Locking 28

Moving a free layer 28

Not printing 27

Removing a free layer 27

Layers 25, 105

Layout and format 2

Layout Manager 78

Locked 97

Locked layer 105

M

Managing projects 117

Marker 2, 66

Inserting 104

Skipping 34

Marker area 66

Marker layer 66, 105, 117

Marker type 2

Adding 120, 122

Captioning 114

Deleting 90

Inserting 89

Printing 115

Removing 123

Selecting 113

Menu

Edit 69

File 67

Format 77

Help 79

Paste 74

Shape 76

Tools 78

View 71

Window 79

Menu bar 65, 67

Menu Menu bar 67

Moving a free layer 28

Moving a layer 28

Multi-level terminal 48, 71

N

Network version 227

Clients 239

Setup 229

Sharing folders 237

O

Options

Administration 144

Administration menu 145

Basic settings 147

Cleaning 157, 159

Color coding 146

Current configuration 158

Default properties 148

Directory 143

Environment 138

Fields 147

File extensions 142

- General environment settings 138
- General plotter settings 150
- General PrintJet ADVANCED settings 153
- General PrintJet PRO settings 157, 159
- MultiCard fixture 151
- Pen priming 152
- Plotter 150
- PrintJet ADVANCED 153
- PrintJet ADVANCED administration 156
- PrintJet ADVANCED service tools 155
- PrintJet PRO 157, 159
- Program startup 142
- SF 4-6 fixture 151
- THM Plus S 159
- Update 146
- View 141
- Order Wizard 42
- Orders 42
- Other file types 161

P

- Page
 - Deleting 89
- Pen priming position 219
- PLC 32
- Plot mode 215
- Plotter
 - Creating a symbol 225
 - Editing a symbol 225
 - Startup options 215
- Plotter symbol 225
- Plotter Symbol Explorer 224
- Plotting 216
 - Changing the marker type 218
 - Mapping to a marker type 220
 - Offset 190
 - Pen priming position 219
 - Selecting the inlay 216
 - Selecting the pen 216
 - Setting the pen 221
 - Setting the zero points 221, 222
- Position 95
- Predefined text sequence 29
 - Defining 29
 - Inserting 30
- Prefix 33
- Print dialog
 - All marker types 190
 - Calibration 190
 - Heating 190
 - Map 190
 - Marker type 190
 - Marker type title 190
 - Number 190
 - Number of copies 190

- Offset 190
- Pages 190
- Printer 190
- Selected markers 190
- Show marker type change 190
- Single pages 190
- Type 190
- Variant name 190
- Print dialog
 - Settings 189
- Print quality
 - PrintJet ADVANCED 153
- Print quality 110
- Printable 98
- Printer
 - Mapping 223
- Printer correction 191
- Printer mapping 223
- Printer offset 191
- Printing 115, 189
 - Adjusting the margin 198
 - Adjusting the printer offset 196
 - Calibration 195
 - Fast printing 205
 - Mapping to a marker type 191
 - Offset 190
 - Print dialog 189
 - Printer correction 191
 - PrintJet ADVANCED Explorer 210
 - Setting a print medium 196
- PrintJet ADVANCED
 - Status Monitor 205
- PrintJet ADVANCED Status Monitor
 - Info 208
 - Print jobs 207
 - Settings 206
- Product
 - Adding 128
 - Finding 131
 - Removing 130
 - Renaming 132
- Product catalog 127
 - Opening 127
 - Resetting 132
 - Updating 134
- Product category
 - Creating 128
 - Removing 130
- Program
 - Exiting 3
 - Starting 3
 - User interface 4
- Project 72**
 - Closing 125
- Project Explorer 65, 88
- Project layer 66, 105, 117

- Project marker 66
- Project mode 138
- Project structure 117
- Properties
 - Behavior 97
 - Border and fill 96
 - Content 101
 - Field 99
 - General category 94
 - Marker 92
 - Saving as defaults 91
 - Size and position category 95
- Properties window
 - Adjusting 94
 - Editing options 94
 - Showing 93

Q

- QLS converter 183

R

- Read only 98
- Reference Points 51
- Removing a free layer 27
- Removing a layer 27
- Ruler 65

S

- Saving 114
 - Image 22
- Scale 49, 75
 - Inserting 11
 - Reference Points 51
- Scale properties 49
- Sequence
 - Inserting 34
- Setting the pen 222
- Setting the printer feed 191
- Setting the zero points 222
- Shape
 - Inserting 7
- Shortcut menu
 - Project Explorer 89
 - Workspace 104
- Single field 99
- Size 95
- Source file
 - Delimiter 171
 - Excel 174
 - Fixed column width 173
- Special characters
 - Inserting 9
- Start page

- Showing 72
- Start position of printing 190
- Start value 33
- Starting the program 3, 113
- Status bar 66, 72
- Step 33
- Step settings for MultiCard 216
- Subproject
 - Deleting 90
 - Inserting 89
 - Removing 124
- Suffix 33
- Symbol Explorer 224
- Symbols
 - Inserting 10
- Symmetry 20
- Synchronizing 41

T

- Tab order 98
- Tabs 65
- Templates 132
- Text
 - Aligning 23
 - Formatting 23
 - Inserting 6
- TNV converter 184
- Toolbar**
 - Docking Bars View* 72, 87
 - Element* 72
 - Elements 6, 85
 - Format Element 84
 - Format Text* 71, 82
 - Layout* 71, 81
 - Standard* 71, 80
- Toolbars 65, 80

U

- User interface 4, 65
 - Data grid 108
 - Drawing area 104
 - Menu bar 67
 - Project Explorer 88
 - Properties window 91
 - Toolbars 80
 - Workspace 104

V

- Variant name 132, 190
- Version number 66

W

Window

Character Map 72

Data grid 108

Layer Properties 107

Layers 72, 106

Menu bar 67

Project Explorer 88

Properties 66, 72, 91

Symbols 72

Toolbars 80

Workspace 104

Workspace 66, 104

Z

Zoom 72